

SP
STAGE PRO®



CUBIX

USER GUIDE

Caution: Read this before operating your unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place - away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. For proper ventilation, allow the following minimum clearances around this unit.
Top: 10 cm (4 inch)
Rear: 10 cm (4 inch)
Sides: 10 cm (4 inch)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
Other components, as they may cause damage and/or discoloration on the surface of this unit.
Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. We will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cable and outdoor antennas disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact Qualified service personnel when any service is needed. The cabinet should never be opened for any reasons .
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Before moving this unit, disconnect the AC power plug from the wall outlet.
- 17 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 18 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 19 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 20 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. When you dispose of batteries, follow your regional regulations.
- 21 Excessive sound pressure from earphones and headphones can cause hearing loss.



1. MODE:Short press to select between BT/ AUX-IN/FM/FLASH DRIVE/ MEMORY CARD (The Flash Drive/Memory Card mode will not be displayed and will automatically enter the corresponding mode when you insert them into the speaker.

FM MODE

- 1.Insert AUX cable as external FM antenna.
- 2.Press MODE button to select FM function,these two sides led light will turn off automatically to avoid affect FM signal.
- 3.Press the Play button to start Auto search,tuner will search for available stations depends upon the reception in your area.Use **◀◀** or **▶▶** to select the FM frequency and it will start playing the frequency upon selection.



2. PREVIOUS: Under FLASH DRIVE/ MEMORY CARD, press to move to previous song.



3. REC:Insert FLASH DRIVE/MEMORY CARD and press REC button to record/playback record/exit playback record, Hold REC button to delete record file.



4. POWER: Press and hold for 2 to 4 seconds to start the speaker.



5. PLAY/ PAUSE: Under BT/FLASH DRIVE/ MEMORY CARD mode, short press to play/ pause the music.

Under BT mode, long press to open TWS pairing. Long press again to disconnect TWS function.



6. NEXT: Under FLASH DRIVE/ MEMORY CARD, press to move to next song.



7. EQ: Short press to select between Treble/ Bass/Volume.

t: Treble volume
b: Bass volume
U: Master volume

When you Insert Microphone,press to select between Mic Echo/Mic Delay/Mic Volume.Long press to open Mic Priority.Long press to close Mic Priority.

The knob will show:

t: Treble volume
b: Bass volume
n: Mic volume
E: Mic Echo
d: Mic delay
U: Master volume


Upon making the selection Rotate volume knob to increase/decrease the settings to your desired levels.



8.LIGHTING:Press to change 7 different lighting effects and turn off lighting mode.



9. LED DISPLAY:Blue circle on the knob is battery level display.

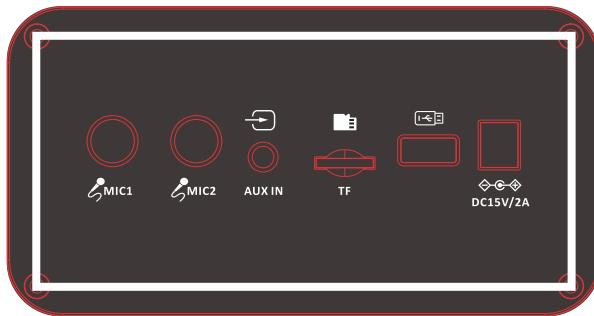

1. **MIC:** Insert a 6.5mm microphone into the jack to sing along while listening to music.
2. **AUX:** Connect to external device through AUX-IN cable.
3. **TF:** Insert memory card to playback your stored music.
4. **USB:** Insert drive into the slot on the back panel to playback music stored in your device.
5. **DC INPUT:** Plug in 15V 2A adapter to charge the speaker.

FEATURES

- Power supply: 110V-120V~60Hz
- 40W R.M.S.
- Woofer 6" + Tweeter 1"
- Wireless Connection
- TWS Connection
- Flash Drive Port
- Memory Card Port
- FM Radio
- Lighting Effects
- Rechargeable Battery
- Speaker size (each): 11.2 x 11.2 x 12.5 in
- Speaker weight (each): 14.3 lb

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ITEM:
Party Speaker
Brand: SP Stage Pro
Model: Cubix

IMPORTER:
ALIEN PRO AUDIO, INC
ADD: 25420 Kuykendahl Rd,
Ste B200, Tomball, Texas 77375

Toll Free: 888.550.6629
Fax: 346-646-5289
MADE IN CHINA