


Caution: Read this before operating your unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place - away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. For proper ventilation, allow the following minimum clearances around this unit.
Top: 10 cm (4 inch)
Rear: 10 cm (4 inch)
Sides: 10 cm (4 inch)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
Other components, as they may cause damage and/or discoloration on the surface of this unit.
Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used.
Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. We will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cable and outdoor antennas disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact Qualified service personnel when any service is needed. The cabinet should never be opened for any reasons .
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the TROUBLESHOOTING section on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 19 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 20 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. When you dispose of batteries, follow your regional regulations.
- 22 Excessive sound pressure from earphones and headphones can cause hearing loss.


PANEL

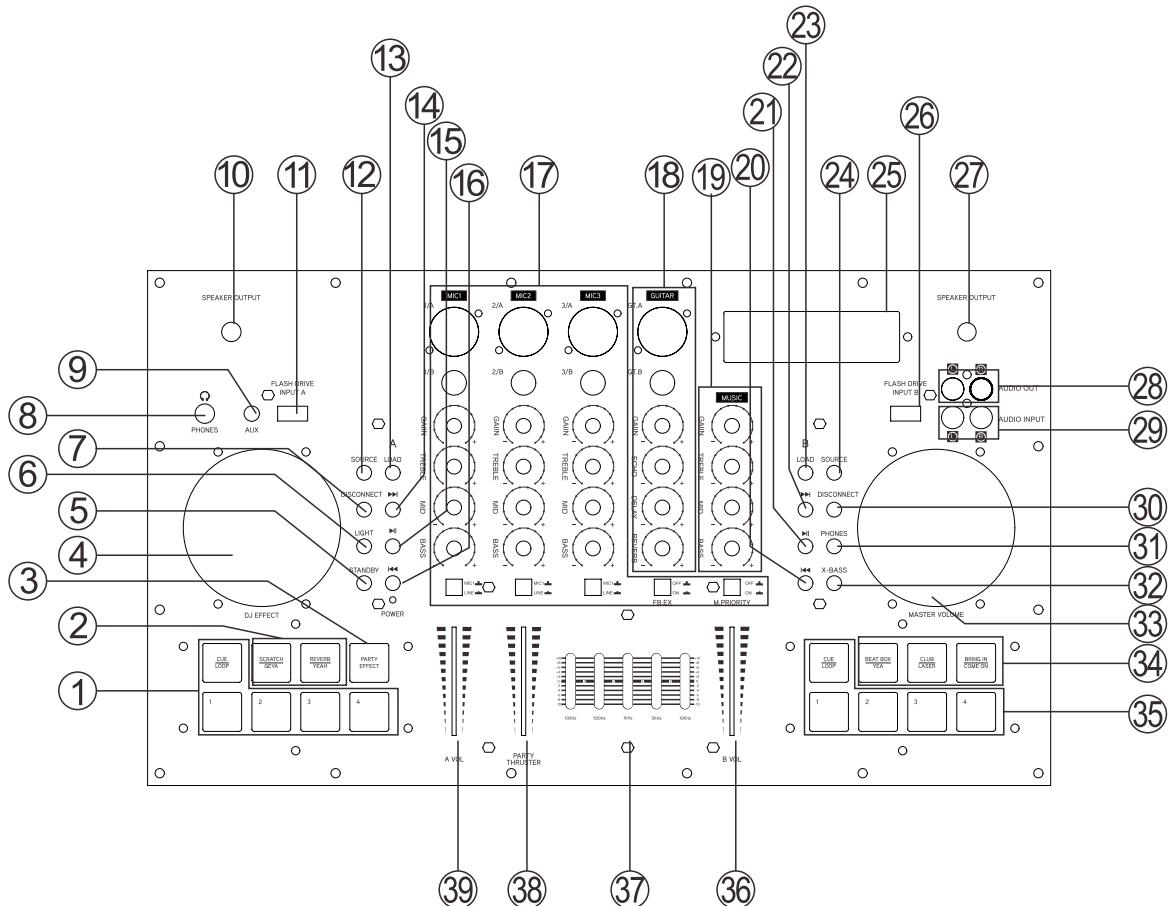

PANEL

17. **MIC CONNECTION AND CONTROL SECTION**
18. **GUITAR CONNECTION AND CONTROL SECTION**
19. **MUSIC CONTROL SECTION:** gain,treble,mid,bass
20. **◀◀** : Switch to the previous music in input B.
21. **▶⏸** : Play/Pause the music in input B.
22. **▶▶** : Switch to the next music in input B.
23. **LOAD:** Navigate to the songs in USB B quickly.
24. **SOURCE:** Source selection for input B.
25. **LED DISPLAY**
26. **FLASH DRIVE INPUT B**
27. **SPEAKER OUTPUT:** Connect to one of the configured speakers.
28. **AUX AUDIO OUTPUT**
29. **AUX AUDIO INPUT**
30. **DISCONNECT**
31. **PHONES:** Switch the mode of the earphones output mode-INPUT A,INPUT B,INPUT AB.
32. **X-BASS:** Bass boost ON/OFF
33. **MASTER VOLUME**
34. **DJ EFFECT:** BEAT BOX/YEA/CLUB/LASER/BRING IN/COME ON
35. **CUE/LOOP CONTROL SECTION for input B.**
36. **B VOL:** Volume adjustment for input B.
37. **EQ:** Increase or decrease the corresponding frequency band.
38. **PARTY THRUSTER**
39. **A VOL:** Volume adjustment for input A.

REAR PANEL


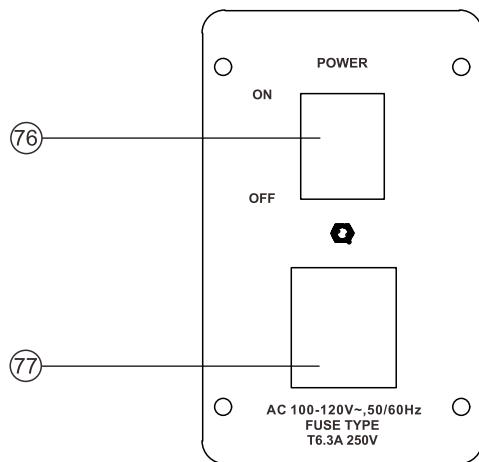


76. **POWER Switch:** Press this switch to turn the unit ON or OFF.
77. **AC INPUT:** AC 100-120V~, 50/60Hz. (If the fuse is blown you can exchange it with A new FUSE type T6.3A 250V 5x20mm)

CONNECTION DIAGRAM:

Note:

- Always unplug the unit from power when making connections.
- Check all connections are firmly secured.
- Confirm both speakers are connected to their correct designated position.

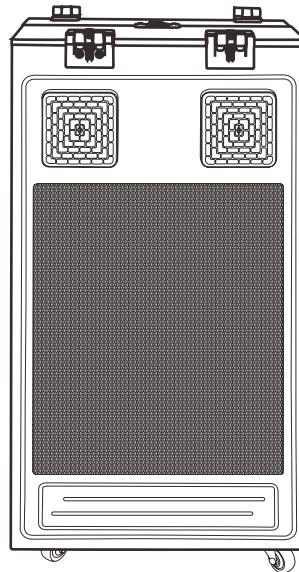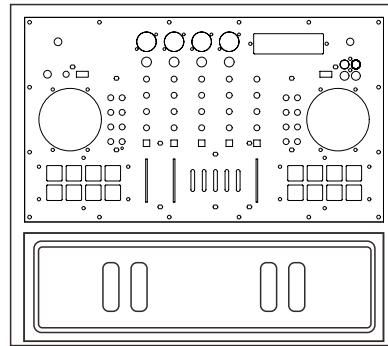

OPERATING

CUE button

(Press the CUE/LOOP button, the button color turns to blue, which means the function is activated.)

Press the number button 1, 2, 3 or 4 to set or play from the certain points.

- During USB playback, press the number button to set the certain points 1, 2, 3 or 4 (the button color changes from white to blue).
- During USB playback, press the number button 1, 2, 3 or 4 to return the track time to the certain point and play from it.
- During USB playback, long press the number button 1, 2, 3 or 4 to cancel the certain point (the button color changes from blue to white), and the music will continue to play normally.

LOOP button

(Press the CUE/LOOP button, the button color turns to red, which means the function is activated.)

Press the number button 1, 2, 3 or 4 to set the rhythm cycle mode.

- During USB playback, press the number button 1, 2, 3 or 4, and the track time will correspond to a cycle of 1, 3, 5, and 10 seconds for playback.
- During USB playback, long press the number button 1, 2, 3, or 4 to cancel the selection and continue normal music playback.

1. DJ EFFECT

- Press the SCRATCH/GEYA/REVERB/YEAH button on the front panel, then turn the DJ EFFECT big knob to get the corresponding DJ effects.
- Press the BEAT BOX/YEA/CLUB/LASER/BRING IN/COME ON button on the front panel, then turn the MASTER VOLUME big knob to get the corresponding DJ effects.

2. PARTY EFFECT

Press “PARTY EFFECT” button on the front panel to select the party effect from THRUSTER, ALARM, VECTOR, FIREWORK and RAINNING.

Push the PARTY THRUSTER rod to get the corresponding PARTY EFFECT, when the rod arrives at the max position you will achieve the corresponding special party thruster effect

When pull the rod back to OFF, PARTY EFFECT will turn off.

The complete process is OFF--->PARTY EFFECT---> PARTYM

OPERATING

LIGHT COLOR CONTROL FUNCTION

To control the light modes, press the LIGHT button on the top panel:

- R = red lights flash
- G = green lights flash
- B = blue lights flash
- RG = red and green lights flash
- RB = red and blue lights flash
- GB = green and blue lights flash
- RGB = red, green, and blue lights flash
- Auto = the various color combinations cycle through and flash.

KARAOKE FUNCTION

1. The machine can auto detect whether a MICROPHONE 1,2,3 is connected.
Press MIC/LINE button to choose microphone jack.
2. Adjust the GAIN knob on the panel to change the microphone GAIN.
3. Adjust the TREBLE knob on the panel to change the microphone TREBLE.
4. Adjust the MID knob on the panel to change the microphone MEDIANT.
5. Adjust the BASS knob on the panel to change the microphone BASS.
6. Press the FB.EX button to open the Feedback extender when the microphone volume is high to prevent the speaker from transmitting to the microphone causing a howling effect.
7. Press the M.PRIORITY button can turn on the microphone priority function. When speaking with the microphone, the music will automatically turn off and resume after speaking.

Note: Do not touch the top of the microphone when singing in order to avoid howling effect.
Adjust the microphone volume gradually to avoid howling effect.

GUITAR FUNCTION

1. The machine can auto detect whether a GUITAR is connected.
2. Adjust the GAIN knob on the panel to change the guitar GAIN.
3. Adjust the ECHO knob on the panel to change the MIC ECHO.
4. Adjust the DELAY knob on the panel to change the MIC DELAY.
5. Adjust the REVERB knob on the panel to change the MIC REVERB.

OPERATING

BLUETOOTH PAIR AND CONNECTION

This system has two BT inputs.

- Turn on the BT features on your phone or music player.
- Turn this system on, and switch to the BT mode(BT A/BT B) by pressing the Source button of the input A or input B as needed. The flashing BT indicator on the LED display means it is in pairing mode.
- Set your phone or music player to search for BT devices.
- Select DJ Pro A / DJ Pro B from search results on your phone or music player.
- Select OK or YES to pair this system with your phone or music player.
- If protected, enter 0000 for password. Steady blue light indicates successful connection.

FUNCTION OF USB READER

This system has two USB jacks.

Press the source button of input A/input B to select the corresponding USB A/USB B mode. Then you can insert a USB to play music.

When two USB'S are inserted, the music will be played at the same time.

IMPORTANT: The USB port is intended for music transfer only, other devices cannot be used with this USB connection. The use of USB extension cable is not recommended.

EARPHONE JACK

For private listening, insert a 3.5mm earphone into the EARPHONE JACK.


Press the PHONES button on the front panel to select the listening channel between INPUT A, INPUT B, or INPUT AB.

EARPHONE VOLUME ADJUSTMENT: When you select a channel, the display will show the channel name, rotating the MASTER VOLUME knob to adjust the volume of the channel.

CAUTION: Listening at high volume could damage hearing.

OPERATING

STORAGE

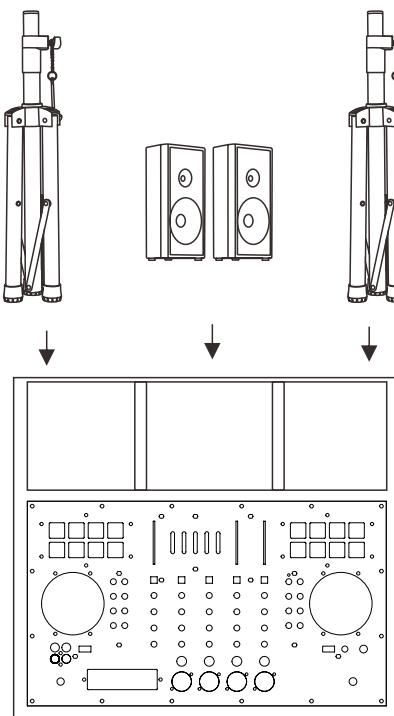

ACCESSORIES

Instruction Manual-----	1 pc
Speaker-----	2 pcs
Tripod-----	2 pcs
Speaker Cables -----	2pcs

SPECIFICATION

Power Source -----	AC 100-120V~,50/60Hz
Power Consumption -----	650W

- The specification presents only as a reference. The value of weight and size are approximate.
- Our product is Improved ceaselessly and the specification and function may be changed without prior notice.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.