

**Warning:**



1. It is recommended to use lubricating fluid for the first time when using it.
2. Make sure to turn off the power of the dildo and the remote control after use, so as not to affect the use of the battery.
3. Wash with clean water or neutral detergent after use, and dry in a ventilated place after washing.
4. The product is waterproof for life, so it is not recommended to use it directly in water.
5. The heating time is about 4-5 minutes, please use it with caution for people who are sensitive to heat.



## USER MANUAL

Thank you for choosing our products. Please read the specifications carefully before using this product.

Please recharge the toy before use!

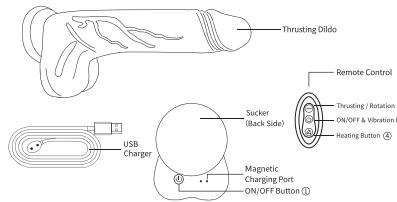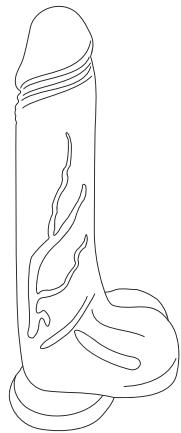

**Operating Instructions (Choose the combination of modes you want):**  
Note: Before using the remote control, please start the thrusting dildo through the button at the bottom of the thrusting dildo①.

**1. Remote Control Mode**

**1.1 Turn on the dildo with remote control**

Open the battery compartment to remove the protective film on the battery, and insert the battery according to the +pole. Short press the ON/OFF button of the remote control①, and the remote standby mode will be activated after the light prompt which means the dildo can be controlled with a remote control.

**1.2 Turn off the dildo with remote control**

When in standby or use mode, long press the ON/OFF button② of the remote control to turn off the dildo.

When the dildo has a vibration prompt and the light goes out, it means the power of the dildo is off.

**1.3 Select Thrusting & Rotation Function**

Short press thrusting /vibration button② to cycle through the thrusting and vibration mode. 5 thrusting and rotation modes can be selected.

**1.4 Select Vibration Function**

Short press the ON/OFF③ button to start the remote control mode, you can select the vibration mode by short pressing the button again, 10 vibration modes can be selected.

**1.5 Select Heating Function**

Short press the heating button④ to start the heating function.

**2. Manual Mode**

**Step1** Press the power button on the button of the dildo to start the dildo.

**Step2** After starting, short press the button on the button of the dildo to cycle to adjust the required mode.

**Step3** Press and hold for the power button three seconds to turn off the dildo.

**3. Charging method**

Connect the charging cable to the USB charging head (you can use the mobile phone charging head or bring your own), suck the magnetic charging head to the magnetic charging port on the back of the penis testicle. The red light flashes to indicate charging.

**Specifications:**

1. Rated voltage 3.7V, rated current 8A
2. Material: Liquid silicone
3. Waterproof: life waterproof
4. Charging time: about 2 hours to full, can be used continuously for about 45-60 minutes
5. Remote control battery: 12V 27A

**Package Content:**

- Vibrator\*1
- Charging cable\*1
- Remote control\*1
- Manual\*1

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction