



Getting to Know Your Remote Control

1. Watch Gravity Sensor Remote Control (Watch Needs to be Purchased Separately)

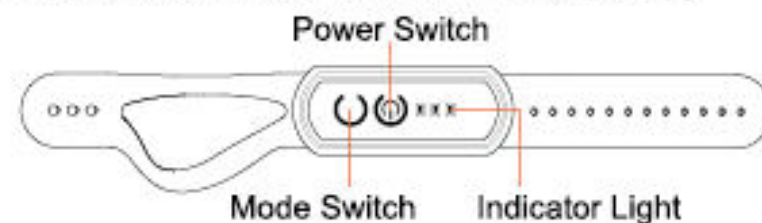

Upon power-on and pairing, Light 1 is constantly on, entering Mode 1;
Short press "Mode Switch", Light 2 is constantly on, entering Mode 2;
long press to turn lights and music on/off;
Short press "Mode Switch", Light 3 is constantly on, entering Mode 3;
long press to turn lights and music on/off.

2. Remote Control

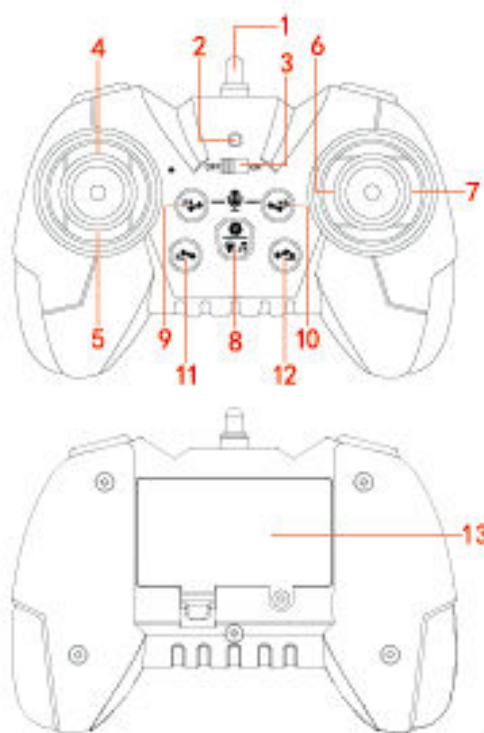

1. Antenna
2. Indicator Light
3. Power Switch
4. Forward
5. Backward
6. Left Rotation
7. Right Rotation
8. Lights, Music, One-Button Demo
9. Front Wheel Forward Swing
10. Rear Wheel Backward Swing
11. Front Wheel Backward Swing
12. Rear Wheel Forward Swing
13. Battery Compartment

1

Using the Remote Control to Operate


1. Watch Gravity Sensor Remote Control (Watch Needs to be Purchased Separately)

Mode 1: Upon power-on and pairing, Light 1 is constantly on, entering Mode 1

① Forward, Backward



② Left Rotation, Right Rotation

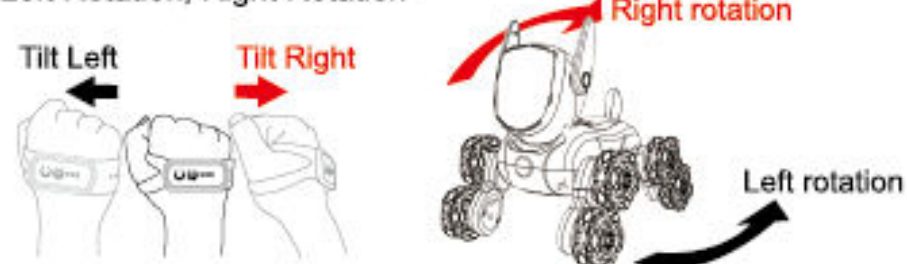


Mode 2: Short press "Mode Switch", Light 2 is constantly on, entering Mode 2; Long press to turn lights and music on/off.

① Front Wheel Forward Swing, Front Wheel Backward Swing



2

② Left Rotation, Right Rotation

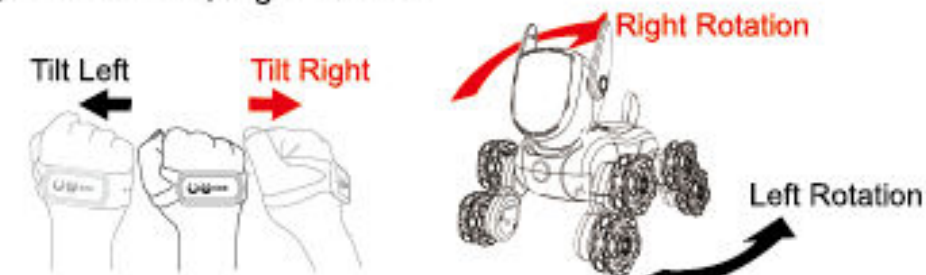


Mode 3: Short press "Mode Switch", Light 3 is constantly on, entering Mode 3;
Long press to turn lights and music on/off.

① Rear Wheel Forward Swing, Rear Wheel Backward Swing



② Left Rotation, Right Rotation

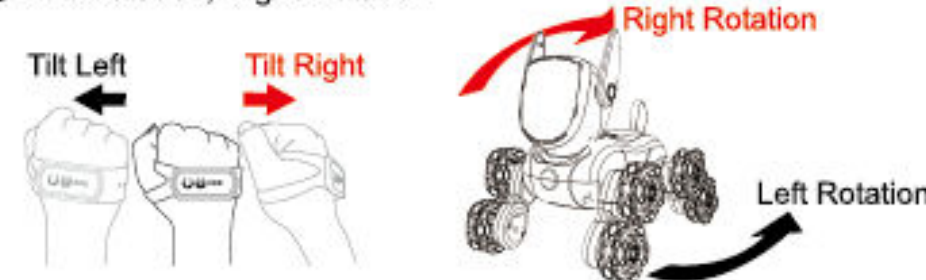

Modes 2 & 3: Long press "Mode Switch" to turn lights and music on/off.

Modes 1, 2, & 3: Short press "Power" to start the dog's auto demo.
Press any button or move the joystick to stop the action.

3

2. Handle Remote Control

① Forward, Backward



② Left Rotation, Right Rotation




③ Lights, Music, One-Button Demo

Press the lights, music, one-button demo button, and the dog will start an automatic demonstration of forward, backward, left rotation, right rotation, front leg forward, and 360° rotation. Press and hold the button again to turn off the lights and music.
*During the automatic demonstration, push the left and right joysticks in any direction to stop the action.



④ Front Wheel Forward Swing

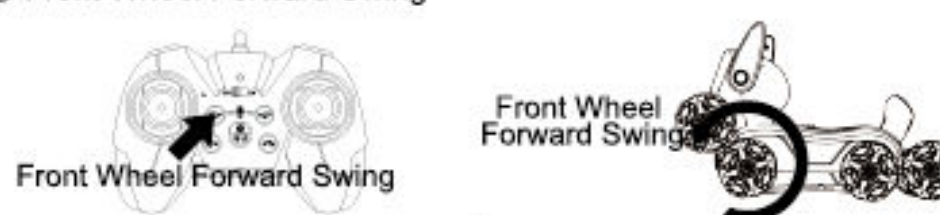

4

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.