



Instructions for Transforming Robot RC car

1. Function introduction of remote control

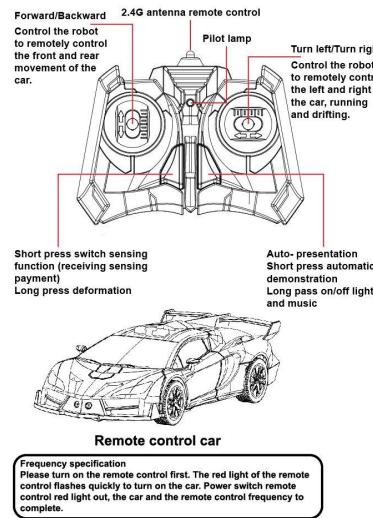


2. Remote control/remote control car battery installation instructions

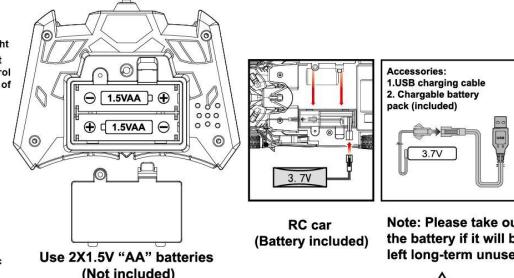

USB CHARGING INSTRUCTIONS

1. The battery must be fully charged for the first time to ensure sufficient power. If the battery is not used for a long time, it will get over-discharged. Overcharging could also shorten the battery's life.
2. Users should check the wires, plugs, housings and related components regularly. If they are damaged, please contact the seller for replacement.
3. Use the correct adapter for charging: input 100-240V 50/60Hz 0.2A
Output: 5.0V---500MA 0.5-1.5A. Do not use quick charger.
4. Charging instructions: Connect the battery to the intelligent USB charging cable. Intelligent USB charging cable can be connected to power source with USB socket to charge the battery.

3. Remote control operation instruction

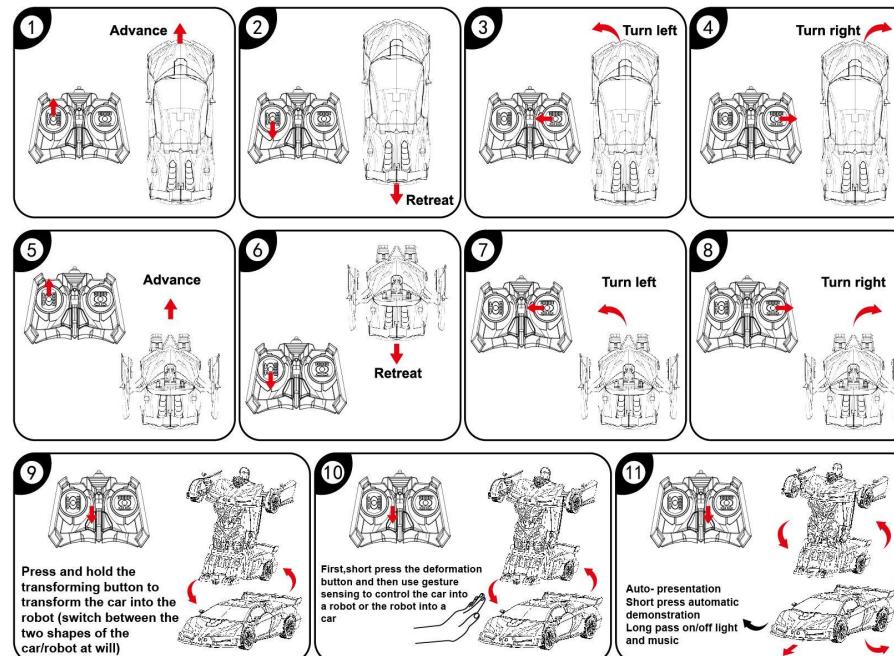

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

.Increase the separation between the equipment and receiver.

.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

.Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

For Remote control car:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

For remote control :

The device was evaluated to meet general RF exposure requirements. This equipment should be installed and used with a minimum distance of 0 mm between the radiator and your body.