Yield product send use say bright book

Client type: Trimet Standard ■

Client Criteria

Product	Cylindrical Bluetooth stereo								
Product		T1021							
I C models		AC6921A							
Version Change the content							Date of production		
A1							2022-11-28		
		_						C1 ·	
Approval		Countersigning	Audi	it	 Prepa	ration	Shi		
		55				1		Zhizhi	

Cylindrical bluetooth stereo instruction manual that

This high-end Bluetooth audio is designed to work with the majority of music lovers and design, elegant and stylish appearance, streamline shape, humanized design; the use of non-traditional

Section1Page 2 of 38Page Document symbol: WI-EN-CF-I-185

double-sided speaker box structure design concepts to create a new type of Bluetooth audio, the sound surrounded by the formation of 360-degree sense of the air; in the multi-directional sound processing chip DSP loading, so that the sound is more beautiful and beautiful.

- © Basic Functions:TF/USB/FM Radio/Audio Input/Microphone/Bluetooth.
- O Music Format:Support MP3 and WAV.
- © Bluetooth version: 5.0.
- © Bluetooth frequency: 2.402G-2.480G
- © Frequency Response: 80HZ-18KHZ.
- O Signal-to-noise ratio: 75DB
- O Distortion:Less than 10%
- © FM frequency range:87.5MHz-108MHz.
- © Power input:DC15V/1.5A.
- © Battery specification:12V lead-acid battery.
- O Display:LED display.
- O Speaker power:2*40W.
- \bigcirc Speaker impedance:4 Ω .
- Speaker:10 inch*2+2 inch*1
- Operating temperature:-45 to 55°C.





- Turn on the machine: Turn on the boat switch to ON, the machine LED screen will light up, indicating that the machine has been turned on.
- Turn off the machine: Turn the boat switch to OFF, the machine LED screen goes out, indicating that the machine is turned off.

→ Functional Description (Bluetooth mode)

Press the Mode button to switch to Bluetooth mode, the LED screen shows BLUE blinking; © Press the Mode button to switch to Bluetooth mode, the LED screen shows BLUE blinking.

Mobile phone to open the Bluetooth mode, in the cell phone search and select
 "T1021", click to connect successfully, you can enjoy the wonderful music,
 (subject to system limitations, do not rule out the problem of individual cell
 phone pairing is not successful, the company will be happy to solve the problem
 for the customer). (Due to system limitation, the problem of unsuccessful
 pairing of individual cell phones cannot be ruled out.

(Music playback mode

© When the TF card or U disk is inserted, the machine automatically switches to the music playback mode; © When the TF card or U disk is inserted, the machine automatically switches to the music playback mode.

Press the Pause button to pause and press it again to resume playback.

- © PREV key: BULE/USB/TF mode to play the previous song, FM mode to switch the previous radio station, LINE mode is invalid.
 - © MIC PRI key: Turns on/off the microphone mic priority function.
 - PLAY button: BULE/USB/TF mode play/pause, FM mode long press to auto search stations.
- © NEXT key: BULE/USB/TF mode to play the next song, FM mode to switch the next radio station, LINE mode is invalid.
- © Press MODE key: switch music/USB/TF/AUX/FM/Bluetooth function; in Bluetooth mode, long press this key for about 3 seconds to disconnect the Bluetooth device and

re-enter the pairing state.

© LIGHT key: Turns the horn light on and off.

MUNE: Switches the volume and reverb of the microphone.

REC key: Recording function, record the sound input from the microphone and store it to TF card or U disk.

(FM radio mode

- © Press the mode button to switch to radio mode, the LED shows XX.XXMHZ, and the speaker prompts FM mode.
- © Long press the play button to automatically search for stations, when the search is complete, the station will be automatically saved.
 - O Press the up and down song buttons to switch between stations.
 - O Press the Mode key to switch between other functions.

(Interface description

- USB-IN port: directly insert the U disk to play.
- TF card interface: directly insert the TF card to play.
- © Audio Input (AUX): Connects to the headphone jack of an external device such as a cell phone/tablet.
- © MIC Microphone: Access to a microphone for sound reinforcement or recording.
- O Charging port: for the adapter to charge the machine.

function in detail

(Audio input

- Press the Mode button to switch to the audio input mode.
- Plug the audio cable into the external audio input port of the unit, and connect the other end to the headphone output port of your cell phone/tablet PC or other device.
- Press Play to mute the sound.
- Press the Mode key to switch between other functions.

(Recording operations

Press the Record button (REC) on the remote control or the REC button on the panel to switch to the recording mode and start recording (you need to insert the microphone and U disk

or TF card).

- © Press the Record Play button (REC/PLAY) on the remote control or press the Record button on the panel again to play the recording, and then press the Record Play button (REC/PLAY) on the remote control or the Record button on the panel to exit the recording.
- ◎ If you need to record again new re-press the record button (REC) to enter the recording state.
- Recording files are automatically saved to TF card or U disk.

(Microphone priority statement

- ◎ MIC PRI key: press some keys to open the microphone microphone priority function, the display shows ON, at this time the microphone out of the sound will be larger than the sound of the playback, playback of the original sound is turned off small.
- ◎ MIC PRI key: Press again to turn off the microphone microphone priority function, the display shows OFF, exit microphone priority.

(Knob function description

O MASTER VOL: Total volume adjustment.

MIC. VOL: Microphone volume and reverb adjustment.

- O 4 actuators: adjust the 4 frequency points of the machine respectively.
- (TWS function operating instructions
- ◎ Turn on the two stereos at the same time, in any one of the stereo continuously press the pause/play button twice, open the TWS auto-pairing function, some of the two machines automatically search for each other, pairing success, the speaker will have a beep.

Turn on your Bluetooth device and find the Bluetooth name of the host computer and click on pairing.

O If you don't want to use TWS you can long press the MODE button for about 3 seconds to release it.

(Charging instructions

When charging, the red color is always on.

When saturated, green color is always on.

Warm tips: Because the product is constantly updated and upgraded, part of the manual does not match, please prevail in kind!

After-sales warranty service description

→ Troubleshooting

• When the Bluetooth stereo has an accidental disconnection, battery protection and other conditions, making the Bluetooth stereo can not be connected to the line, and connected to the non-functional and other dead conditions, you need to turn off the power to re-open.

\Leftrightarrow Attention

- Do not touch the connector with fingers or metal.
- Avoid strong vibrations.
- May not be disassembled, modified or repaired.
- Avoid storing in humid, hot and oily places.
- Be careful to use moderate force when connecting and removing the product from the remote control.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated

with minimum distance 20cm between the radiator & your body.