


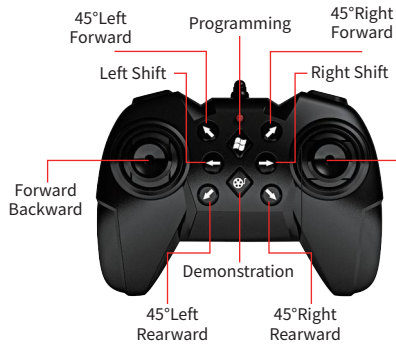

1. If the red light on the remote control does not light up, it indicates successful frequency pairing. If the red light remains on, it indicates the need to restart the remote control car for frequency pairing.

2. Press the programming button to hear a sound of "di", which will enter the programming mode (the RC car is in the stop state). After that, press the programming button again to start the demonstration.

The newly upgraded gesture sensing watch can be sensitively sensed by tilting slightly to the left or right ($<90^\circ$), and can move or rotate left or right, effectively avoiding hand sprains.



NOTE: The gesture tilt should be less than 90°

If the tilt angle is greater than 90° , a "di" sound will be heard, indicating a gesture error and the car will be unable to control. At this point, if the tilt angle is greater than 90° , two "dripping" sounds will be heard, and normal operation can be carried out.

RC Stunt Car

Mode free switching



4WD
4 Wheel Driving

LED Lights

Multiple Modes

Gravity Induction

Cool Sound Effects

Watch with stunt car function description

1. Power On/Off:

Press and hold the power button for 2 seconds to power on/off.



2. Turn on the machine and enter the frequency setting mode:

three lights blink and wait for frequency setting. During this period, turn on the remote control car switch to automatically connect the frequency setting.



3. Three mode switching:

After successful connection, it will automatically enter Mode 1, the first light will turn on, and you can switch three modes by short press of "finger key".



Tilt $<90^\circ$ Tilt $\geq 90^\circ$



4. Mode 1 function description:

the watch to keep level, watch forward tilt vehicle forward, backward tilt vehicle backward, left tilt vehicle left rotation, right tilt vehicle right rotation, short press the switch key sound switch (engine sound + three songs + mute).



5. Mode 2 function description:

the watch to keep level, watch forward tilt vehicle forward, backward tilt vehicle backward, left tilt vehicle left lateral movement, right tilt vehicle right lateral movement, short press the switch key sound switch (engine sound + three songs + mute).



6. Mode 3 function description:

the watch to keep level, quickly tilt the watch to the left and right to enter the demonstration mode (three songs + action), shake again and switch.



!! Note

1. The gesture tilt should be less than 90°
2. If you hear the sound of 'di', it will trigger the watch lock function.
3. At this time, it must be tilted $>90^\circ$ again, and you will hear two "di di" sounds, and you can operate normally.

Feel free to contact our customer service at:

support@deejoykids.com

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device

can be used in portable exposure condition without restriction.