


Get to know your Alexa Voice Remote

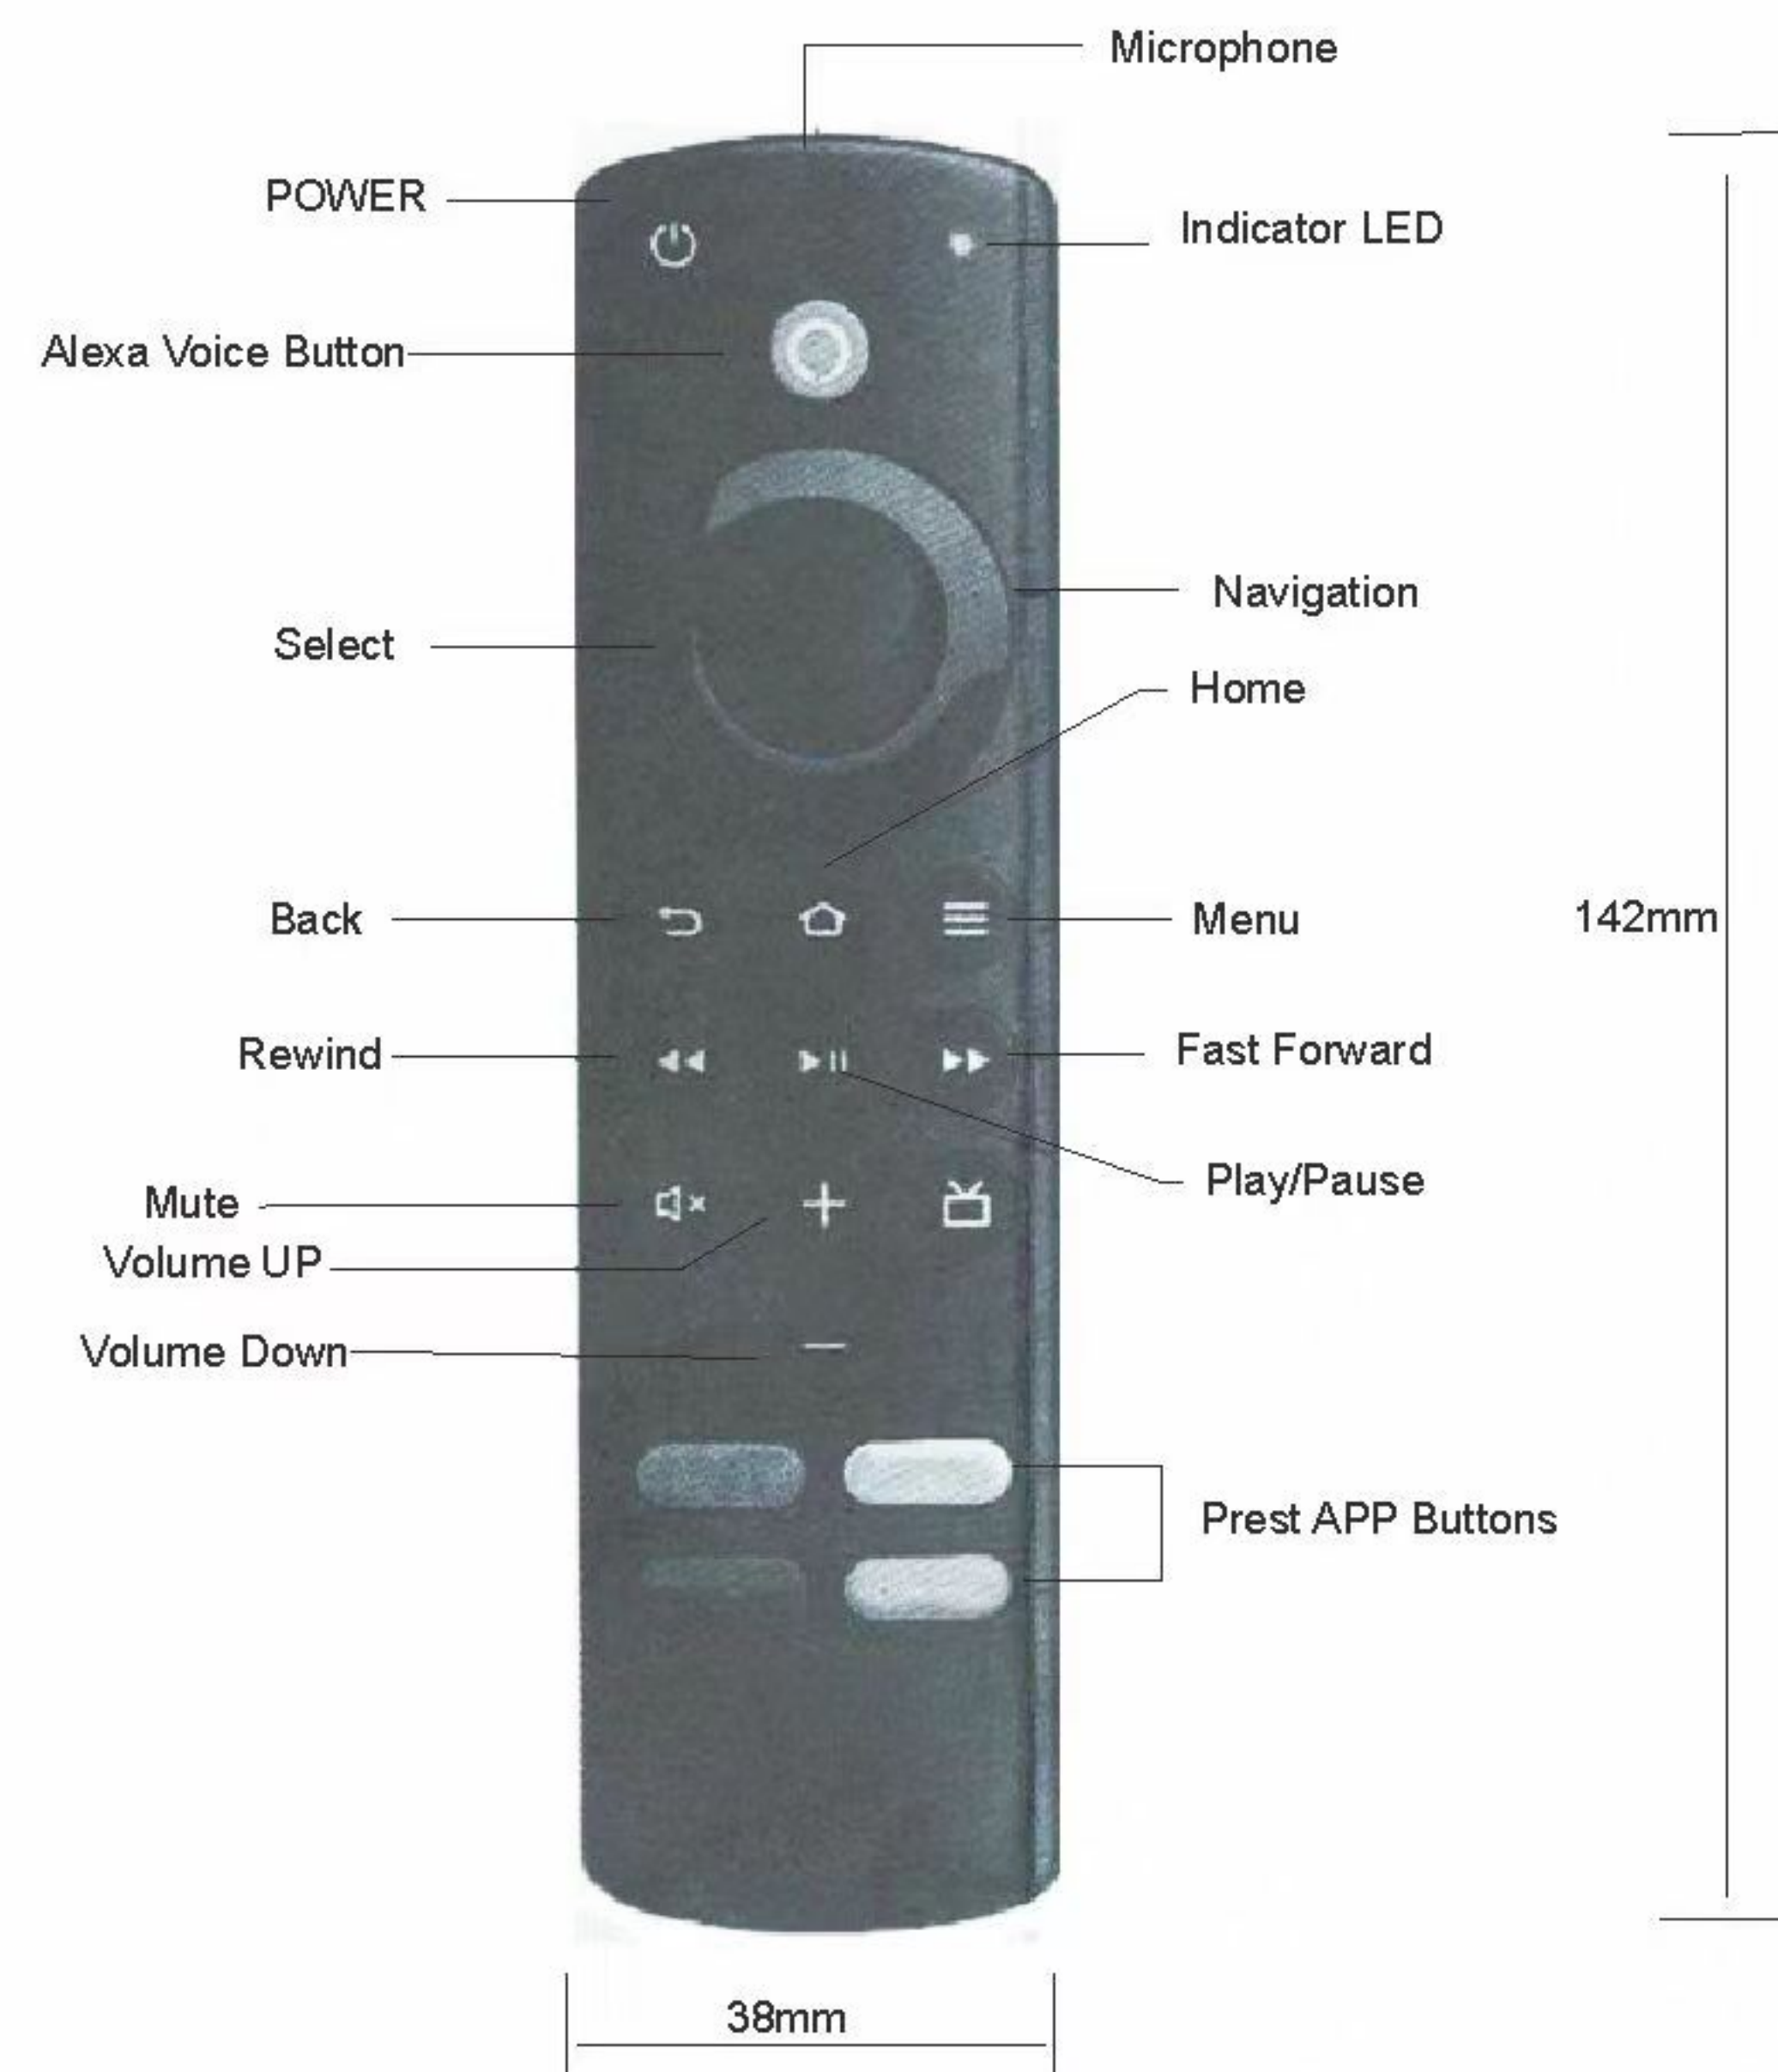

Product Information

Use responsibly. Read all instructions and safety information before use.

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE

Maintaining Your Amazon Fire TV Alexa Voice Remote

DO not drop, throw, disassemble, crush, bend, puncture, or paint your Amazon Fire TV Alexa Voice Remote and take care not to spill any food or liquid on your remote. If your remote does get wet, use rubber gloves to remove the batteries and wait for the remote to dry completely before re-inserting the batteries. Do not attempt to dry your remote with an external heat source, such as a microwave oven or hair dryer. Clean the remote with a soft cloth and avoid using liquids or harsh chemicals that may damage the remote, be careful not to wipe it with anything abrasive. Store your remote in cool, dust-free areas out of direct sunlight.

Batteries

This product contains alkaline batteries. The remote requires batteries for use. Only use new 1.5V alkaline or 1.2 NiMH rechargeable AAA sized batteries. Never mix old and new batteries. Keep all of the batteries out of the reach of children. Do not open, disassemble, puncture, cut, bend, burns. Remove all batteries if they are worn out or before storing your Amazon Fire TV remote for an extended period of time. Dispose of all batteries in accordance with applicable laws and regulations and do not dispose of batteries by throwing them into a fire. If any batteries begin to leak, take steps to prevent the fluid from coming into direct contact with skin or clothes as the fluid could be corrosive compartment in accordance with the battery manufacturer's recommendations.

Servicing your Device

If you Amazon Fire TV Alexa Voice Remote needs service, please contact Amazon Customer Service. Contact details can be found at <https://shop5554151134508.1688.com>

Other Safety Considerations

Engaging in repetitive motions such as pressing buttons or playing

Important:

If the TV power and volume up and down do not work

Please don't treat it as a bad product. Please try to reconnect it

Instruction:

Setting --> Equipment Control --> Management Equipment --> TV --> Change TV,

Then choose your Brand of TV.

Set up your Alexa Voice remote

1. Insert included AAA batteries
Remove the battery door and insert batteries into your Fire TV Alexa Voice remote (3rd Generation).
2. Pair the remote with your Fire TV Device
You must pair your new remote to your Amazon Fire TV. Choose the applicable pairing instructions from the options below.

some games may cause you to experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Small parts contained in your device or included with it may present a choking hazard to small children.

FCC Complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The output power of the radio technology used in the Products is below the radio frequency exposure limits set by the FCC. Nevertheless, it is advised to use the Products in such a manner that minimizes the potential for human contact during normal operation. Change or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- RF Exposure

If this remote is in addition to the remote that came with your Fire TV:
prior to setting up your new remote, please make sure you have your "old" remote handy.

1. On your "new" remote, press and hold the Home button for 10 seconds. The indicator LED will slowly flash amber for 10 seconds, then flash faster when your remote is ready to connect.
2. You must use your "old" remote for the following step.
3. Press the Home button. Navigate to Settings located at the top of the screen, then select Controllers & Bluetooth Devices > Amazon Fire TV Remotes > ADD New Remote.
4. Your Fire TV will search for remotes it can connect with, then display them in a list.
5. Using your "old" remote, select the "new" remote from the list. You will see an on-screen message when it has been successfully paired. You can now use your new Fire TV remote.

Tips

- * If the new remote does not connect, remove and reinsert the batteries in your remote.
- * If your remote isn't discovered, press and hold the Home button for at least 10 seconds until the LED rapidly flashes amber.
- * Always replace dead batteries with new 1.5V alkaline or 1.2V NiMH rechargeable batteries.

This device complies with radio frequency (RF) exposure limits adopted by the Federal Communications Commission for an uncontrolled environment.

All the regulatory marks including FCC ID and model number can be found in the battery compartment.

Limited Warranty

Your Amazon Fire TV Alexa Voice Remote is covered by a 90-day Limited Warranty. Details are available at www.young-remote.com

Product Specifications

Fire TV Alexa Voice Remote

Model NO. L5B83G

Electrical Rating: 3.0V (2 AAA batteries)

Temperature Rating: 0-35 °C