




— bring vacation home —

# ROBOTIC POOL CLEANER

## User Manual

Seagull Pro  
Seagull Pro Lite

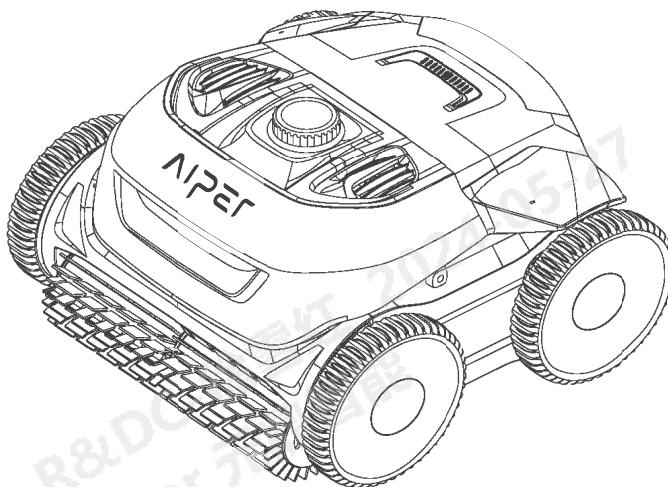

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the dealer or an experienced radio / TV technician for help.

## Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
2. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## IC Statement

This device complies with Industry Canada license - ICES-003. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Radiation Exposure Statement:

1. This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.
2. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

1. Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé.

2. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Importer. Aiper Intelligent, LLC.

Address: 13851 Ramona Ave, Chino, CA 91710, USA.

US Toll-Free: 1-866-850-0666

AU Toll-Free: +61(180)049-7023

Thank you for choosing Aiper.

You've now joined a family of millions who have already put their trust in Aiper to take care of their pools and are enjoying the convenience of a pristinely clean pool.

This user manual will help you maintain your Aiper pool cleaner and ensure it performs at its maximum efficiency for years to come. Please take a few minutes to read through this manual.

If you have any questions, please visit our website at [www.aiper.com](http://www.aiper.com) and contact our customer service team for assistance or more information.

## Aiper Customer Service:

US Toll-Free: 1-866-850-0666

AU Toll-Free: +61(180)049-7023

Email: [service@aiper.com](mailto:service@aiper.com)


Facebook: @AiperOfficial



Scan for  
Video Guide



Scan the QR  
Code to Access  
Customer Support

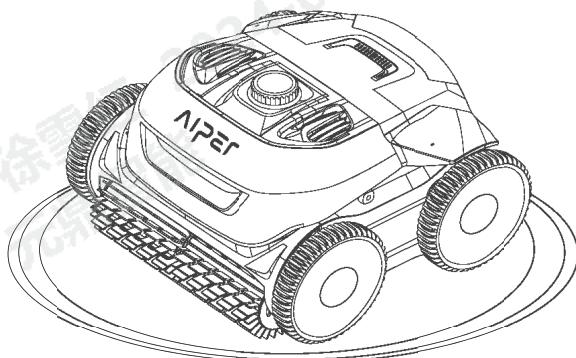

**English****CONTENTS**

Important Safety Precautions	4
1. Structure	6
2. Specifications & Working Conditions	7
3. Using Your Aiper Pool Cleaner	8
4. Installation	8
5. Operating Your Device	9
6. Disassembly and Cleaning	11
7. Charging	13
8. Maintenance & Storage	14
9. LED Indicator	16
10. Packing List	18
11. Warranty	18

# **IMPORTANT SAFETY PRECAUTIONS**

Read this manual carefully and use your device in accordance with the instructions. Aiper is not liable for any damages or injuries caused by improper use.

**For your safety and optimal performance of this device, please read and follow the following suggestions.**

## **1. READ AND FOLLOW ALL INSTRUCTIONS.**



2. Do not operate the device when people or animals are in the pool.
3. Ensure the device is turned off when conducting maintenance, cleaning, or when not in use.
4. Do not allow children to ride the device or play operate it without adult supervision.
5. Only use the original, authorized power adapter.
6. The adapter cord should only be replaced by a qualified electrician.
7. It is strongly recommended to connect the charger to a surge protector when charging.
8. Ensure the charging port is completely dry before charging your device.
9. While charging, the device should be kept in a cool, well-ventilated place. Customers should not over the device while charging as this may lead to overheating or hardware malfunctions.
10. Do not operate the device out of the water, as this may lead to hardware malfunctions or overheating.
11. Only certified professionals should disassemble the (driving kit) of the device.
12. Do not operate the device while running your pool filter.
13. Avoid puncturing the oil sealing of the motor, as this contains grease. If punctured, this may cause a small grease leakage into your pool.
14. Do not store or use the device near anything that generates extreme heat.
15. Do not pierce or bludgeon the device's shell, as this will cause irreparable damage. Additionally, the device should not be thrown.

16. WARNING – To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.
17. Ensure that children do not attempt to access cleaner while it is operating.
18. CAUTION
  - a. FOR OUTDOOR USE
  - b. DO NOT RUN PUMP DRY
  - c. FOR USE ONLY WITH AC/DC ADAPTOR, MODEL:GC330-2940900-1F
  - d. FOR USE WITH SWIMMING POOLS ONLY
  - e. TO REDUCE THE RISK OR INJURY, USER MUST READ MANUAL
  - f. ENCLOSURE TYPE 3
  - g. IMPEDANCE PROTECTED

**SAVE THESE INSTRUCTIONS**

Please read this user manual carefully before operating the device.

## 1. Structure

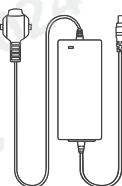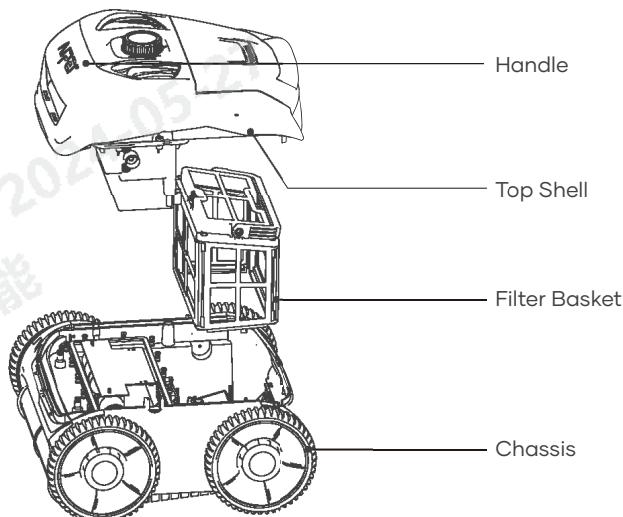

Retrieval Hook

Charger

## 2. Specifications & Working Conditions

1. Pool Size: 1600 sq.Ft/150m<sup>2</sup>
2. Charger Input: 100-240V, 60/50Hz, 5A
3. Charger Output: 29.4V/3A (slow charge version),29.4V/9A (faster charge version)
4. Charging Time: 3-4h
5. Battery Life: Up to 150 Minutes
6. IP Grade: IPX8 Waterproof
7. Max Water Depth: 10ft (3m)
8. Motor Power: 70W
9. Battery Pack: 7800mAh/9000mAh
10. Battery Pack Voltage: 25.2V
11. Frequency Range: 2400 - 2483.5 MHz


### CAUTION:

Your Aiper pool cleaner is best used in the water conditions detailed below.

- Temperature: 50-95°F (10-35°C)
- pH Value: 7.0-7.4
- Chlorine: Maximum 4 ppm
- NaCl: Maximum 5000 ppm


### 3. Using Your Aiper Pool Cleaner

a. The machine is suitable for cleaning floors, walls, and water lines up to 1600 sq. ft./150m<sup>2</sup>.

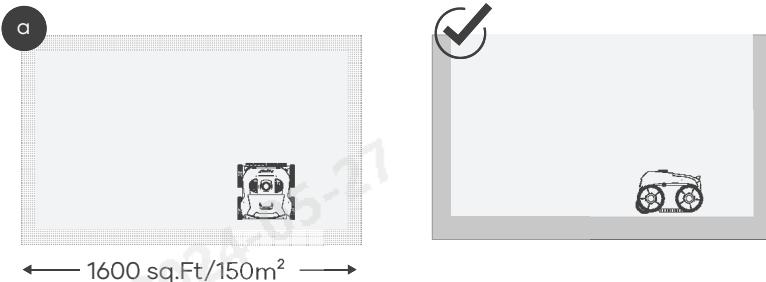


### 4. Installation


a. Lift the tail end of the upper shell to open and gain access to the interior of the device.

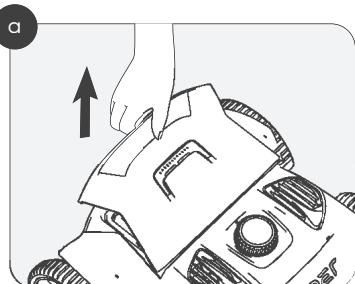

b. Insert the filter basket into the open slot as indicated in the graphic.


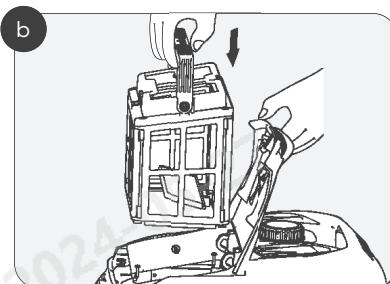


c. After installing the filter basket, press down on the tail of the upper shell to close the device.

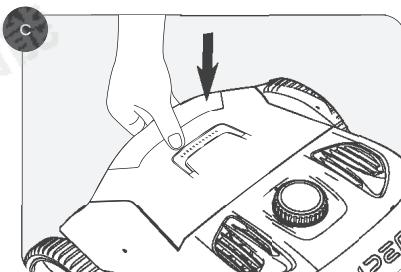



## 5. Operating Your Device

a. Turn the dial clockwise to activate each cleaning mode. There are three cleaning modes to choose from.

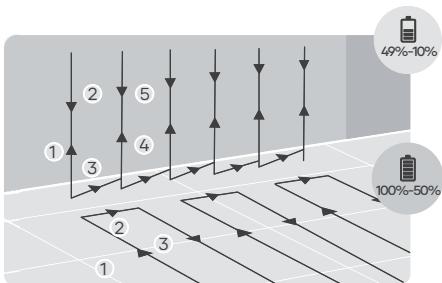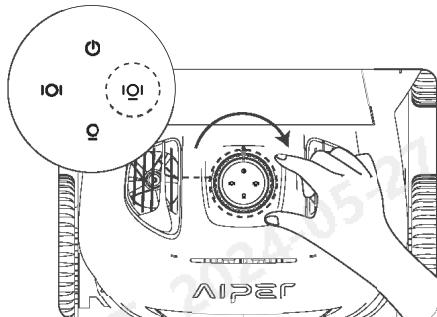


### Auto Mode: Floor and Wall Cleaning

The machine will clean the pool floor and wall in turn. After cleaning the pool floor, wall cleaning will be conducted. When the battery reaches below 10%, the machine will stop cleaning and remain parked near the wall of your pool.

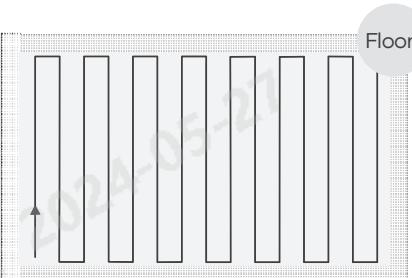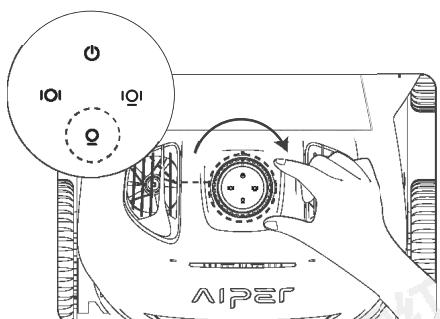

### Floor Cleaning Mode

The machine will clean the pool floor along the "S"-shaped route (WavePath™ Navigation Technology) without climbing the wall.

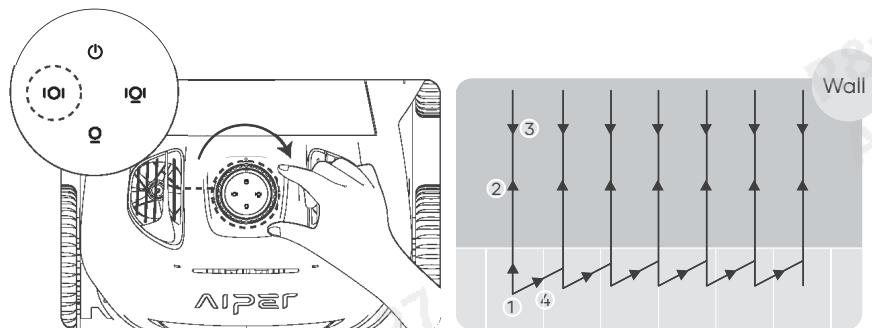


### Wall Cleaning Mode


The machine will clean the wall along the "N"-shaped route.

No floor cleaning will be carried out under this mode.

b. Place your device into your pool. Your device will begin cleaning within 10 seconds of reaching your pool's floor.

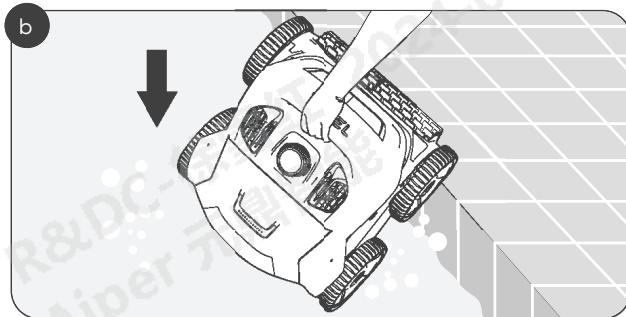


c. After completing its cleaning cycle, or when the battery is low, your device may be retrieved from the pool using the provided hook. The unique design of the spring plate allows for rapid drainage of the device when taken out of the pool.

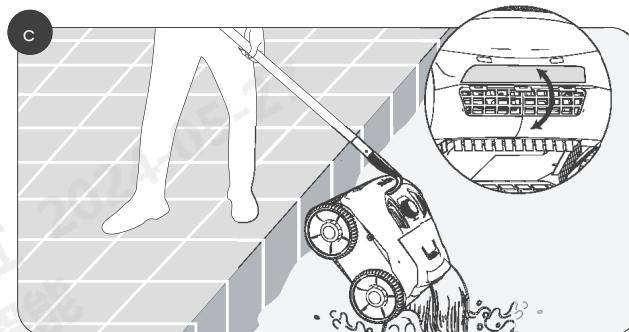


## 6. Disassembly and Cleaning


a. Lift the rear end of the top shell to check the filter basket.

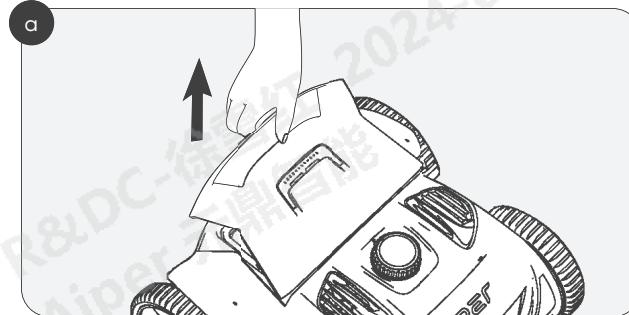


b. Detach the fasteners to release the basket from the device.

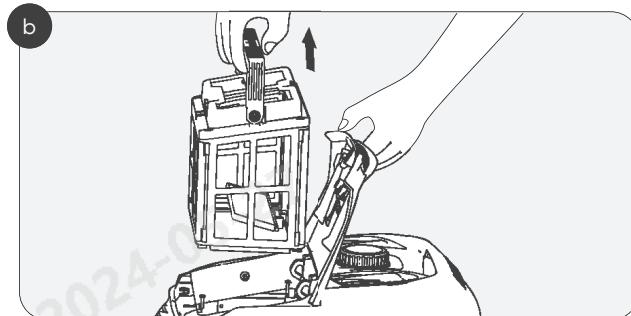

c. Open the tab of the filter basket.

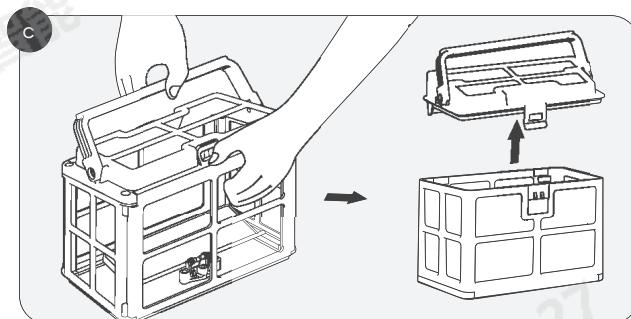

d. Remove any trash, wash the filter basket with water, and reinsert the filter basket into the device.

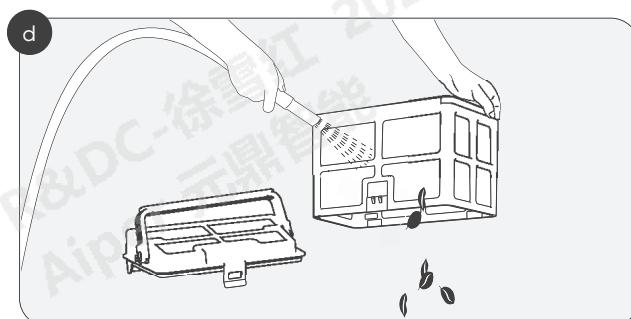


## 7. Charging


### a. Charging

Fully charge your Aiper pool cleaner before using it to clean your pool.

- Switch off the power before charging, otherwise the device cannot be recharged, and a rapid alarm will be activated.
- Please remove the silicone plug before charging.
- Wipe dry the charging port before charging your device.

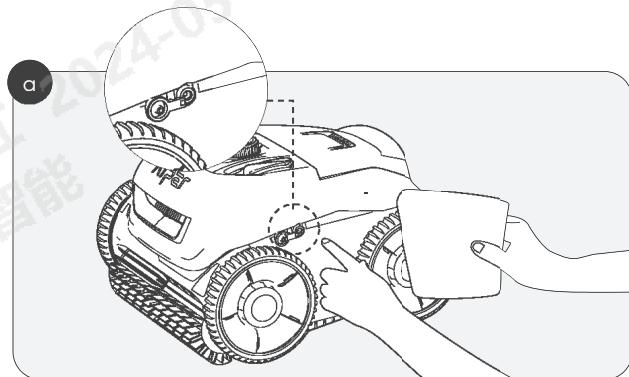


b. Please plug the silicone plug back in after charging or before cleaning your pool.

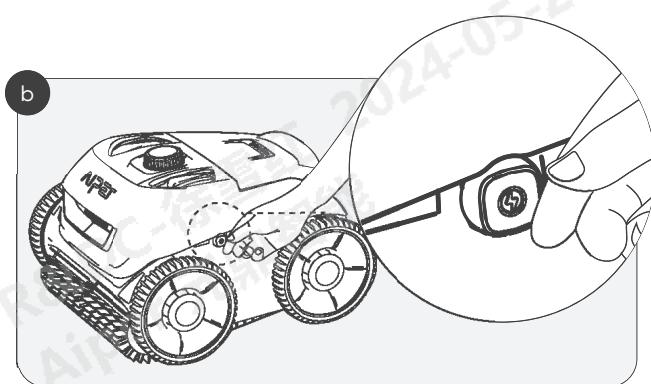


## 8. Maintenance & Storage

### 8.1 Replacement Instructions for wheel


a. Lift up the wheel cover marked with an "A."

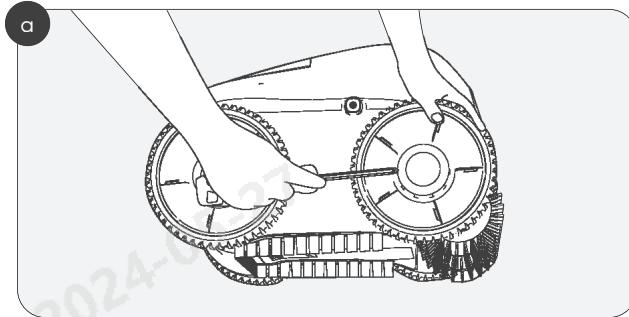

b. Remove the screws fixed to the wheel.

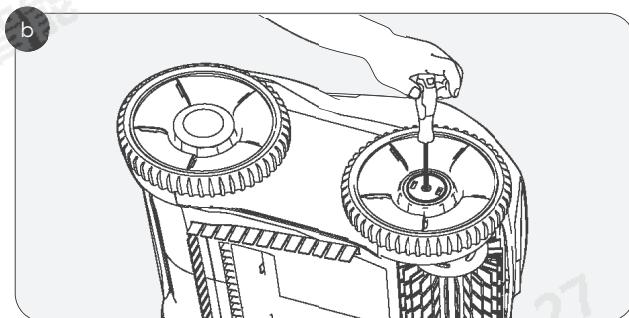


c. Remove the shaft and sleeve cover of the wheel for complete disassembly.

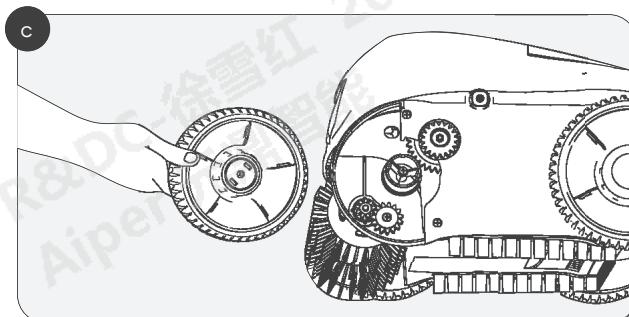


## 8.2 Replacement Instructions for Rolling Brush Belt

- Locate the back side of the rolling brush belt and peel back the silicone buckle attached to the mounting slot.

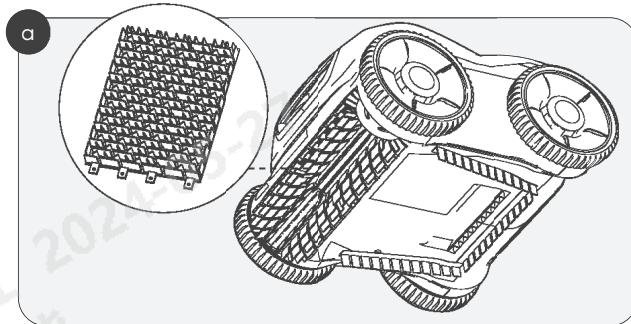

- Once all the silicone buckles are removed, replace the rolling brush belt with a new one. Align the silicone buckles with the mounting slots, and press to secure the buckles into each slot.

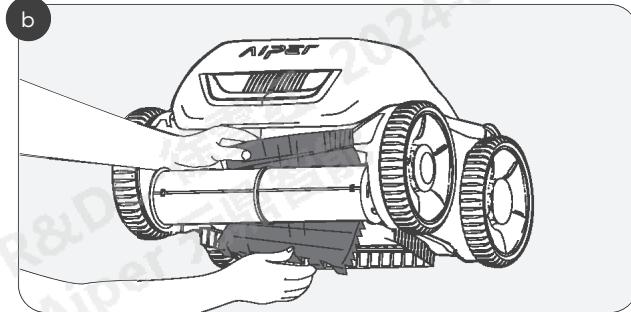

## 9. LED Indicator

Machine Condition	Indicator Condition	Sound	Description	
Battery State	The corresponding mode indicator and ring indicator are always on.	A "ding" sound will occur every time the button is turned.	The indicators color will relate to the device's battery status.	Green: >90%
				Blue: 50-89%
				Yellow: 10-49%
				Red: < 9%
Charging	Operating Properly	The Switch icon indicator is always on; the ring indicator flashes slowly.	No sound.	When charging, the ring indicator will flash different colors corresponding to the appropriate battery states.
				After being fully charged, the machine will automatically stop charging, and the ring indicator will turn green.
Operating Improperly	The mode indicator is off.	Constant and rapid alarm		If the switch icon indicator is disabled or a cleaning mode is enabled, the mode indicator will turn on, the ring indicator is off and the machine is not charging.
				To charge the device, turn the button to the switch icon.

Machine Condition	Indicator Condition	Sound	Description
Mode Selection	The mode indicator is always on.	A "ding" sound will occur every time the button is turned.	<ol style="list-style-type: none"> <li>1. Turn the button clockwise to select the cleaning mode: Auto (Floor+Wall), Floor Only, or Wall Only.</li> <li>2. Turn button back counter-clockwise to the original position to power off your device.</li> </ol>
Operation	Normal	The mode indicator and the ring indicator are always on.	The ring indicator will be in different colors corresponding to the battery status.
			Green: >90%
			Blue: 50-89%
			Yellow: 10-49%
			Red: < 9%
Abnormal	The ring indicator is flashing in red.	Constant and rapid alarm.	Failure: electrical leakage, water blockage, etc.
Shutdown Indication	All indicators are off.	A "ding" sound.	Turn the button back counter-clockwise to the original position and your device will shut down.

## 10. Packing List

NO.	Name	Model	QTY(pc)
1	Cleaner	Aiper Seagull Pro	1
2	Charger	/	1
3	Retrieval Hook	/	1
4	User Manual	/	1
5	Filter Basket	/	1

## 11. Warranty

This product has passed quality control and safety test conducted by our technicians.

1. This product comes with a 24-month warranty that covers your item's battery and motor from the date of purchase.
2. This warranty is voided if the product has been altered, misused, or has been repaired by unauthorized persons.
3. This warranty extends only to manufacturing defects and does not cover damage resulting from the mishandling of the product by the owner.
4. The order number or record of purchase must be presented at the request of any repair claim during the warranty period.



This symbol indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.



— bring vacation home —

[www.aiper.com](http://www.aiper.com)