

TOMASHI

Model: T-15

TECHNICAL INDEX

Voltage	AC:check silk-screen near AC socket DC:4.5V (3x1.5V R20/D size batteries)
Frequency Range	FM: 88-108 MHz AM: 540 -1710 kHz
Middle Frequency	FM: 10.7 MHz AM: 465KHz
Antenna	FM: Rod antenna AM: Inner magnetic rod antenna
Speaker	3.5 Inch, 6 Ω
Max no-distortion output	1W
Max consume power	5W
Dimensions	219x120x93mm
Weight	About 671.6g (Batteries are not include)
Accessories	AC power cord 1PC

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

AM/FM 2 BAND PORTABLE RADIO

INSTRUCTION MANUAL






WARNING

- ◇ There may be electric shock dangerous when you don't operate or use this machine correctly, please strictly operate in accordance with its regulations. Except for the authorized repairing personnel, never open the back cabinet arbitrarily so as to avoid the dangerous of electric shock.
- ◇ Please don't expose the unit under the rain or humid place, prevent from water and spray. Don't put anything which fill with liquid like vase etc above this unit.
- ◇ Please don't press or bend the AC cord of the unit, in case of the copper inside the AC cord break and lead to open circuit.
- ◇ When fall across thunderstorm or you don't use this machine for a long time, please do pull out the AC plug.
- ◇ Please pull out the batteries when don't use DC power supply, so as to avoid batteries electronic leak liquid corroding the radio.
- ◇ Don't use the batteries combined with new and old, or different category. Please put the dumped batteries on the place where indicate by government to avoid environment pollution.

FUNCTION PARTS

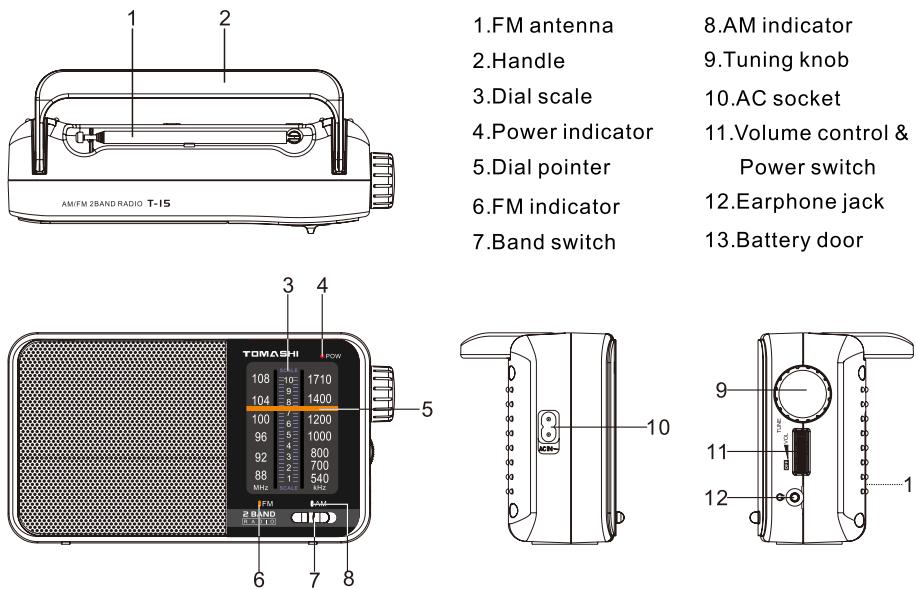

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "hazardous voltage" within product's enclosure, which may be sufficient to induce a risk of electric shock to persons.

POWER SUPPLY

This unit has the function of AC&DC available power supplying, DC voltage is 4.5V(3x1.5V R20/D size). Please check the AC voltage before using, to make sure the voltage silk-screen on unit is complied with your local voltage, in case of any damage.

When use the AC power, please connect the inlet of the AC cord with the socket jack (10), and put the plug of the AC cord into power board or the power socket on the wall.

When use the DC power, please operate as the following procedures:

- 1) Push down the battery door locks by hands and take apart the battery door (13).
- 2) Aiming the polarity of the battery, put into 3 pcs 1.5V R20/D size.
- 3) Closed the battery door.

NOTICE

- ◇ Just to be on the safe side, please pull out the AC plug from power supplying before installing batteries.
- ◇ Please try to use the AC power supplying due to because the time is limited for batteries proving power.

RADIO OPERATION

1. Move the power switch (11) between on and off to control.
2. Move the band switch (7) to the band you want to listen: AM or FM, after band selected, turn the tuning knob (9) and watch the dial pointer (5) on dial scale (3) to search your desired station program.
3. Use volume control (11) to regulate the large or small volume of the sound.
4. You can see earphone to listen to radio in case of disturb other people. Insert the earphone plug into "earphone jack" (12).

ANTENNA OPERATION

1. When listen to FM, please pull out the FM antenna (1) to obtained the best effect.
2. When receiving AM, it's using the internal magnetic antenna, you can get the optimum reception by rotating the direction of the radio.

MAINTENANCE

1. Please put this unit at well ventilated place, don't use it in high temperature or humid environment. When maintain this radio, please clean up this machine with soft cloth, but with out any lubricant, alcohol etc volatile liquid.
2. The machinery parts of this machine have been fully lubricated by factory before delivery.