



Fruit & Vegetable Purifier User Manual D-812



How to use
1. Please charge it first before use, Connect the USB charging cable to the adapter and the charging base.(Adapter is not included in package)



Figure 1

2. While charging, the green light is always on. After charging, the green light is always on.

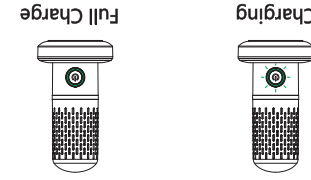 


Figure 2

3. Put the fruit and vegetable need to be washed into the sink, and add water with a temperature not exceeding 40° C. It is recommended not to exceed 3L of water .



Figure 3

4. Turn the machine on, you will hear a beep sound and the light is on.

 


Figure 4

5. Please put the washing machine at the bottom of the sink and keep it flat.

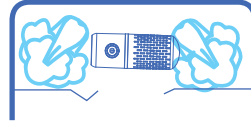 


Figure 5

6. To get better result , please stir the fruit and vegetables occasionally, the electrolyzed water smells like disinfectant, don't worry about it, it is not harmful.

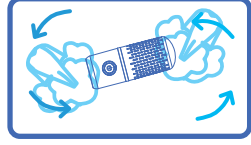 


Figure 6

7. After the clean work is done, there will be 3 beeps and all the indicator lights will go out. At this time, let machine stand for 5-10 minutes.

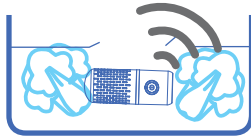 


Figure 7

Tip: After using, please unscrew the cover to drain the body.

FCC ID: 2BD74D-812

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Product Parameter

Name	Fruit & Vegetable Purifier
Model	D812
Waterproof Rate	IPX7(Main Body)
Power	≤ 8W
Standard	GB 4706.1-2005



Vegetable Cleaning Machine

Specification:
Battery: built-in 4000mAh.
Work Time: about 10min(3-5L water)
Power: 5V/8W.
Work time: ≥20 times.
Size: 3.58x3.58x6.38inch(with base)
Waterproof: IPX7
1 X Vegetable Fruit Washing Machine
1 X Charging Base
1 X Charging Cable

Important Notices:

1. The charging base is not waterproof, please don't put it in water.
2. Please charge the Machine with the charging base came with the package.
3. Do not insert pins, iron wires, metal pieces or other conductive objects between the two electrodes, it may cause short circuit.
4. Do not use the machine if there is no water in the container.