

EUDORA

TABLET
E10 PRO

Quick Guide

ATTENTION

For instructions or any questions pertaining to device usage, please visit: www.eudoramobile.com

PLEASE DRIVE RESPONSIBLY - DO NOT TEXT & DRIVE

Medical Device Safety

Follow hospital rules and power off your device when near medical devices.

Airplane Mode

Please switch device to Airplane Mode when instructed by flight crew.

Keep Device Away From Water

Your device is not waterproof. Keep your device away from water or any liquid to avoid damage. Water damage is not covered under warrantee.

Battery Usage

For better performance and longer battery life, please fully charge the battery before using the device for the first time, and the subsequent two to three charge cycles.


IMEI Information

Press *#06# for your IMEI number

2 | Eudora E10 Pro Quick Guide

KEY FUNCTIONS

View

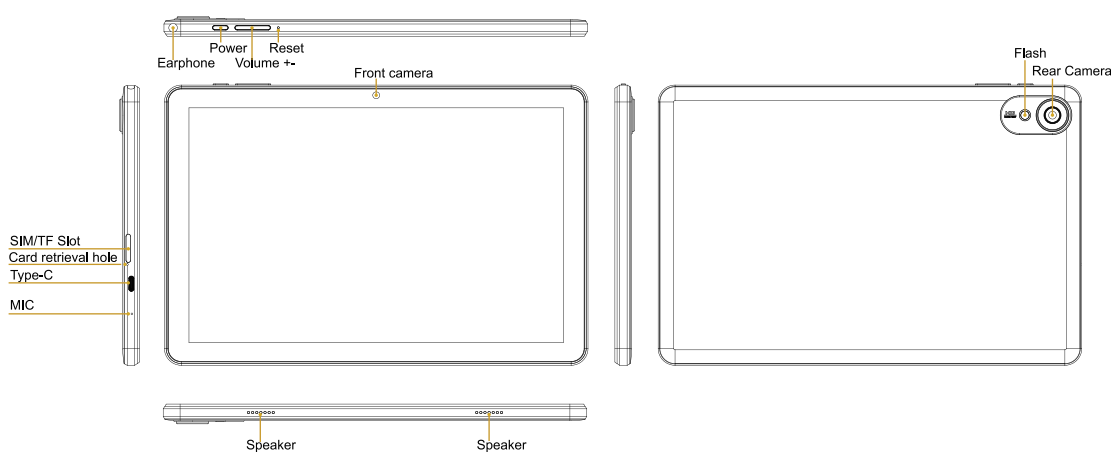

Eudora E10 Pro Quick Guide | 3

KEY FUNCTIONS

Power	Long press the power button to power on. Short press the power button to lock the screen.
On/Off	While the phone is powered on, press the power button and volume + simultaneously to access the power off menu.
Volume	Adjusts the ringer volume, call volume, and multimedia volume.
Front Camera	A high-resolution front camera to take pictures and video. This option is ideal for self-portraits.

Rear Camera	A high-resolution rear camera to take pictures and video.
Flash	Provides light for pictures in low-light conditions. It also may be used as a flashlight.
USB-C Port	Charges the device and transfers data such as documents, music, and video between your device and a PC.
Headset Port	Connect earphones to this port for hands-free capabilities.
SIM Slot	Insert SIM card.
MicroSD Slot	Install optional MicroSD card for expandable storage up to 128gb.

4 | Eudora E10 Pro Quick Guide

 
INTRODUCTION

Installation of the SIM Card

Warning: Please keep the SIM card out of the reach of children. The SIM card and its contact are easily damaged by scratching or bending. Please use caution when installing or removing the SIM card.

To insert SIM card:

- Remove the SIM card cover. Insert the SIM card.
- Insert the MicroSD card (For additional storage capacity)
- Replace the SIM card cover and power on the phone.

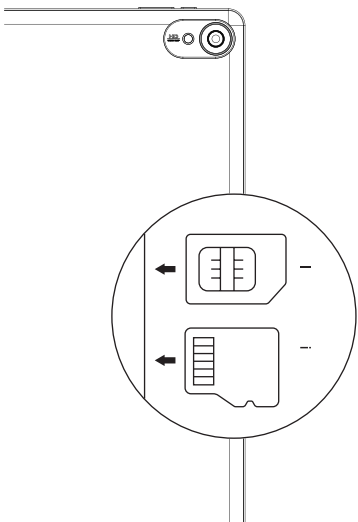

Eudora E10 Pro Quick Guide | 5

DEVICE CONFIGURATION

When you initially power on your device, there will be a series of steps to set up basic features.

Insert SIM

Insert your SIM card so the device can register to the network.

Select Language

While on the Welcome screen, please scroll to select your language. In this step, you also have the option to adjust Display Settings such as magnification and font size.

Connect To WiFi

Select the WiFi network for your WiFi connection. Please note that any secured WiFi network will require a password prior to connection. Unsecured WiFi networks do not require password to connect. Please use your WiFi connection for software updates to avoid data overage charges.

Copy Apps & Data

This step allows you to transfer applications, pictures, music and other content from a previous device. You may also setup as new if you choose not to transfer from a previous device.

Add Your Account

Sign into your Google Account or create a new Google Account to access Google services. This account will be used for Google services such as Google Play, Google Drive, Google+, Gmail, and YouTube. If the device is not recognized by your Google account, you will have to complete a security verification.

Google Services

Click to add Google services such as Backup and Restore, Location Services, Install Updates and Apps.

6 | Eudora E10 Pro Quick Guide

DEVICE CONFIGURATION

Device Protection

Click to setup device PIN or Password. The PIN or Password can be setup at a later time.

Finalize Setup

The last step allows you to setup another email address, control what information is visible through the lock screen, and allows the review of any additional apps. You may skip this step and setup later.

*Google, Google Play, Google Maps, YouTube, Gmail, and other marks are trademarks of Google LLC

Eudora E10 Pro Quick Guide | 7

ATENCIÓN

Para obtener instrucciones o cualquier pregunta relacionada con el uso del dispositivo, visite:

www.eudoramobile.com

POR FAVOR CONDUZCA RESPONSABLEMENTE - NO ENVÍE TEXTOS & CONDUCIR

Seguridad de Dispositivos Médicos

Siga las normas del hospital y apague su dispositivo cuando esté cerca de dispositivos médicos

Modo Avión

Por favor, cambie el dispositivo a Modo Avión cuando lo indique la tripulación de vuelo

Mantenga el dispositivo alejado del agua.

Su dispositivo no es resistente al agua. Mantenga su dispositivo alejado del agua o cualquier líquido para evitar daños. Los daños por agua no están cubiertos por la garantía

Uso de la Batería


Para un mejor rendimiento y una mayor duración de la batería, por favor cargue completamente la batería antes de usar el dispositivo por primera vez, y durante los siguientes dos o tres ciclos de carga.

Información del IMEI.

Presione *#06# para obtener su número IMEI.

8 | Eudora E10 Pro Quick Guide

La función principal

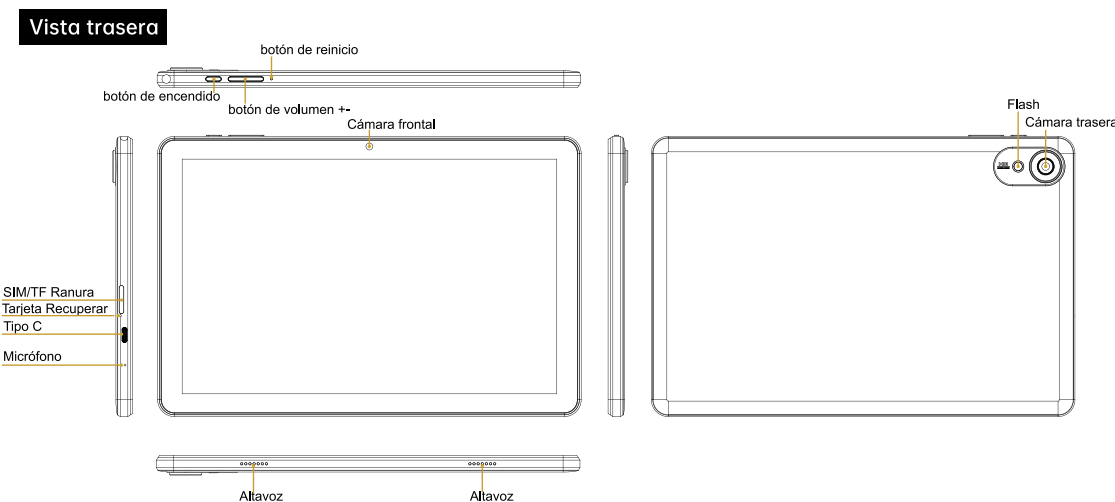

Eudora E10 Pro Quick Guide | 9

La función principal

Poder	Presione el botón de encendido para arrancar. Presione el botón de encendido para bloquear la pantalla.	Detrás Cámara	Cámara trasera de alta resolución para fotografía y grabación de video.
Abierto/apagado	Cuando el teléfono está encendido, presione Botón de encendido y volumen + ingrese al menú de apagado al mismo tiempo.	Flash	Iluminación para imágenes en luz débil condiciones. También se puede usar como flash.
Volumen	Ajuste el volumen del timbre, el volumen de la llamada y el volumen multimedia.	USB-C Puerto	Cargue el dispositivo y transfiera documentos, música y video entre dispositivos. Su dispositivo y PC.
Fronte Cámara	Cámara frontal de alta resolución Imagen y video. Esta opción es perfecta para Selfie.	Puerto de auriculares	Conecte los auriculares a este puerto para la función manos libres.
		Ranura de tarjeta SIM	Inserta la tarjeta SIM.
		Ranura MicroSD	Instale una tarjeta MicroSD opcional con almacenamiento escalable de hasta 128 gb.

10 | Eudora E10 Pro Quick Guide

 
INTRODUCCIÓN

Instalación de la tarjeta SIM

Advertencia: mantenga la tarjeta SIM fuera del alcance de niños. La tarjeta SIM y su contacto se dañan fácilmente al rayarla o doblarla. Tenga cuidado al instalar o retirar la tarjeta SIM.

Para insertar la tarjeta SIM:

- Retire la cubierta de la tarjeta SIM. Inserte la tarjeta SIM.
- Inserte la tarjeta MicroSD (para obtener más capacidad de almacenamiento)
- Vuelva a colocar la cubierta de la tarjeta SIM y encienda el teléfono.

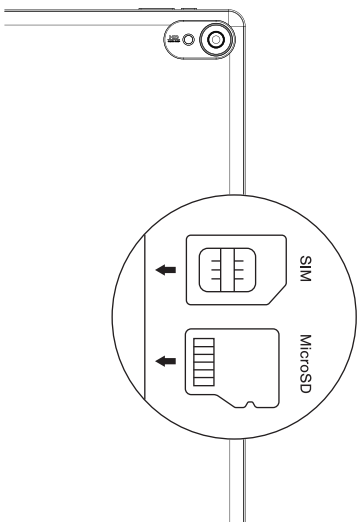

Eudora E10 Pro Quick Guide | 11

CONFIGURACIÓN DEL DISPOSITIVO

Cuando encienda su dispositivo por primera vez, habrá una serie de pasos para configurar las funciones básicas.

Inserte SIM

Inserte su tarjeta SIM para que el dispositivo pueda registrarse la red.

Seleccione el idioma

Mientras esté en la pantalla de bienvenida, desplácese para seleccionar su idioma. En este paso, también tiene la opción de ajustar la configuración de pantalla, como la ampliación y el tamaño de fuente.

Conéctate a Wi-Fi

Seleccione la red WiFi para su conexión WiFi. Tengo en cuenta que cualquier red WiFi segura requerirá una contraseña antes de conectarse. Las redes WiFi no seguras no requieren contraseña para conectarse. Utilice su conexión WiFi para actualizaciones de software y evitar cargos por exceso de datos.

Copiar aplicaciones y Datos

Este paso le permite transferir aplicaciones, imágenes, música y otro contenido desde un dispositivo anterior. También puedes configurarlo como nuevo si eliges no transferir desde un dispositivo anterior.

Añade tu cuenta

Inicie sesión en su cuenta de Google o cree una nueva cuenta de Google para acceder a los servicios de Google. Esta cuenta se utilizará para servicios de Google como Google Play, Google Drive, Google+, Gmail y YouTube. Si su cuenta de Google no reconoce el dispositivo, deberá completar una verificación de seguridad.

Servicios de Google

Haga clic para agregar servicios de Google como copia de seguridad y restauración, servicios de ubicación, instalación de actualizaciones y aplicaciones.

12 | Eudora E10 Pro Quick Guide

CONFIGURACIÓN DEL DISPOSITIVO

Protección del dispositivo

Haga clic para configurar el PIN o la contraseña del dispositivo. El PIN o la contraseña se pueden configurar más adelante.

Finalizar la configuración

El último paso le permite configurar otra dirección de correo electrónico, controlar qué información es visible a través de la pantalla de bloqueo y permite revisar cualquier aplicación adicional. Puede omitir este paso y configurarlo más tarde.

*Google, Google Play, Google Maps, YouTube, Gmail y otras marcas son marcas comerciales de Google LLC

Eudora E10 Pro Quick Guide | 13

 EUDORA MOBILE, INC.
Designed In California
Sales@Eudoramobile.com

8 | Eudora E10 Pro Quick Guide

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harm full interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.