 
 


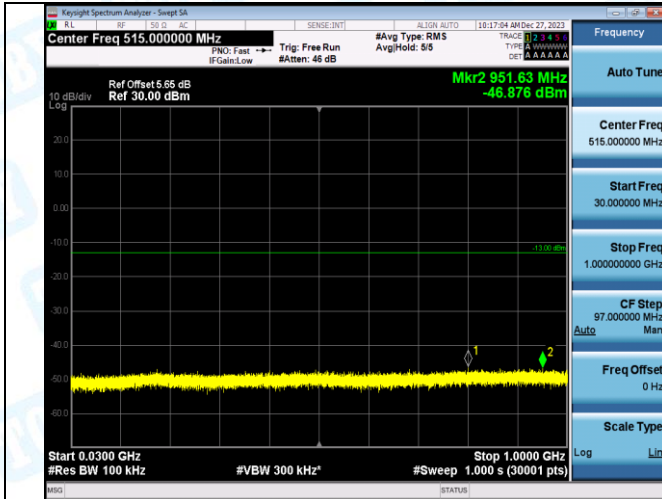


EGPRS850-251-8-0.009~0.15MHz-PASS

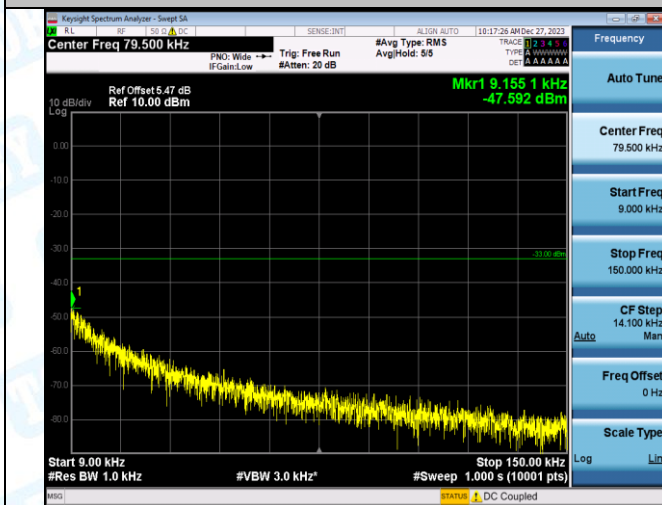


EGPRS850-251-8-0.15~30MHz-PASS



 EGPRS850-251-8-30~1000MHz-PASS

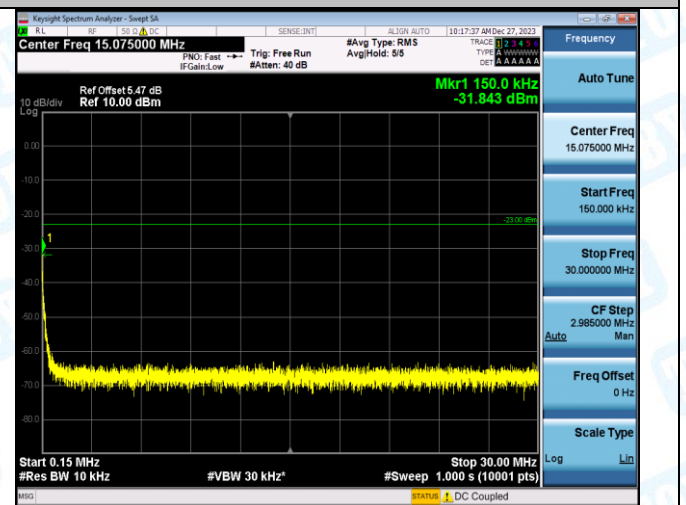


EGPRS850-251-8-1000~10000MHz-PASS

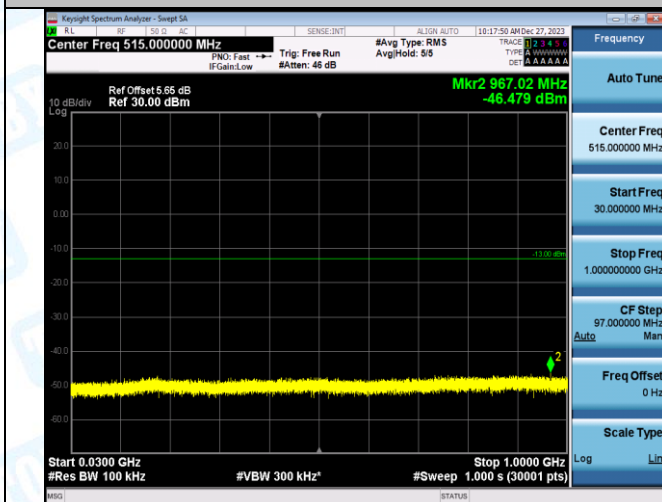 


GSM1900-512-0-0.009~0.15MHz-PASS



 
GSM1900-512-0-0.15~30MHz-PASS

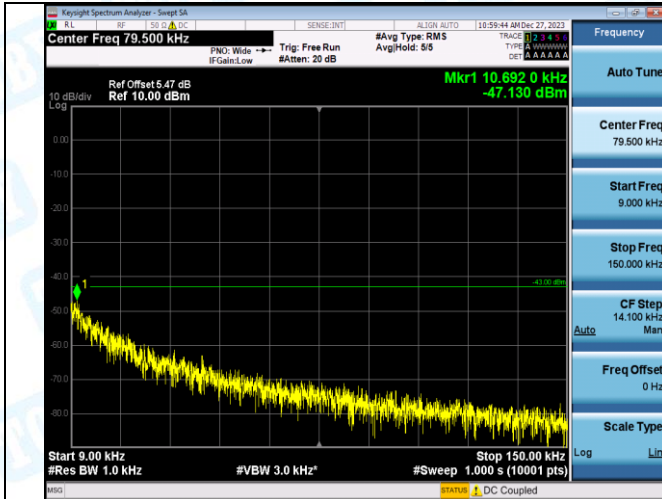

GSM1900-512-0-30~1000MHz-PASS

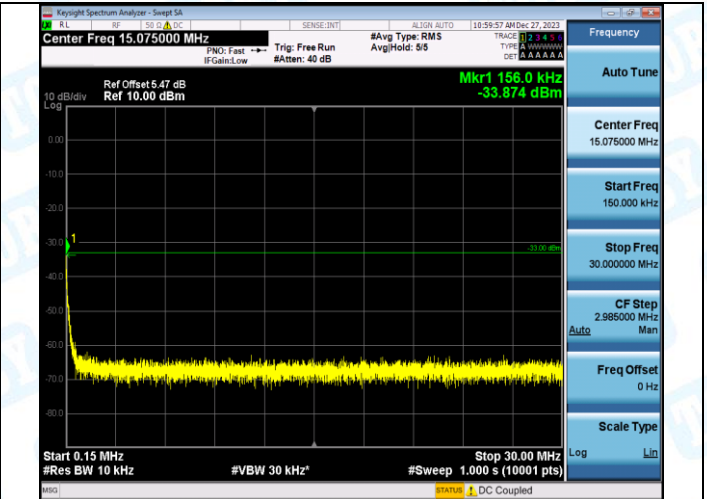 


GSM1900-512-0-1000~3000MHz-PASS

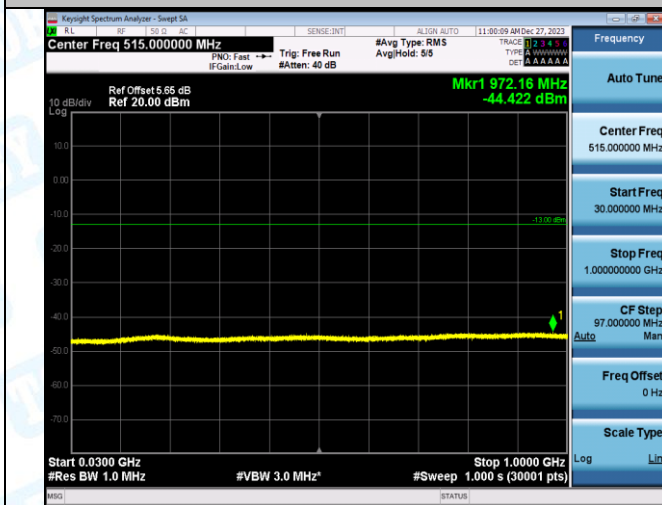 


GSM1900-512-0-3000~18000MHz-PASS



 
GSM1900-661-0-0.009~0.15MHz-PASS

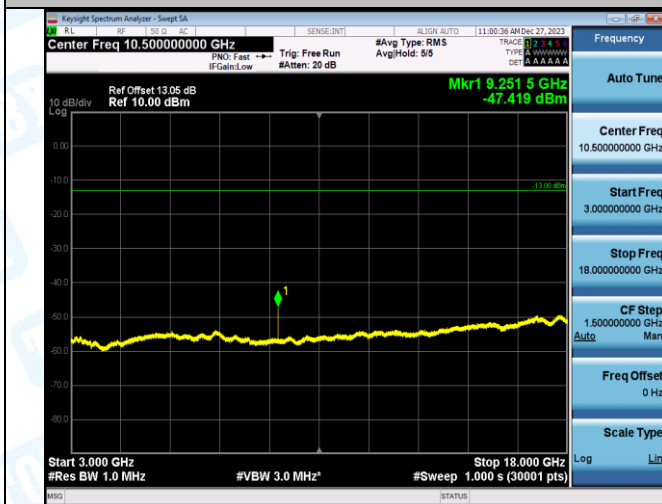

GSM1900-661-0-0.15~30MHz-PASS

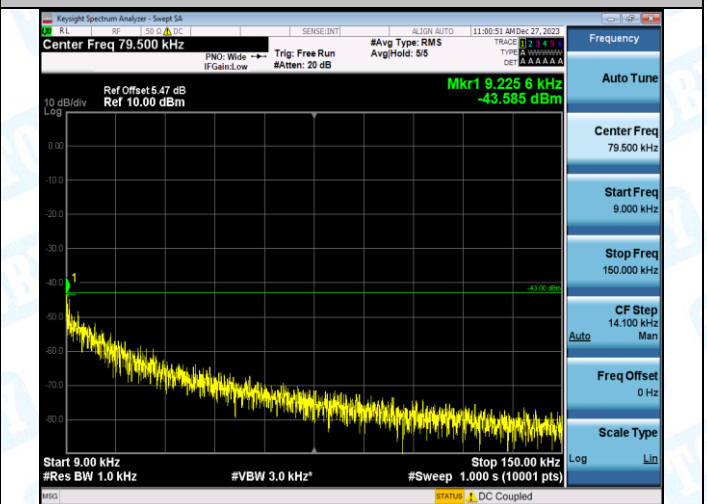 


GSM1900-661-0-30~1000MHz-PASS

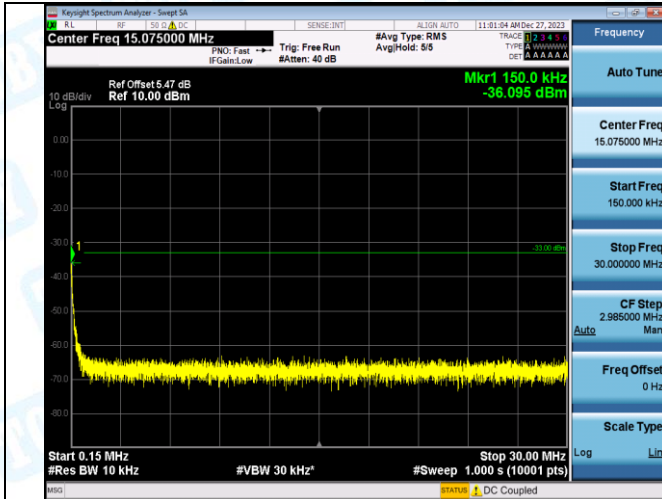 

GSM1900-661-0-1000~3000MHz-PASS



 
GSM1900-661-0-3000~18000MHz-PASS

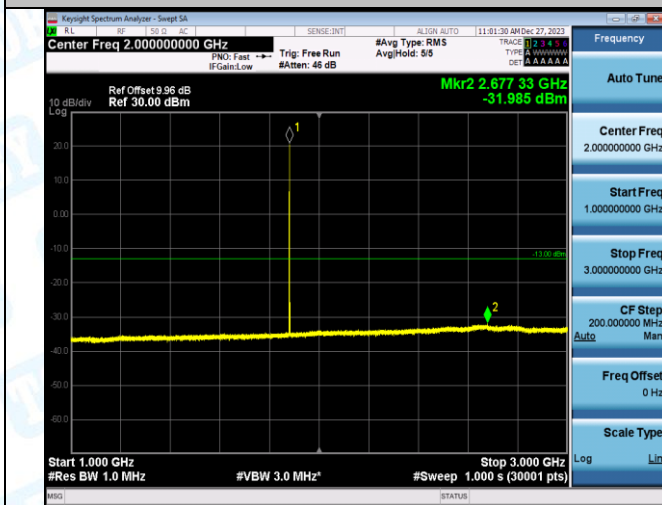


GSM1900-810-0-0.009~0.15MHz-PASS



 
GSM1900-810-0-0.15~30MHz-PASS

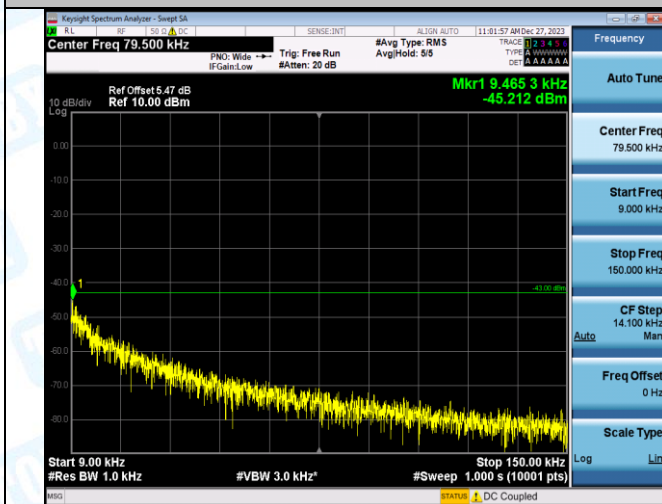

GSM1900-810-0-30~1000MHz-PASS

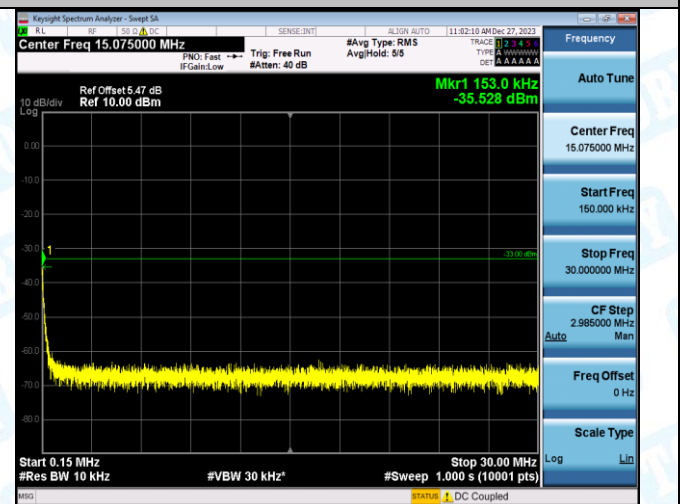 


GSM1900-810-0-1000~3000MHz-PASS

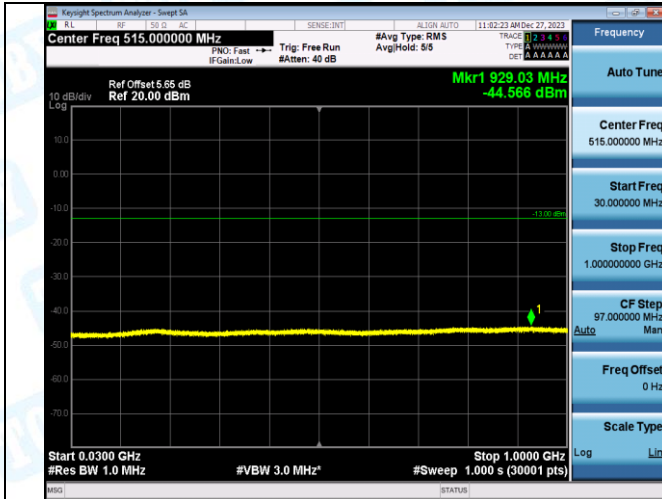 


GSM1900-810-0-3000~18000MHz-PASS



 
GPRS1900-512-0-0.009~0.15MHz-PASS

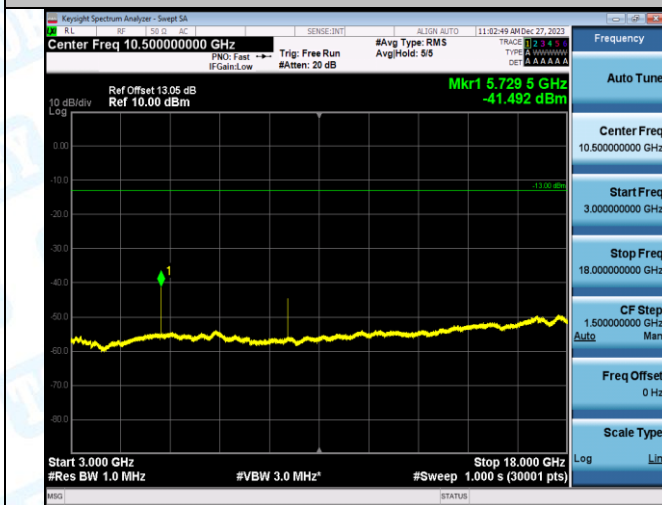

GPRS1900-512-0-0.15~30MHz-PASS

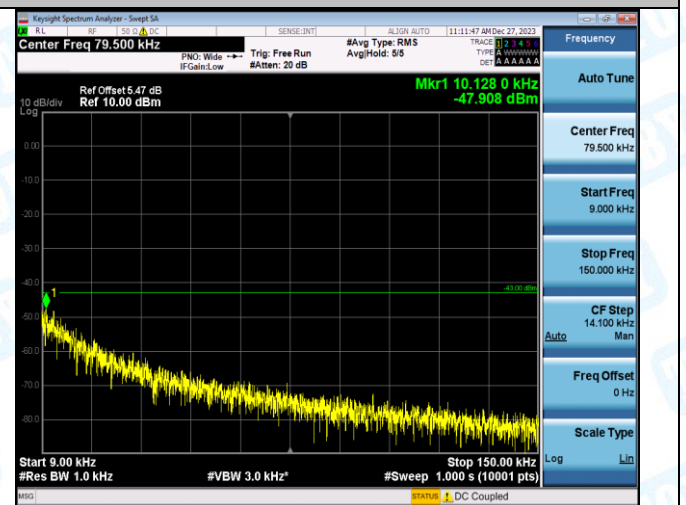 


GPRS1900-512-0-30~1000MHz-PASS

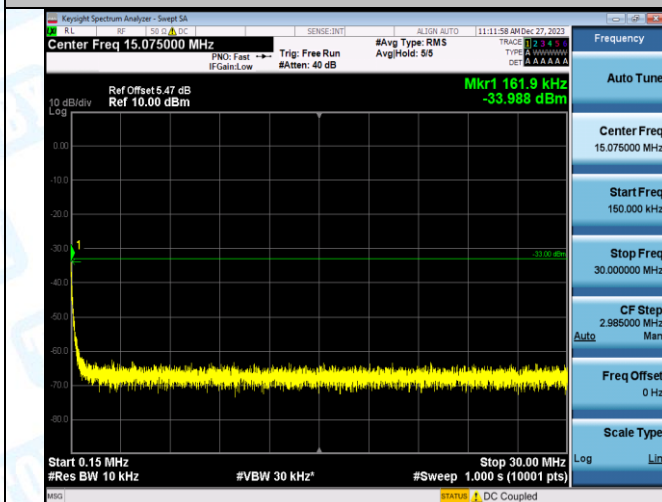 

GPRS1900-512-0-1000~3000MHz-PASS



 
GPRS1900-512-0-3000~18000MHz-PASS

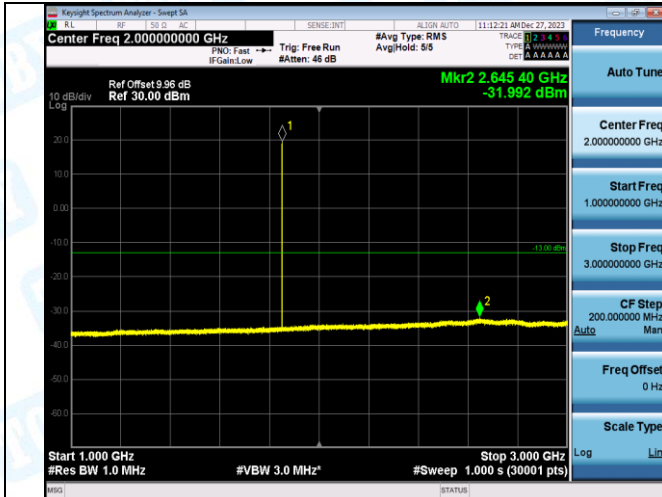


GPRS1900-661-0-0.009~0.15MHz-PASS



 
GPRS1900-661-0-0.15~30MHz-PASS

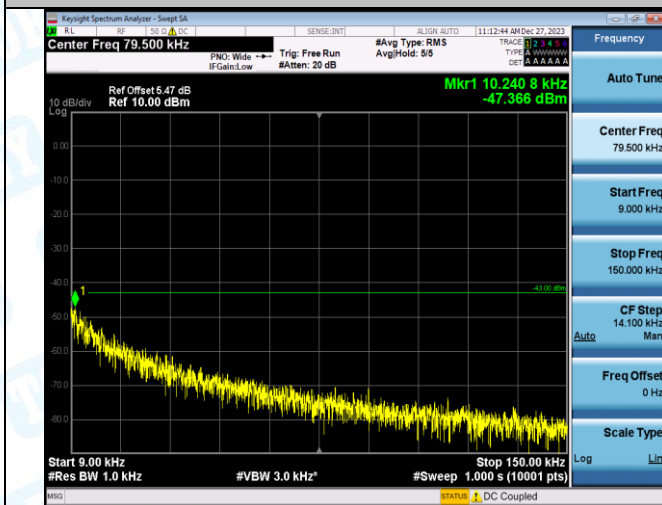

GPRS1900-661-0-30~1000MHz-PASS

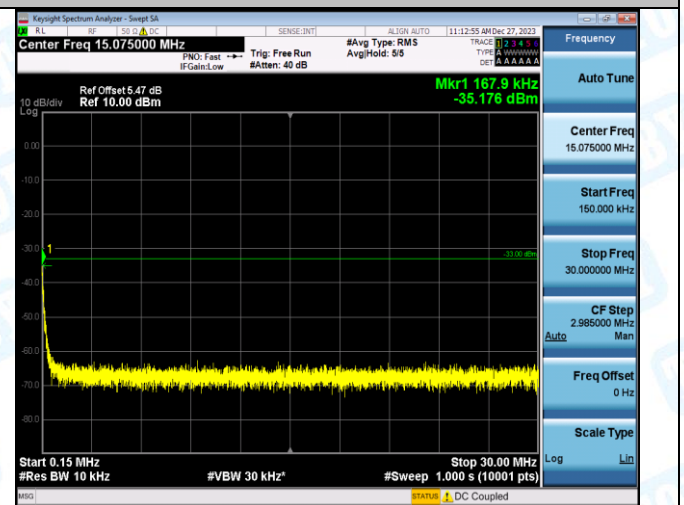 


GPRS1900-661-0-1000~3000MHz-PASS

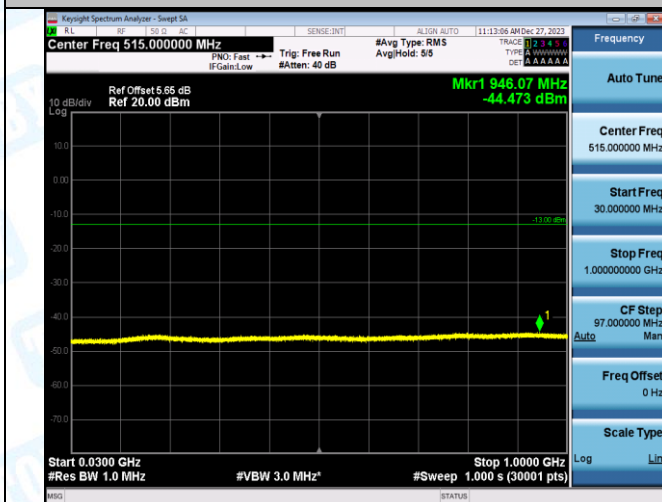 


GPRS1900-661-0-3000~18000MHz-PASS



 
GPRS1900-810-0-0.009~0.15MHz-PASS

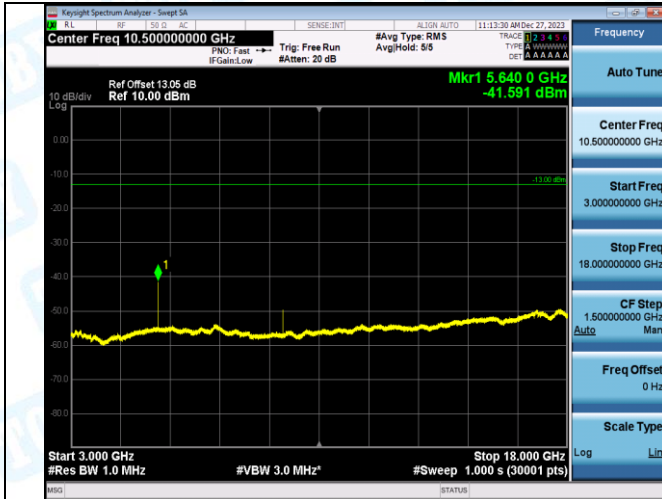

GPRS1900-810-0-0.15~30MHz-PASS

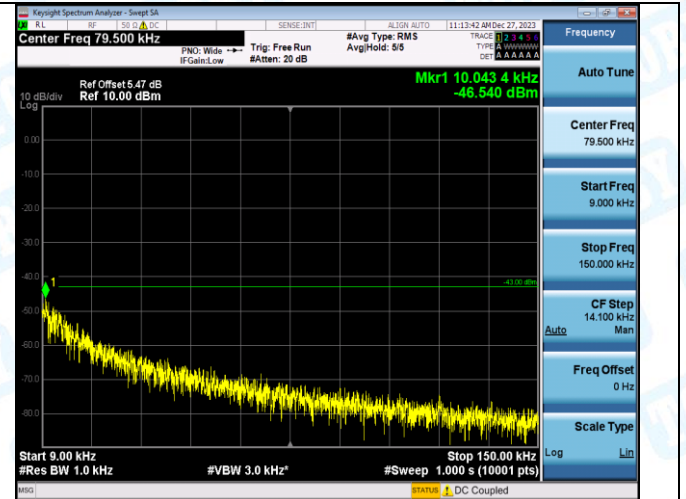 


GPRS1900-810-0-30~1000MHz-PASS

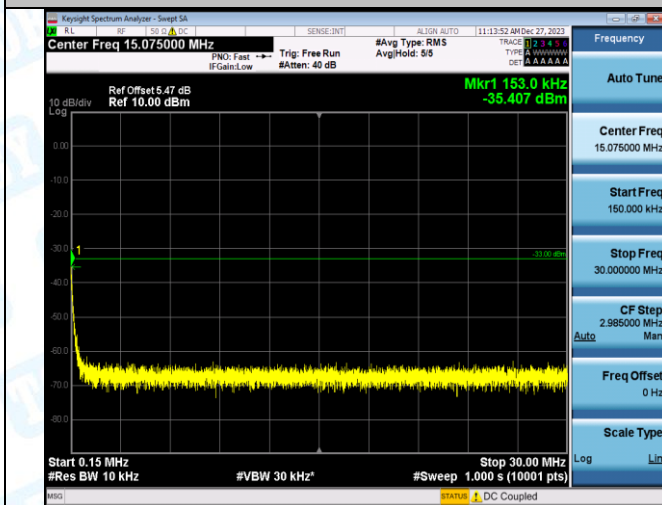 

GPRS1900-810-0-1000~3000MHz-PASS



 
GPRS1900-810-0-3000~18000MHz-PASS

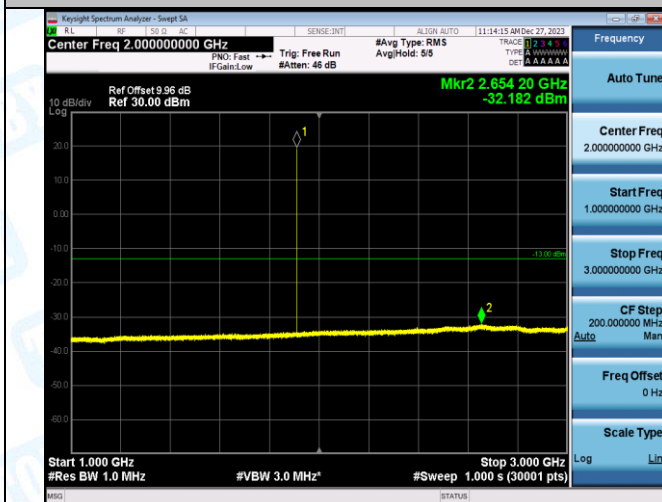


EGPRS1900-512-2-0.009~0.15MHz-PASS



 
EGPRS1900-512-2-0.15~30MHz-PASS

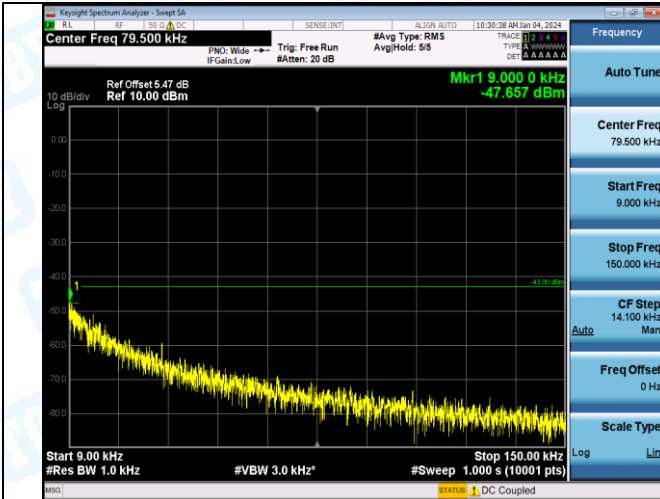

EGPRS1900-512-2-30~1000MHz-PASS

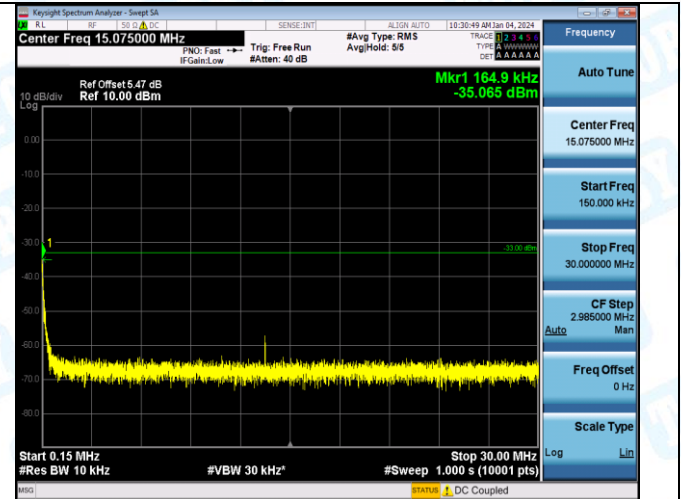 


EGPRS1900-512-2-1000~3000MHz-PASS

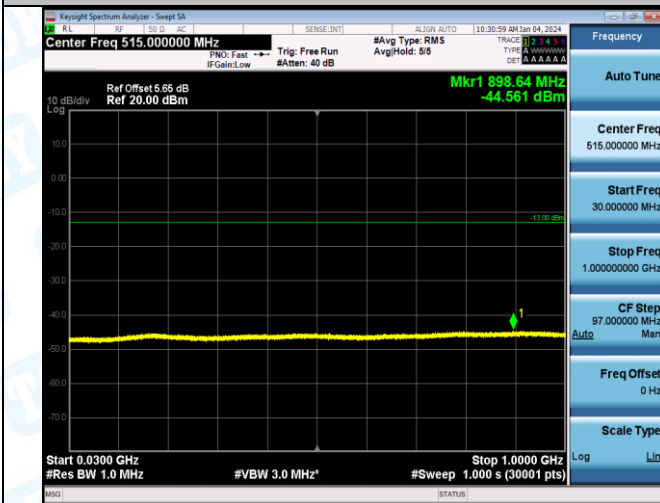 


EGPRS1900-512-2-3000~18000MHz-PASS



 
EGPRS1900-661-2-0.009~0.15MHz-PASS

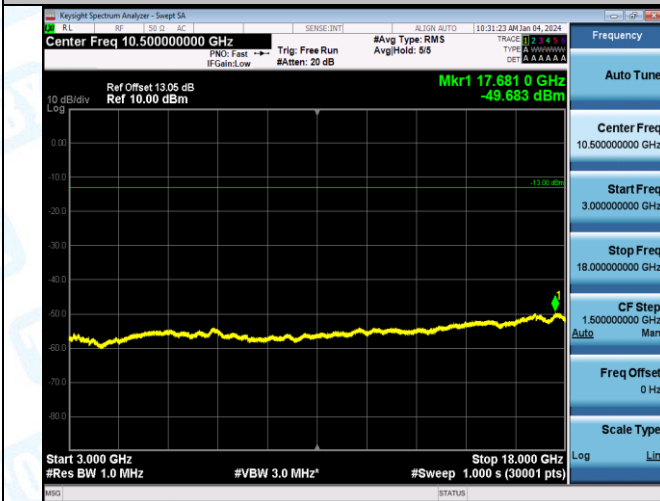

EGPRS1900-661-2-0.15~30MHz-PASS

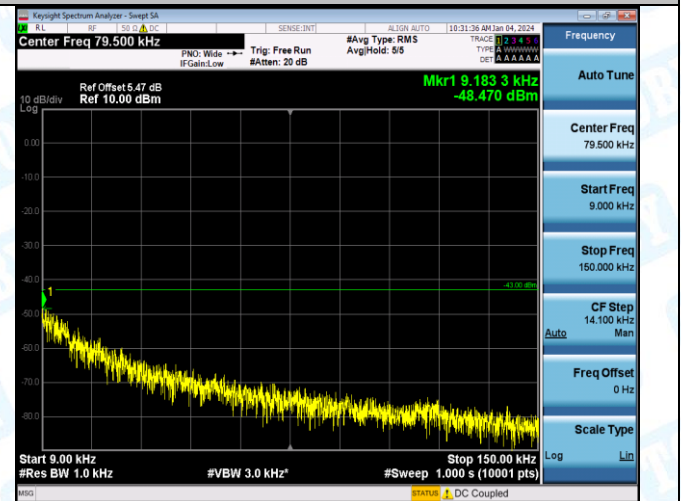 


EGPRS1900-661-2-30~1000MHz-PASS

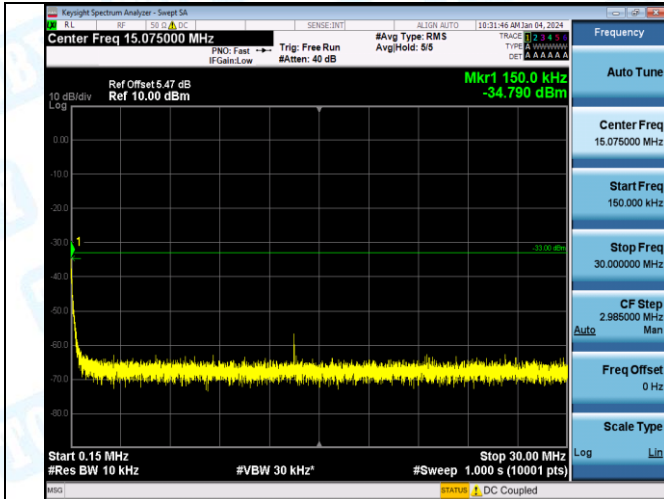 

EGPRS1900-661-2-1000~3000MHz-PASS



 
EGPRS1900-661-2-3000~18000MHz-PASS

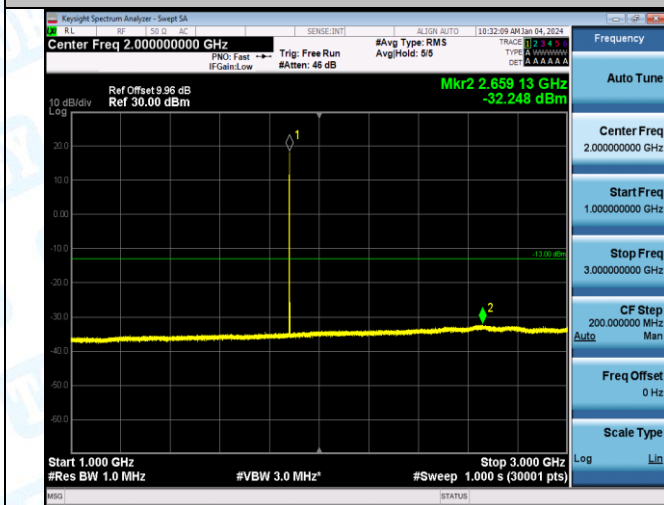


EGPRS1900-810-2-0.009~0.15MHz-PASS



 EGPRS1900-810-2-0.15~30MHz-PASS

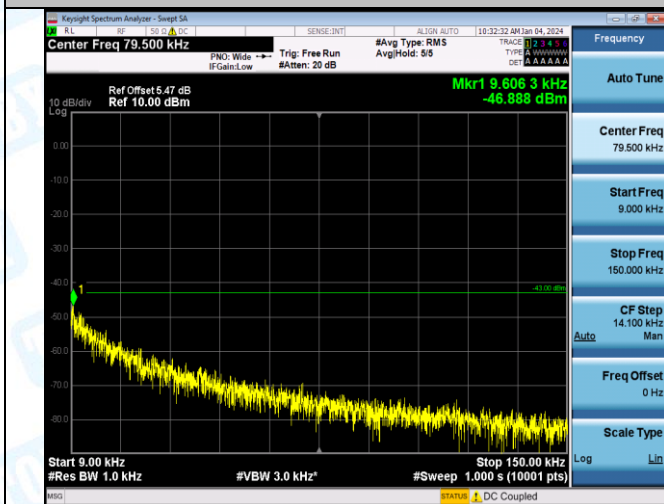

EGPRS1900-810-2-30~1000MHz-PASS

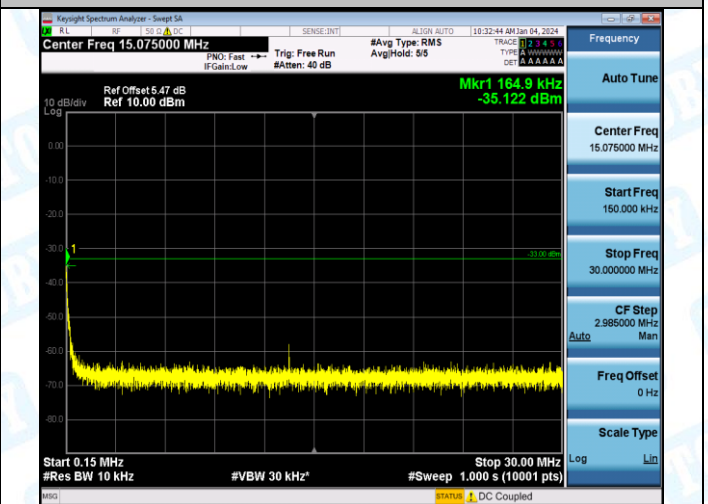 

EGPRS1900-810-2-1000~3000MHz-PASS