


# 英语

STK-7049

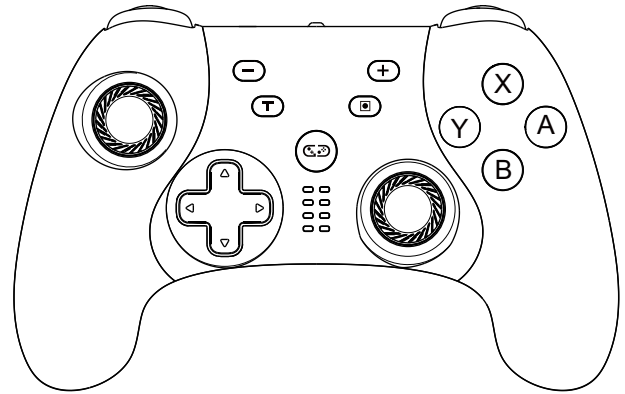

Wireless Controller


For N-S / Lite / OLED / Android / IOS 13.0+ /PC

USER MANUAL

V1.0

EN

● Key Function Instruction

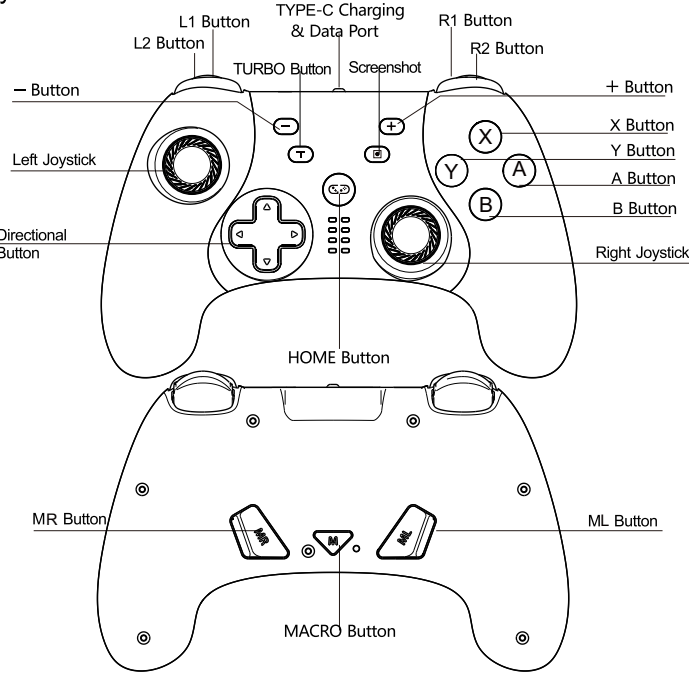

EN-01

● N-S Controller Mode

(Power on your N-S Console, then follow the steps to pair and connect your controller.)

Step 1:Find Controllers Option-Image1

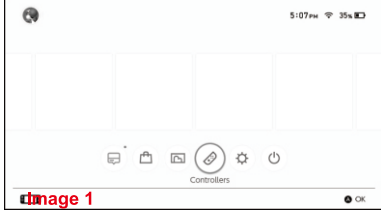


Image 1

Step 2:Click Change Grip/Order . -Image2

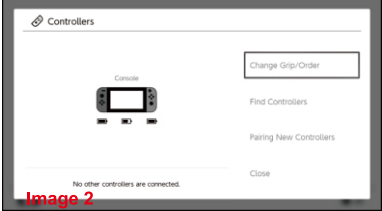


Image 2

Step 3:Press Y+HOME button to power on gamepad, until 4 LED lights blink in turn,waiting for the connection to complete.-Image3


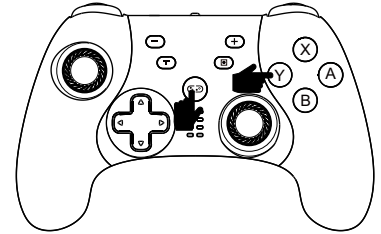


Image 3

5-7s later, the controller will connect to console automatically;



\* Please make sure turn off the Airplane Mode when you connect controller to switch console

EN-02

● Reconnect: Press HOME Button

If your controller was once paired and connected to your N-S console, press the HOME button to rapidly connect next time.

**Note:**

The gamepad supports pressing the HOME button to wake up the console in sleep mode. You just need to press the HOME button to complete the reconnection.

When one of the following conditions occurs, please refer to the connection method of the first pairing to reconnect.

1.Upgrade                      2.Reset                      3.Change the console.

EN-03

● Controller Mode & Operation

MODE	Switch Controller	Android HID Controller	MFI Controller	PC Controller	
				X-Input Mode	D-Input Mode
CONNECTION	Y+HOME	X+HOME	B+HOME	Cable Connection	
LED	LED1	LED1+LED4	LED 2	LED1,2,3	LED1+LED4
RECONNECTION	HOME	HOME	HOME		

● Sleeping Mode & Reconnect

**Sleeping Mode:** The controller will turn into sleeping mode automatically without any operation within 5 minutes.

**Wake up & Reconnect:** Press and hold the HOME button for 3 seconds, the controller will power on and reconnect the device which connected last time.

● Power Off

Press and hold the HOME button for 3-5 seconds, the controller will power off with all LED lights off.

\*\*\*\*Factory Motion Controls Calibration\*\*\*\*

Step 1:Please make sure your controller stays at power off status, then put it on flat surface.

Step 2:Press the"."B""HOME" 3 buttons simultaneously, the Group A indicators and Group B indicators will flash alternately.(LED1&LED2/ LED3&LED4)

Step 3:Press the "+" button and 4 LED indicators will flash alternately.

Step 4:After about 15 seconds, all indicators will turn off, which means the controller finish calibrating.

\*\*\*\*Calibrate Control Sticks\*\*\*\*

If the characters in the games is automatically drifting, please complete the "calibrate motion controls" by following :

Step 1: System Setting-Controller and Sensors-Calibrate Control Sticks

Step 2: Enter calibrate control sticks interface, operate it according to the guide on NS console.

EN-04


● Android Game Controller Mode

Step 1: Press X+HOME button to power on the gamepad, LED1+LED 4 will be twinkling and wait for pairing.

Step 2: Open the interface of Settings on android device, open Bluetooth.

Step 3: Scan the devices and get the name of STK-7049 , click the device into Pairing and Connecting automatically.

Step 4: LED1+LED4 indicator will be long on after connected successfully.

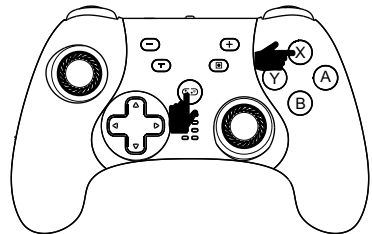

**Reconnecting:**

Press and hold the HOME button to power on the gamepad, it will connect automatically.


Note

1. The Android Game Controller mode allow player to play the android games from google play market, which the games can support game controller ;

EN-05


● PC Wired Controller Mode

X-Input Mode

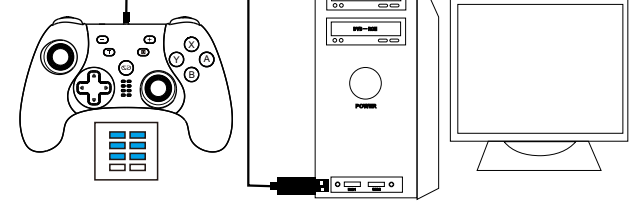

Connect the controller to PC with a type-c cable. After the windows system recognizes it, the ontroller starts to work, and the LED 1, 2, 3 are always on.

D-Input Mode

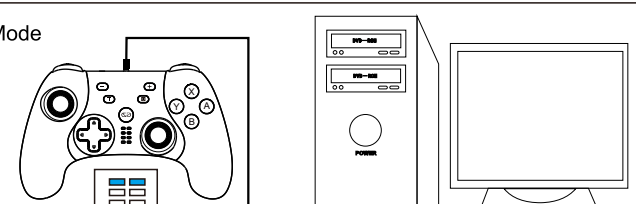

In the X-Input mode, press the HOME button to exchange X-Input to D-Input Mode.

EN-06

● Turbo / Auto Function

Buttons (which called short function buttons) can be set TURBO/ AUTO : A / B / X / Y / L / ZL / R / ZR button

Enable/ Disable the TURBO / AUTO speed function:

Step 1: Press the one of the function button+TURBO simultaneously , to enable the Turbo speed function.

Step 2: Repeat the step1 to enable the AUTO function.

Step 3: Repeat the Step1 to disable AUTO function.

Press the TURBO button simultaneously with the directional button UP / RIGHT / DOWN to adjust the TURBO speed.

Press the TURBO+Direction UP button to adjust the TURBO to middle speed.

Press the TURBO+Direction RIGHT button to adjust the TURBO to middle speed.

Press the TURBO+Direction DOWN button to adjust the TURBO to middle speed.

Press the TURBO button with 5 second to wait the LED 1,2,3,4 lights flash together with 1 second's vibration. Then all TURBO / AUTO function will be cleared.

EN-07

● Specification

Product name: Multifunction gamepad

Model number: STK -7049

Product size: 160x110x59mm

Product weight: 186g appr

Power supply: built-in 400mAh polymer battery

Charging interface: Type-c

Game time: 4-8h

Charging time: 1-1.5H

Packing: color box

Package Contents: gamepad, charging cable, instruction manual

● Charging Instruction

Charging Status: LED4 Flashes

Charging Full: LED4 long light

Charging Time: 1.5-2.0H

Low Power Indicate: LED4 Flashes

EN-08

● Macro Function

There are 2 programmable back button " MR / ML " on the back of controller, each of which can be programmed as combination of 1-16 function buttons.

Available for programming buttons: A / B / X / Y / L2 / R1 / R2 / and D-pad buttons.

**Programming setting steps:**

1st. Keep the controller under connection, simultaneously press the MACRO+MR button or ML button that needs to be programmed, for about 2 seconds, the 4 signal lights LED1-LED4 flash at the same time, which means the programming mode is turn on.

2nd. Then sequentially press multiple buttons you want to set (A / B / X / Y / LT / LB / RT / RB /D-pad), and the programmable button will record the time interval of each button.

3rd. Lastly, press the MR or ML button once again to save the setting, the signal lights return to continuous state, which means the programming setting of multiple buttons is completed.

**To clear single back button programming:**

Enter programming mode, then double-click the corresponding Back Button to clear.

**To clear all back button programming:**


Long press the "Macro" button for about 5 seconds. After the 4 signal lights flash 3 times simultaneously, the clearing is complete.

● Update

If there are problems for the connection while the console update, we can offer the update method as follows:

1. You can download the "Keylinker" app from google play or apple store and install it to your cellphone.

2.Follow the steps to update your controller.

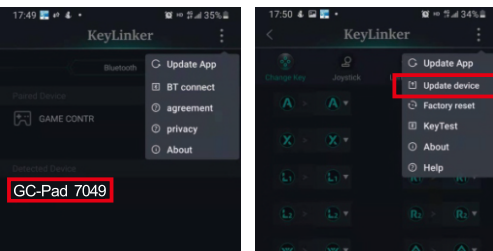

1. Search the controller

2. After connected, click "Update device"

EN-09

● FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

EN-10