


One. Product function diagram:

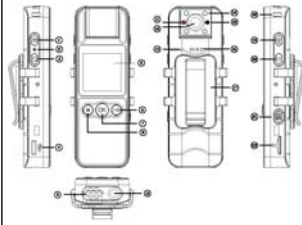

1. Power button 2. Reset button 3. Video recording/ return button 4. Type C port 5. Color screen
6. Album/ down/ delete button 7. Confirm button 8. Menu/ up button 9. Speaker
10. Stud location 11. Alarm light 12. Lens 13. MIMC 14. Infrared night vision light
15. Sensitive light 16. Indicator light 17. Back Split 18. Lanyard hole 19. Voice recording button
20. Photo button 21. Alarm light button 22. TF slot

This product is a multifunctional color screen digital camera with high-definition digital camera, photo, recording, alarm light, one key video recording, one key voice recording functions and supports external TF card. It is easy to operate, small and exquisite, beautiful and practical, and easy to carry. A practical tool for meetings, study, traffic law enforcement, travel, cycling, life, etc., recording every unforgettable moment in life in real time, the smooth and elegant design is suitable for the public and is favored by the majority of users.

This product only supports memory cards in FAT format. 32G memory card belongs to FAT format can be directly read. For the first time using memory card above 32GB, the machine will prompt that memory card is being formatted. It is recommended that when using more than 32GB memory card, there should be no other data in the card to avoid loss of data.

This product camera can rotate 180 degrees, can adjust the angle as needed as below.



A screenshot of the WhatsApp application interface. On the left, there is a QR code and a contact's profile card for 'JESSE' with a blue circular profile picture. On the right, there is a camera icon and a floating action button (a blue circle with a white plus sign).

1. Download and install Vidure APP.
2. iOS is downloaded from the Apple Store by searching Vidure.
3. For foreign android systems, searching Vidure on GooglePlay to download.
4. For Chinese android systems, downloading Vidure from the app store and install it.
5. In standby mode, press the menu button to find the WIFI switch option and turn it on.
6. To turn off WIFI, select Turn off.
7. Enter the mobile phone WIFI settings to connect to the WIFI name H82, the password is 12345678.
8. After the WIFI connection is successful, Screen icons light up, open the APP and click the camera icon in the middle to enter the operation of the camera.

A) Power on video/photo/audio/Alarm light
Long press the power button for about 3 seconds, the green light will be on with voice prompts, and enter standby.

1. Video Recording: short press the video button once, the voice prompts once, the red light flashes slowly to record, if you want to stop the record, short press the video button once, the voice prompts, the green light stays on to stop the record and save the video.
2. Take a photo: short press the photo button in standby mode, the voice prompts once, and the red light flashes once to complete a photo and save it.
3. Audio Recording: short press the audio button in the standby state, the voice prompts once, and the red light flashes once to complete audio recording and save it.

prompts once, the **yellow** light flashes slowly, and the audio recording starts. The display screen will show the recording time. Short press the audio button again, voice prompt once to save the file and return to the main page.

4. **Alarm light** and short press the **alarm** button once, the red and blue lights flash alternately with the sound of the alarm. Short press once to turn off the sound, and short press again to turn off the alarm light.

5. One-key video recording: in the shutdown state, long press the video button to automatically record, long press can't power off.

6. One-key video recording: in the shutdown state, long press the video button to automatically record, long press can't power off.

6. **Manual night vision**: Long press the photo button in the standby mode to manually turn on the night vision function.

7. OTG: this machine supports the OTG function.

8. **Capture**: You can press the photo button when video recording, picture will be stored in the album.

Note: 1. Before use, please insert the memory card first.

2. Shut down the card first when taking the card to avoid data loss or damage to the equipment and TF card.

B) Reset
If the device does not work under normal circumstances, freezes or cannot record, please short press the reset button to reset.

C) Connect the computer:
The device is connected to the computer with a USB cable, and the computer can pop up the removable disk to operate the SD card.
If it cannot be connected, please check whether the cable is plugged in properly, or replace it with a new USB cable.

D) Charging:
Connect to the computer USB interface or charger to charge the machine. When the battery is in charging state, the blue light is always on, and when the battery is fully charged, the blue light is off.

Note: 1. If the device cannot be turned on or is turned off after being turned on, it needs to be charged.
2. In order to better protect the product and fully charge it faster, please charge it in the shutdown state.
E) The device support charging while recording, and can record in a loop.

Item	Related parameters
Video format	MOV
Video resolution	2560*1440 (Optional)
Video frame rate	30FPS
Playback software	Operating system built-in or mainstream audio and video playback software
Image Format	JPG
Pixel	3264*2448/pixel (Optional)
Image ratio	16:9
Support system	Win7/Win8/WinXP/Win2000/Vista/Mac OS 10.5
Charging voltage	DC-5V
Interface Type	USB
Storage support	MicroSD (TF), up to 256G
Battery Type	Lithium battery

Use cautions: Please identify above by the relevant laws and regulations of the state, and do not use this product for any illegal purpose, otherwise you will be responsible for any damage.

About the battery: As the usage time increases, the battery working time will be shortened. If it has not been used for a long time, please fully charge it before use.

Precautions: Please do not use the device in the rain, and the device does not guarantee the integrity and security of the internal storage files.

Please backup your important files on your computer or other storage devices.

Recording quality: This product is not a professional recording equipment, and does not have the function of recording high quality audio files, it can meet your requirements.

Working temperature: -5°C—40°C.

Working humidity: 20%—90%, do not use the product in a humid working environment.

Power supply: The device has a built-in battery, and does not have a power supply port.

Photography/Illustration: Please use it in a well-lit environment. Do not point the camera directly at a strong light source such as the sun to avoid damage to the optical lens.


Cleaning requirements: Do not use it in an environment with excessive dust density, so as to avoid dust accumulation on the lens.

Affect the camera effect: The lens can be gently wiped with lens tissue or lens cloth to clear the camera effect.

Product description: This product is a precision electronic product, do not subject it to strong shock and vibration; please do not use it under strong magnetic field and electric field.

Supplementary Note: For other unspecified matters, please contact your local dealer.

一、产品功能示意图:

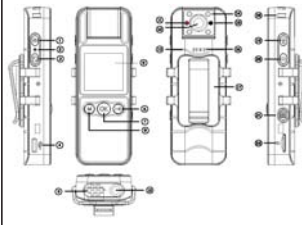

1. 开/关机键 2. 定位键 3. 变焦键/返回键 4. Type-C 接口 5. 彩屏 6. 相册键/下翻键/删除键 7. 喇叭键 8. 菜单键/上翻键 9. 扬声器 10. 静音位置 11. 警报灯 12. 镜头 13. 麦克风 14. 红外夜视灯 15. 红外感应灯 16. 指示灯 17. 筒壳 18. 挂绳孔 19. 录音键 20. 拍照键 21. 警报灯按键 22. TF 卡座

本产品是一款具有高清彩屏数码相机、拍照、录音、夜视红外灯、警强灯、一键录像、一键录音多功能的记录仪，支持外插TF卡，具有操作简便、小巧精致、美观实用、便于携带的特点，是会议、学习、交通执法、旅游、骑行、生活等的实用工具，实时记录生活中的每一个难忘的瞬间，光滑优雅的设计对大众都适用，深受广大用户青睐。

本产品只支持 FAT 格式的卡, 32G 内存卡属于 FAT 格式的可以直接读取, 首次使用 32GB 以上的内存卡机器上会提示 SD 格式化进行中。建议使用 32GB 以上卡时, 卡内不要有其它资料, 以免丢失资料。

1. 此产品摄像头可旋转 180 度, 可根据需要调整角度如果下图,



1. 下载安装暴风风 APP。
 - a. IOS 是在苹果商店下载暴风风者下载。
 - b. 国外 Android 系统可在 GooglePlay 搜索 Viidure 下载。
 - c. 中国 Android 在应用商店下载暴风风者安装。
2. 在你的手机上下载安装找到 Wi-Fi 开关 选项打开，关闭 Wi-Fi 时刻选择关闭。
3. 打开手机 Wi-Fi 设置连接 H82 开头的 Wi-Fi 名，密码为 12345678。
4. 连接 Wi-Fi 成功后返回桌面图标处，打开 APP 点中间摄像头图标，进入相机实际操作。

4. 开始/关机键/门灯：短灯长亮，语音提示，进入待机。

1. 报警：短报警长报警一次，声音提示一次，红灯闪烁并报警，如报警正常，短报警一次，语音提示，绿灯长亮并语音提示报警正常。

2. 解锁：在待机状态下短按解锁键，声音提示一次，红灯闪烁一次完成一张照片并保存。

3. 录音：在待机状态下短按录音键，声音提示一次，黄灯闪烁，开始录音，显示屏显示正在录音，在短按录音键一次，语音提示一次录音一次并返回主画面。

4. 关机：短按关机键一次，红灯闪烁并语音提示关机声音，短按一次关闭声音，再按一次关机。

5. 一键报警：在关机状态下短按报警键可以以语音报警，长按不能报警。

6. 一键静音：在关机状态下长按静音键可以以语音报警，长按不能关机。

7. 手动报警：在待机状态下短按报警键可下长按报警键可下长按报警键。

注意: 1. 在使用前, 请充满电再予。
2. 在取卡时先关机, 避免数据丢失或损坏设备和 TF 卡。

如果设备在正常情况下不能工作，死机，无法摄像时，请短按复位键复位。

设备利用 USB 线连接电脑, 电脑弹出可移动磁盘即可对 SD 卡进行操作。

D) 充电:
连接电脑USB接口或充电器,即可对本机进行充电,当电池处于充电状态时,蓝灯常亮
当电池充满电后,蓝灯熄灭;
注意:1、如果设备不能开机或者是开机之后关机,需要充电。
2、为了更好的保护好产品和更快的充满电,请在关机的模式下充电。

E) 设备可以插电边充边录功能, 可以循环录像。

项 目	相关参数
视频格式	MPEG
视频分辨率	2560*1440 (可选项)
视频帧率	30FPS
播放软件	播放系统自带或主流影音播放软件
图片格式	JPEG
像 素	4000*2992 像素 (可选项)
录像比例	16:9
操作系统	Win7/Win8/Win10/Win2000/Vista/Mac OS 10.5
接口电话	COM
接口类型	type-A
存储支持	MicroSD (TF), 最大支持 256G
电池类型	锂电池

八、注意事项:

使用场合: 请严格遵守中国国家相关法令, 不得将本产品用于任何非法用途, 否则后果自负。

文件安全：本产品非专业存储设备，不保证内部存储文件的完整性和安全性，请随时在电脑或者其他存储设备上备份您的重要文件。

数据品质：本产品非专业微录设备，不保证所摄录文件的画质能达到您的期望。

工作温度：-5℃—40℃。

工作温度: 20%—60%, 请勿将产品置于潮湿的工作环境。产品不具备防水功能。

其他事项: 该产品属于精密电子产品, 请勿使其受到强烈冲击、震动; 请勿在强磁场、强电场下使用。

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.