

The product name is **Bluetooth voice remote control** model name is **RC-36**.

## instructions

### 1. Bluetooth remote control pairing instructions

device name: RC-36



Press and hold the [ ] key] and [ ] key on the remote control at the same time for about 3 seconds to work the indicator flashing, indicating that you have entered pairing mode. Turn on Host Bluetooth - click host Bluetooth - Search for devices - Connect to the "RC-36" device name and connect. Stopping blinking after a few seconds indicates that the pairing was successful. If you can't pair up all the time, flash 2 times after 30 seconds and turn off and exit pairing mode.

### 2. Low power alarm

When the battery power is lower than 2.4V, Every time the user presses a key, Press any key, the red light flfashes for 3s, and the frequency is 1Hz

### 3. Auto sleep

Keep the remote control connected with the TV set at 4m for at least 1 hour without disconnection; When there is pairing information and the Bluetooth connection is disconnected, Press the "power key" and "pairing combination key" to not send the back connection broadcast. Any other key sends the back connection broadcast for 5 seconds, the back connection is successful, and the indicator flfashes for 3 times

### 4. sleep and wake up

Without any data interaction, the remote control keeps connected for 1 hour and then enters into the state of sleep disconnection, press any key to wake up the remote control, if still connected, then send the corresponding key Bluetooth code value; If you have entered the Bluetooth connection disconnect state, you will enter the backconnect state,After successful connection,Press any key to send the corresponding Bluetooth code value;

### 5. OTA

When the TV is turned on, the upgrade fifile of the remote controller is detected. If the upgrade fifile exists, the remote controller performs OTA upgrade, and the LED lamp flfashes in breathing light Shuo. At this time, the remote controller can't be used, and any buttons don't respond. After the upgrade is successful, the LED light stops flfashing, and the remote controller can be used normally at this time. If the upgrade fails, it will be detected and upgraded again at the next boot. After OTA fails, the LED light stops flfashing, and the remote controller returns to the old version for normal operation.

## 6 . Blue tooth remote control

### PID/VID

vendor:0x0B7A. product:0x0001

### FCC warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee

that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment