


Instruction Manual

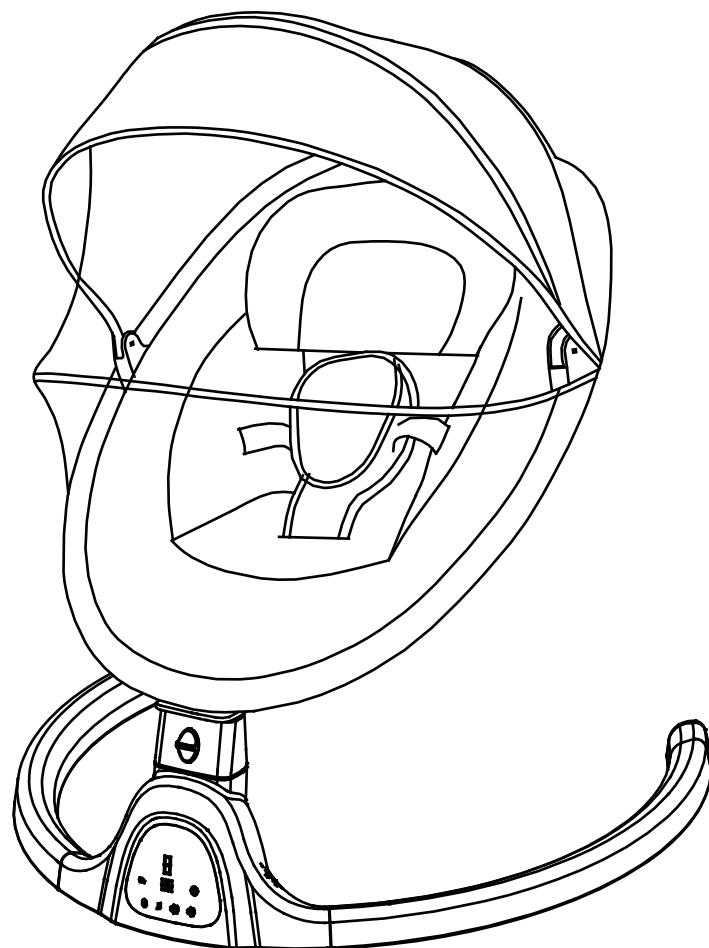

Before installing and using, please follow the instructions carefully

INDEX

Product Specifications	01
Component List	02 03
How to Assemble the Baby Swing	04
Power Supply	05
Remote Control Instructions	06
Safety Instructions	07 08 09

Product Specifications

Product Name	Baby Swing
Product mode	B008-UP
Input voltage	100-240V/50/60HZ0.3A
Output voltage	5-58VS100MA
Applicable age	0-12 Months 9KGS weight
Executive standard	EN71-1 EN71-2 EN71-3
Production date	Marked on the body of the goods
Warning	Do not use the non-matching adaptor

⚠ Warning

- (1) No short circuit of power terminals.
- (2) Keep the adaptor away from children while using.
- (3) Check the adaptor and accessories regularly, and if you find any damage, please stop using them.

Cleaning and Washing

Seat cushion: The seat cushion is removable and washable. It is recommended to wash by hand but not machine wash. After soaking it in water and adding soft detergent, use clean water to clean it, then wring out the water and place it flat out of direct sunlight to dry.

Inner filler: fireproof hard resin cotton. Warning! Machine washing, bleaching and tumble drying are prohibited.

Parts Instruction


Please check the quantity of items;
Please contact the shop if there are any missing parts.



Seat Cloth ×1




Motor ×1

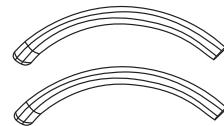

Foot Tubes ×2



Seat Tube Screws
(6.0*12mm) ×4

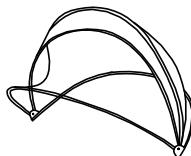

Canopy with
Mosquito Net ×1






Screws for Foot Tubes
(3.5*12mm) ×4

How to assemble the baby swing


1. Assembly method (This should be done by an adult)

Please insert the plastic on both sides of the base into two foot tubes, and tighten the 4 screws (3.5*12mm) to 4 holes with the screwdriver.

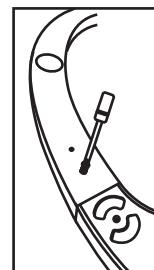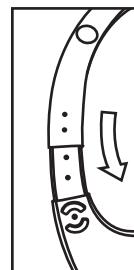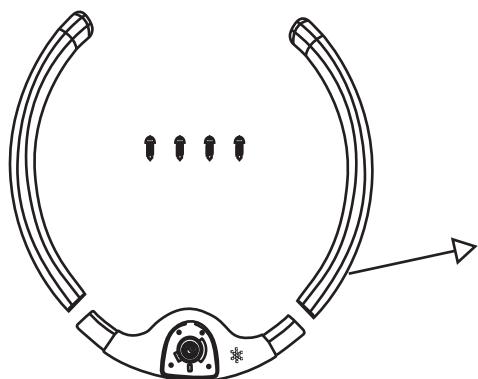


2. Assembly method (This should be done by an adult)

Expand the cradle tube and insert the plastic plug into the tube. (as illustrated)

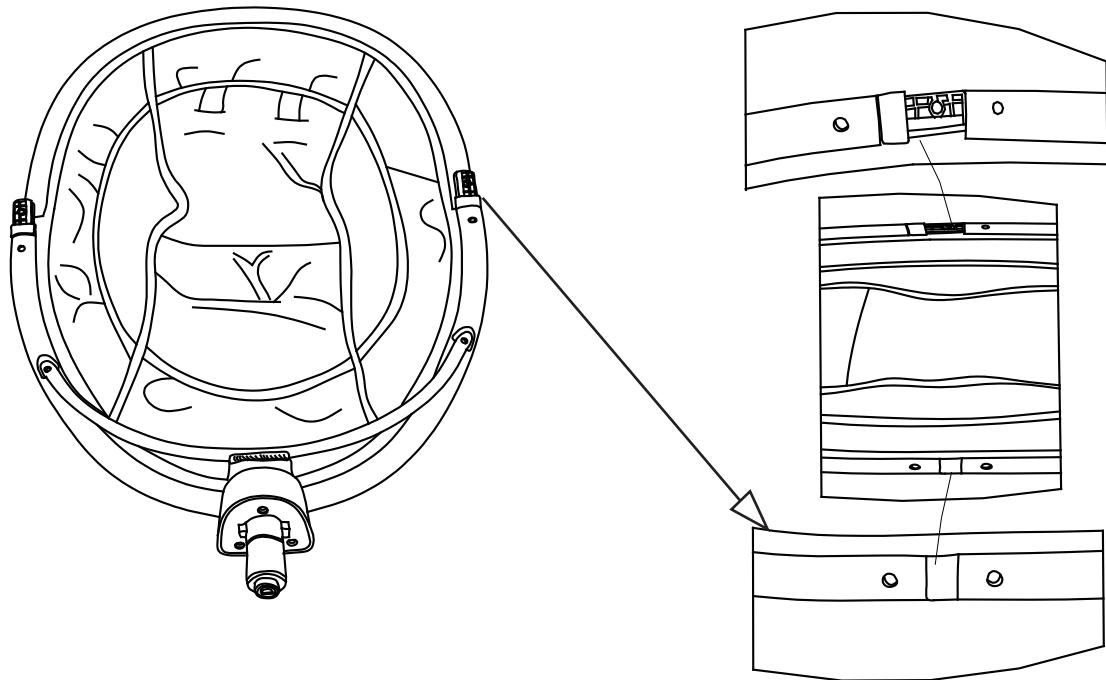

Please lock in 4 (6.0 * 12mm) screws. (as illustrated)

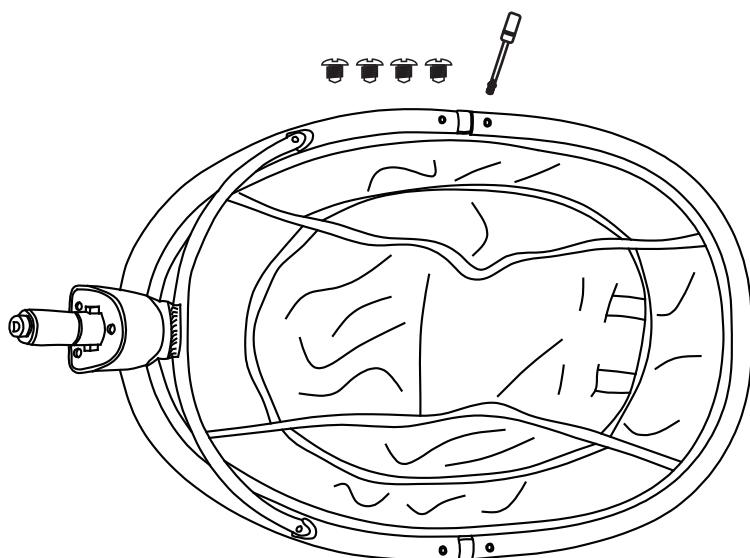


Using Product


The pads and toys are machine washable. Wash them separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat, and remove promptly. The frame and toy bar can be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse this product in water.

Assembling Detail

Put the frame in the base, option ① Swing+ Toy bar, ② Swing+ Canopy

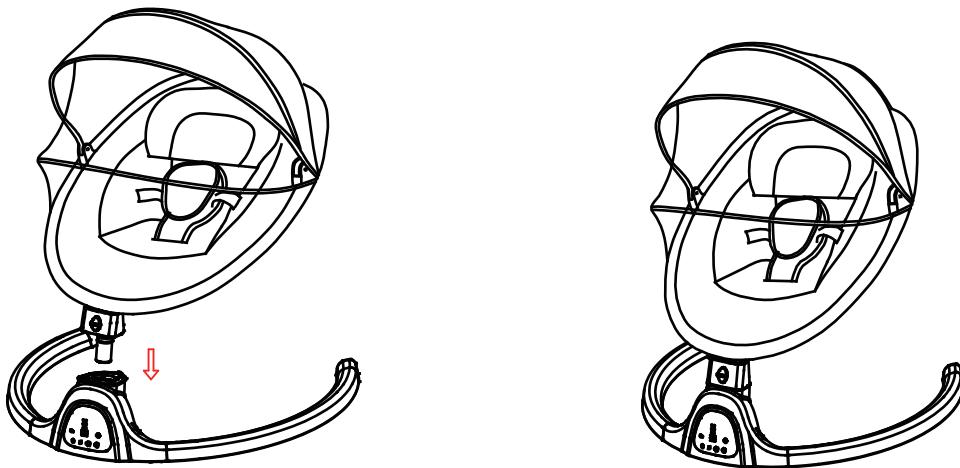


Pull out the metal plate and pull up the seat when disasse


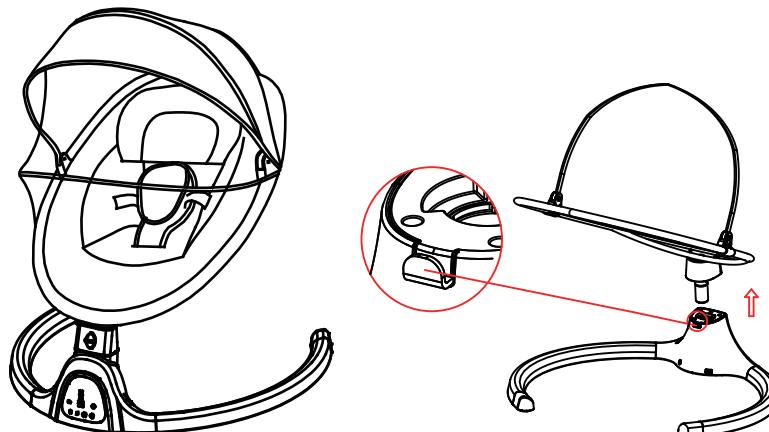


Product Material

Number	Name	Material
A	Base	Plastic + Aluminum Tube
B	Pedestal	Fabric+ Aluminum tube + Plastic
C	Canopy	Fabric+ Plastic

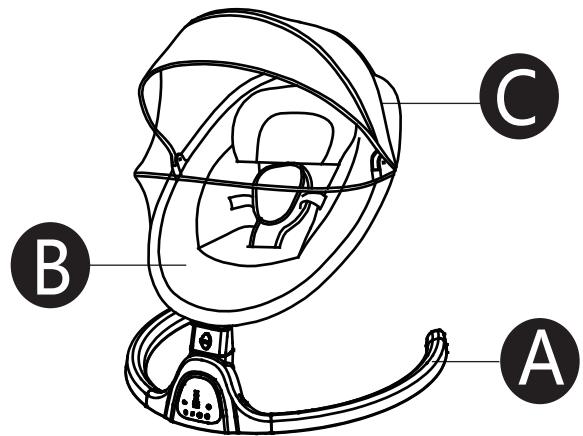


Power Supply

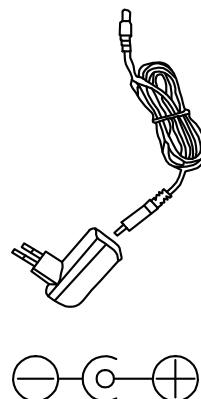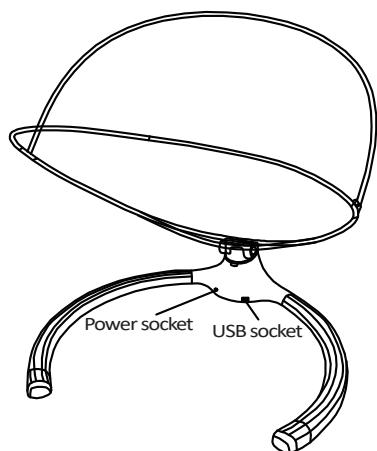


- * **One:** The standard power supply is the 5mm adapter supplied with the product to supply power, the adapter input voltage is AC100-240V, 50/60Hz; the output voltage is DC6V, 1.0A.
- * **Two:** The power bank can be used for temporary power supply, but because the voltage is only 5V, there may be insufficient power, so long-term use is not recommended.


Remote Control Instructions

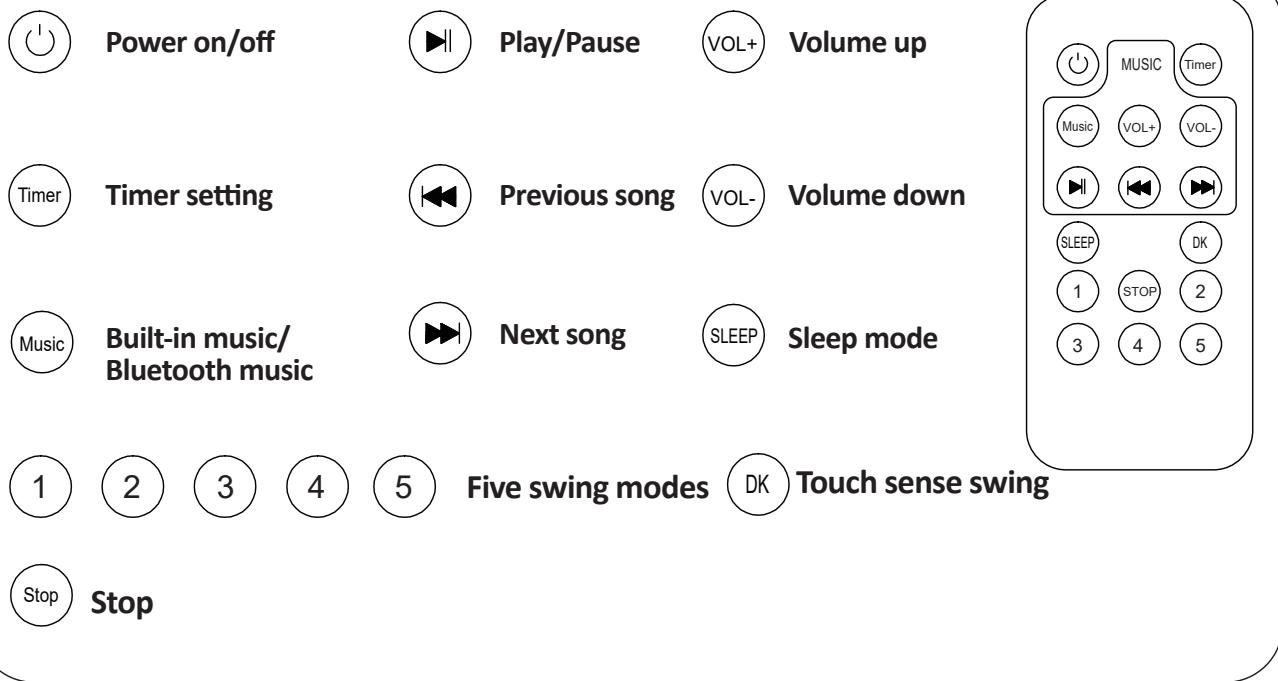

Panel

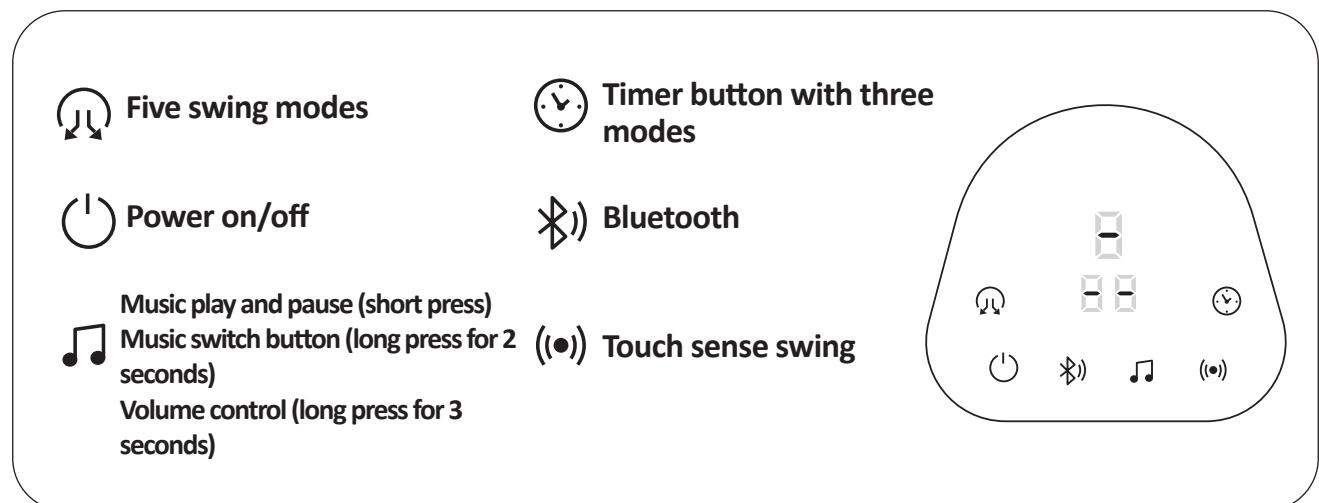


Safety Instruction

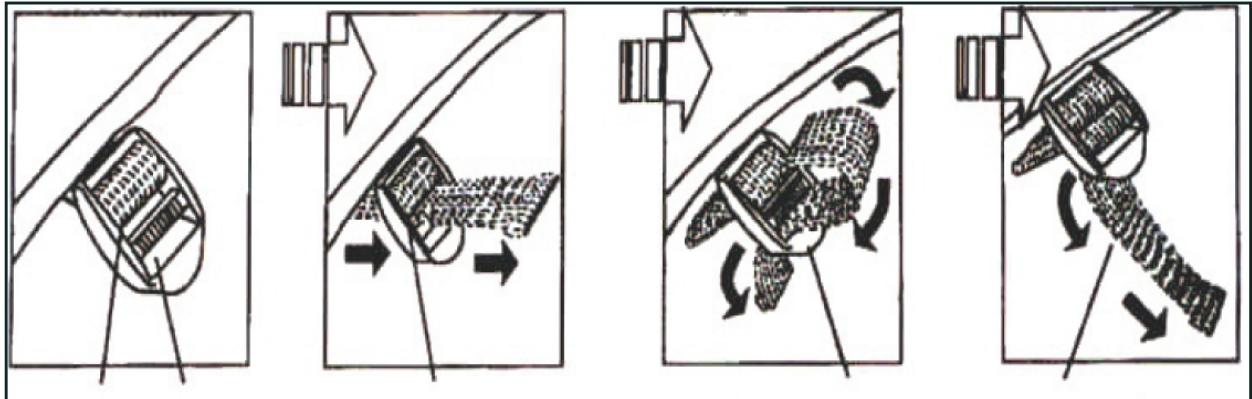

Top hole bottom hole

Through the tape form the top hole first and, then through the bottom hole, harden the tape.

Put the baby into the seat ,buckle up the seat belts

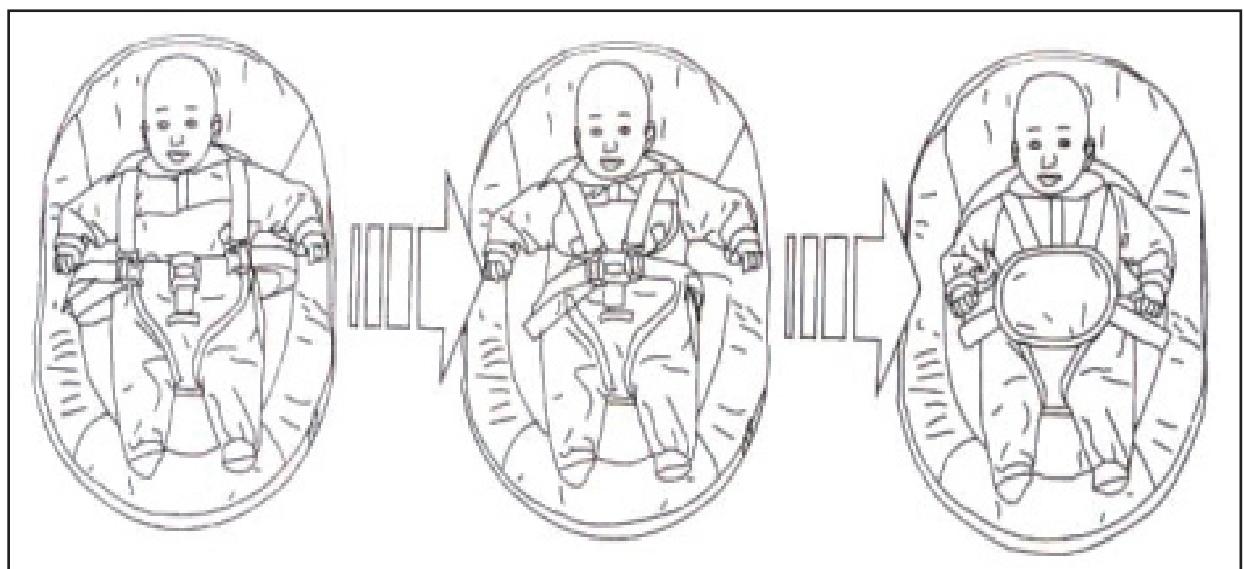

Safety Instructions

⚠️ WARNING

1. Keep the seat belt on while using it.
2. Do not leave the child unattended.
3. Applicable age: 0-12 months old.
4. The maximum weight for this product is 9 kg.
5. Do not move or lift the product by the mosquito net.
6. Do not move or lift the product when the child is in the seat.
7. Do not hang other items from the canopy except the supplied toys.
8. Do not place the product at a high position (table top, stairs, or other high position from the ground) as it may fall and cause injury.
9. It is dangerous to use this product on an elevated surface.
10. Do not use the product on soft surfaces (sofa, bed) to avoid falling and causing suffocation.
11. Do not use it for babies who can stand up independently to prevent hidden dangers, such as being entangled in the seat belt or strangled!
12. This product is not classified as a toy.
13. When the music player is connected, please make sure the volume is set to a low voice initially.
14. Do not use if any parts are missing or broken. Never substitute parts.
15. Keep the product away from fire.

FALL AND STRANGULATION HAZARDS: Infants have suffered head injuries falling from swings and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 9 months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.
- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.

ALWAYS place swing on floor. Never use on any elevated surface.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.