

JL-12中英文说明书, 风琴折, 单黑, 折好后成品尺寸: 50*70mm
材质: 80g双胶纸
印刷的时候去掉成品线

蓝牙耳机

使用说明书

使用前请仔细阅读本指南并保留备用

产品概述和包装清单

规格参数	
传输距离	10 米
待机时间	24H
耳机充电容量	60mW×2h
约 60H	
充电电池容量	400mAh
充电时间	约 1.5H
音乐时间	8H
充电方式	Type-C

开关机

开机: 关闭状态下，长按 MFB 键约 3 秒→开机
关机: 打开充电盒，耳机自动开机。
手动关机: 开机状态下，长按 MFB 键约 5 秒→关机
自动关机: 将耳机放入充电盒并合盖，耳机自动关机。

蓝牙配对连接

蓝牙配对：耳机开机进入配对状态。蓝牙耳机搜索耳机关闭时，指示灯常亮表示配对成功。如果搜索不到设备，请长按开机的蓝牙重置按钮（见首次连接成功图），开机后以连接最后配对的设备。

蓝牙断开连接

连接成功图：当关闭手机蓝牙或取出耳机有发声效果时，无碍（无碍解除 10m）。则蓝牙断开连接，若 5 分钟内未成功与设备进行连接，则自动关机。

超时未连接

蓝牙耳机任何连接状态，持续 5 分钟自动关机。

按键操作

L 左耳 R 右耳

游戏/音乐模式

① 双击 MFB 键
② 单击 MFB 键

启动/暂停/接听

① 单击连接状态下长按 MFB 键约 2 秒(需手机支持功能)

充电说明

耳机充电：将耳机放入充电盒并合盖。充电中耳机红灯常亮，充电完成后常亮；充满后耳机红灯灭，充电器熄灭。

常见问题

- ① 耳机不开机：检查电量是否充足，电量长时间不使用，电池会进入休眠状态，此时需充 30 分钟后开机。
- ② 耳机与手机连接不上：请重新打开手机蓝牙。
- ③ 耳机无法正常使用：请确认耳机与手机已配对。
- ④ 请确认耳机在正常工作范围。
- ⑤ 耳机没有声音：请确认耳机已完全充电。
- ⑥ 耳机音量太小或没有声音：请调大手机音量。
- ⑦ 耳机无法接听电话：请确认耳机是否与手机正常连接。
- ⑧ 请确认耳机在正常工作范围。

注意事项

- 切勿使用具有腐蚀性的清洁剂清理本产品。
- 切勿在本产品中放置潮湿物品，如食物等。
- 切勿将本产品长时间受到阳光直射。
- 请勿将本产品置于火中，避免发生爆炸。
- 请勿拆卸拆开本产品进行任何维修，因为并非包含任何维修组件。
- 切勿将耳机与易燃物靠近。
- 为了更好的保护您的听力，请勿把音量调得太大会导致听力受损。
- 当处于充电状态时，请勿触摸本产品，应把本产品与电源分开，再进行充电。
- 请勿让儿童玩弄本产品，最小的零件可能会引起儿童的窒息危险。
- 如果长期期内不打算使用本产品，请将它们存储在干燥的环境中，并每月至少为耳机充电一次以延长寿命，避免电池的过度放电。

注意

针对不可回收电池的电子产品，电池必须回收妥善处理，针对不可拆卸电池的产品，禁止拆解。

如果电池使用不当，可能会导致火灾或爆炸，从而造成烧伤和其它人身伤害；如果电池漏液，应小心并遵照当地的电池处理相关法律法规及要求立即弃置电池。

产品中有毒物质名称及含量									
部件名称		有害物质							
		铅 Pb	镉 Cd	汞 Hg	六价铬 Cr(VI)	多溴联苯 PBBs	多溴二苯醚 PBDEs	邻苯二甲酸酯类 Phthalates	镍 Ni
塑料件	PC	0	0	0	0	0	0	0	0
橡胶件	TPR	0	0	0	0	0	0	0	0
金属件	Aluminum	0	0	0	0	0	0	0	0

本表格依据 SJ/T11364 的规定编制。

X 表示该有害物质在该部件所有均质材料中的含量均符合 GB/T26572 规定的限量要求。

X 表示该有害物质在该部件的任一均质材料中的含量超过 GB/T26572 规定的限量要求，且目前未有适当的替代替代方案。

产品质量保修卡	
产品型号	
商品产地	
用户姓名	
销售地点	
销售日期	
销售商名称	
销售商联系电话	
维修记录	


* 在接受售后服务时必须提供此保修卡，请妥善保管。

WIRELESS EARPHONE

USER MANUAL

Please read this guide carefully before use and keep it for future use.

Product overview and package list



Package list: The packaging box contains wireless earphones, charging cables, and user manuals.

Specifications

Transmission distance	10m
Earphones battery capacity	60mAh*2
Charging case battery capacity	400mAh
Music time	8H
Talk time	3H
Standby time	60H
Charging time	1.5H
Charging port	Type-C

Bluetooth disconnection

After connecting successfully, if you turn off the bluetooth of the phone or exceeds the effective Bluetooth connection distance (no-obstacles environment 10m), the Bluetooth will be disconnected. If the device is not successfully connected within 5 minutes, it will turn off automatically.

Power On/Off

Power on manually: long press the MFB button about 3 seconds to turn on the earphone.
 Power on automatically: Open the charging case, the earphones will power on automatically.
 Power off manually: long press the MFB button 5 seconds to turn off.
 Power off automatically: put the earphones in the charging case and cover the lid.

Pairing

Turn on the earphone to enter pairing mode, Bluetooth device will search pairing name. Then press pairing name to connect. (If the pairing name can't be found, please turn off your phone's Bluetooth and reconnect). After the first successful connection, the earphone will automatically pairing in next time.

Unconnected by overtime

The earphone on the pre-pairing status, not connected with device and connecting unsuccessfully in 5 mins, it will turn off automatically.

Function

+

L R

Charging instructions

Earphone charging: Place the earphones in the charging case and cover the lid. The earphones indicator light is steady when charging and the indicator light of charging case is steady while, the indicator light of earphone and case is turn off when fully charged.

Charging case charging: Plug the Type-C cable into the Type-C port of the case. The case indicator light shines red steady when charging, the indicator light is steady on red when fully charged.

Restore factory settings

When there is no interconnection between the left and right ears or the device cannot be paired, the following steps can be followed to reset:

1. Delete the pairing name on the phone first.
2. First the left earphone to be disconnected, then touch the MFB button 5 times, the left earphone is reset. Then take the right earphone out of case and touch the MFB button 5 times, the right earphone is reset.
3. Turn on the left and right earphones. Please follow the "Pairing" steps to reconnect.

Common problem

Earphone cannot be turned on:

- Please check if the earphones have sufficient power, and then charge the earphones for 20 minutes before turning on.
- Please place them in a environment and reinsert the earphone at least once to extend their life and avoid extreme temperatures and humidity.
- Make sure your device's Bluetooth is enabled.
- Make sure the earphone is paired with your device.

Warning

- Batteries must be recycled or properly disposed when the product becomes obsolete. Do not disseminate the batteries when the product/batteries can't be recycled.
- If the battery is not used properly, it may explode or catch, causing burns and other injuries. If the battery leaks, be careful and dispose of the battery immediately in accordance with local laws and regulations on battery handling.

FCC

Do not use wireless devices during flight or close the product.

- Do not use this product to heat or be near fire sources, such as cooking stoves.
- Do not expose the product to direct sunlight for a long time.
- Do not dispose of this product to prevent fire or avoid explosion.
- First the left earphone to be disconnected, then touch the MFB button 5 times, the left earphone is reset. Then take the right earphone out of case and touch the MFB button 5 times, the right earphone is reset.
- Do not use the product when it is charging. Separate the earphones from the charger before during charging.
- Do not use this product to play with the product, small parts may cause choking hazards to children.
- If you do not intend to use the product for a long time, please store the product in a dry environment and avoid extreme temperatures and humidity. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a different power outlet or a circuit different to that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for portable device: The device has been evaluated to meet general RF exposure requirements. The device can be used in portable electronic equipment without restriction.

Product Quality Warranty Card

The warranty card and instructions for use when receiving the service, please keep it properly.

Model	
Commodity Origin	
User Name	
Sales Location	
Sale Date	
Seller's Name	
Seller's contact number	
Repair Record	