


VIVANT

Where Temperature and Terroir Meet

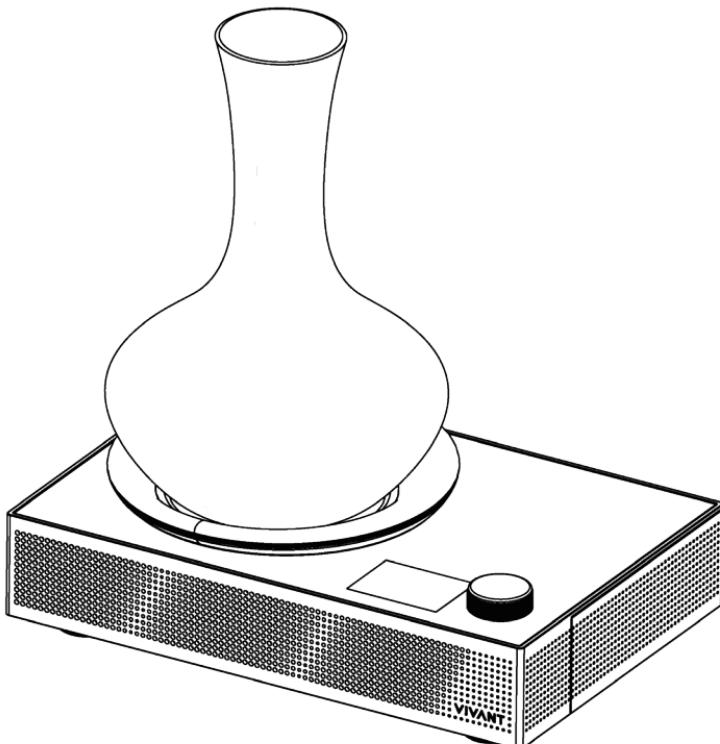


Titan Portable Decanter Chiller

User Guide


How to Use

1

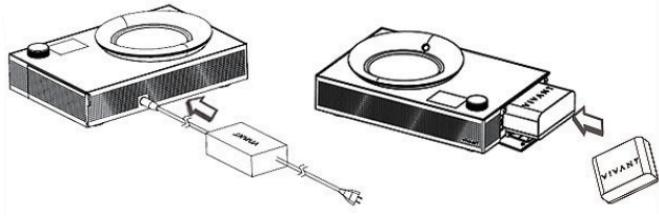


Plug the charging cord into the charging port or use the battery to activate the VIVANT Titan Portable Decanter Chiller.

2

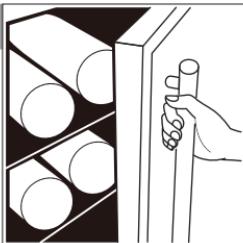


Get wine from your wine cellar or refrigerator.

3

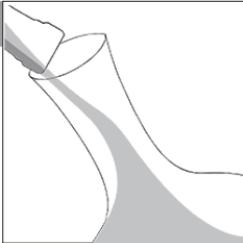

Pour the wine into the decanter.

4

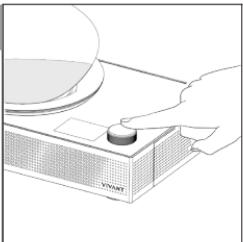


Long press the power button for 2 seconds to activate the Titan Portable Decanter Chiller.

5



After setting up your desired temperature, you may enjoy your wine, as the temperature will be maintained precisely by the Titan Portable Decanter Chiller.

Charging

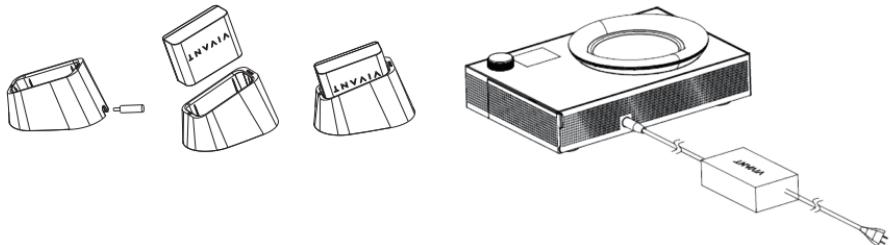

① Offline charging:

Insert the battery pack into the charging dock, and wait until the indicator light turns from red to green, indicating that the battery is fully charged.


② Plug-in charging :

Make sure the power of the main unit has been switched off, insert the battery into the VIVANT Titan Portable Decanter Chiller, and plug the charging cable directly into the charging port.

Notices

- Please charge the battery of the device after the first use or prolonged storage before using it again.
- To ensure proper heat dissipation, please leave adequate space around the main unit.
- To extend the battery life, it is recommended to charge it after each use. The bottom of the decanter should be flat and in close contact with the cooling plate for optimal heat conduction.
- The battery is custom made for VIVANT products only, do not use non-product chargers to charge, and disassembling the battery is strictly prohibited.
- VIVANT portable decanter chiller with temperature control contains electronic components, please do not place it in high-temperature environments such as dishwashers, microwaves, or ovens.
- This device should only be used by individuals with sufficient knowledge and experience or under the supervision of a responsible person.
- Children should be supervised to ensure that they do not play with the device.

Indicators

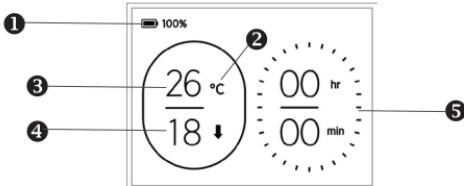


① Battery life ③ Current Temperature ⑤ Operation/Decanting Timer
② Switch °C/°F ④ Target Temperature

Indicator / Quick Guide


Indicators	LED Indicator / Quick Guide
	VIVANT Press and hold the button for 2 seconds to turn on the device. After approximately 3 seconds, you will hear a startup sound and the logo screen will be displayed for 3 seconds.
	Then the welcome screen will be shown for 3 seconds, and then the startup screen will appear.
	On the power-on screen, the bottom-left indicates the set temperature, the top-left shows the current ambient temperature, the numbers on the right represent the running time since startup, the top-left corner displays the battery status, and the top-right corner indicates the Bluetooth and sound effects.
	 Short press the rotary button, the screen will flash, and continue to short press to select the desired setting item.
	 Short press the rotary button once to start adjusting. Rotate the knob clockwise or counterclockwise to set up the desired temperature. ~ Clockwise → increase the temperature ~ Counterclockwise → decrease the temperature
	Short press the button again to switch between Celsius and Fahrenheit temperature display. Rotate clockwise to select °C, rotate counterclockwise to select °F.
	Short press the button twice to return to the initial set up mode. *Please note that the setting mode ends automatically after 8 seconds of inactivity.
	Once the target temperature is reached, the display will show "hold," and the border surrounding the temperature indication will turn blue.
	VIVANT Press and hold the knob for 2 seconds till display the logo screen, and it will shut down after 5 seconds.

Device Description

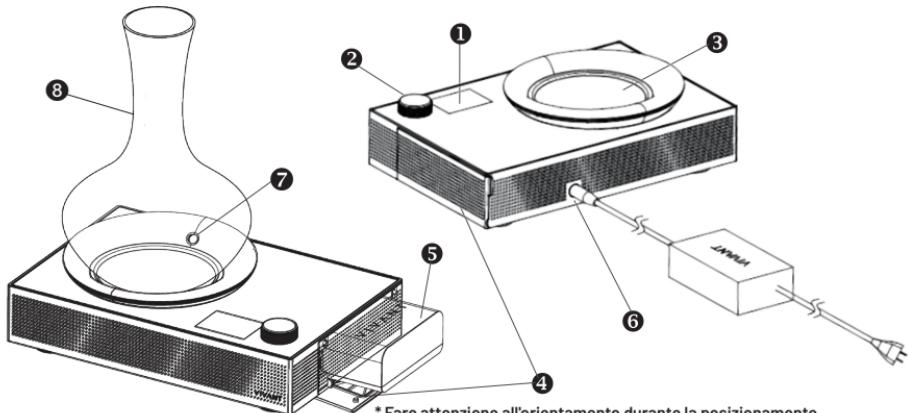

1 LED Display Control Panel	5 Rechargeable Lithium Battery
2 Control Knob	6 Charging Socket
3 Cooling Plate	7 Infrared Temperature Sensor
4 Battery Compartment Cover	8 Glass Decanter

- ▲ The battery life will gradually decrease over time, depending on usage. It is recommended to replace the battery every 2 to 3 years.
- ▲ To replace the battery, pull out the battery cover and use your finger to press the latch located at the bottom of the battery compartment. The side marked with the VIVANT logo should face upwards, then push the new battery pack all the way in.
- ▲ Temperature range: 8~20°C / 46~68°F
- ▲ Please use the power adapter and cord in the box. The power adapter can supply charging method and the VIVANT Wine Chiller

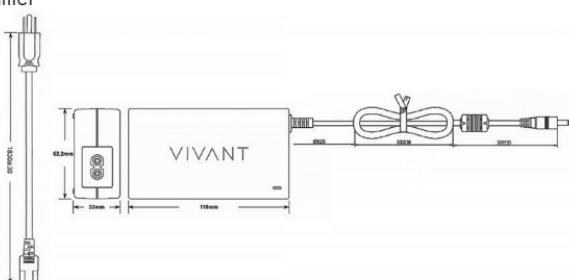

FCC WARNING

FCC WARNING

This device complies with **Part 15 of the FCC Rules**. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to **Part 15 of the FCC Rules**. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

To maintain compliance with **FCC's RF Exposure guidelines**, This equipment should be installed and operated with minimum 20 cm distance between the radiator and your body: Use only the supplied antenna.