

anybuds Clip说明书

67mm*67mm

anybuds

7.0 Specification

Support Bluetooth profile	A2DP, AVRCP, HFP
Transmission Distance	≥10m
Speaker type	Φ13mm+2
Impedance	32Ω
Earbuds battery capacity	35mAh
Charging time of earbuds	≤1.5 hours
The battery capacity of charging case	3000mAh
Charging time of the charging case	≤2 hours

8.0 Waterproof

Waterproof for daily use, but not for swimming under water.
*Please note that the phone's Bluetooth signal can not be transmitted underwater.

Not for swimming under water

Notes for signal transmission distance (as shown below)

Thank you for purchasing the anybuds authentic product.

FC RoHS CE UKCA Recycle

anybuds

Warning!

- Do not dismantle or refit the product to avoid malfunction or fire hazards.
- Keep away from corrosive liquids.
- Keep away from extreme ambient temperatures below -10°C or above 50°C.
- Keep away from children and pets.
- Do not touch the earbuds with sharp objects.
- Do not use the product in thunderstorm weather.
- If it has not been used for more than a month, please charge and maintain it in time to ensure that it is safe.

SPECIAL REMINDER:

Wipe the hardware contacts of the headset and charging box when the headset is not charging.

anybuds Clip

User Manual

anybuds

1.0 Product diagrammatic sketch

2.0 Packing list

anybuds

3.0 Wearing steps

Ensure the speaker hole is facing into the ear.
Speaker hole facing outward is not the correct way to wear the earbuds.

4.0 Operation of earbuds

4.1 How to pair

- Take out the two earbuds from charging case, they will turn on automatically and will connect each other within 10 seconds.
- The main earbud flashes red and blue alternately, and the secondary earbud light turn off (pairing mode).
- Search for pairing name (anybuds Clip), and select it in your mobile.

4.2 Another method of turning on & Turning off

Turn on:
Tap and hold the Touch Control on both earbuds for over 3 seconds.

Turn off:
1. Touch the Control button 5 seconds will turn off when earbuds in playless status.
2. The earbuds will turn off automatically after it is disconnected for more than 5 minutes.

anybuds

4.3 Reset

If you accidentally get only one earbud work, or fail to pair each other, please reset it:

- Delete all [anybuds Clip] Bluetooth records on the phone, then turn off the Bluetooth.
- Pick up two earbuds from charging case, then clicking the both earbuds twice quickly.
- The reset will be done when the blue light flashes rapidly, and then one of the earbuds red and blue light blinking alternately.

NOTE: In case there is connection unsuccessful in your devices, please delete all historical records of [anybuds Clip] and try the pairing process again.

5.0 Charging

5.1 Charging the earbuds

1. Put the earbuds into the charging case, they will power off & be charged automatically. When the red LED lights up, it means that the earbuds are being charged from charging case. 2. The red light will turn off when the earbuds are fully charged.

5.2 Charging the charging case

Please use the 5V1A adapter to charge the charging case, which can be charged with a computer USB or other USB interface charger.

6.0 Button operation

6.1 Earbuds LED Indicator

Turn on	Blue light flash for one second
Turn off	Red light flash for one second
Pairing status	The main earbud flashes red and blue alternately, and the secondary earbud light turns off

anybuds

Paired with the phone	Non-flashing light
Charging process	Red lights on
Fully charged	Red light goes out

6.2 Music operation
(Operation in wearing of double earbuds)

6.3 Calling control

6.4 Voice assistant

NOTE: If you accidentally get only one earbud paired with phone, please make sure both earbuds have been turned on. Tap and hold the unpaired earbud for 3 seconds to turn on. If necessary, please try "Reset" options to restore to factory settings.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.