

Turn ON

When first turned on, the light defaults to motion sensor mode with a 15-foot detection range.

Motion Sensor

Sensing Time: 1 minute
Activate: Green flash,
Deactivate: Red flash

Sound Control

Flashes in sync with sound.

Change Color

- Single click: solid color mode
- Double click: smooth mode
- Click again: return to solid color

7-Color Cycle Smooth Mode

Turn OFF

Using the remote to turn-off will keep it on standby, leading to battery drainage. To save power during brief inactivity, please use the light's ON/OFF button to switch it off.

Adjust Brightness

10 Brightness Settings (10%-100%)

Remaining Battery

- 4 Red Flashes: 100% Battery Remaining
- 3 Red Flashes: 75% Battery Remaining
- 2 Red Flashes: 50% Battery Remaining
- 1 Red Flash: 25% Battery Remaining

7-Color Cycle Strobe Fade Mode

7-Color Cycle Fast Flash Mode



Remove the plastic battery pull tab before using the remote control.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.