

04. Bluetooth use

Bluetooth mode

(1) Bluetooth connection: the default is Bluetooth when booting, enter Bluetooth mode or press the "M" button to switch to Bluetooth mode, turn on the Bluetooth scan of the mobile phone, click Pair after searching for "AB4063", and there will be a prompt tone after successful connection. When Bluetooth pairing is successful, the Bluetooth indicator lights up steadily.

(2) Play music: Open your mobile phone or other Bluetooth device, download and play your favorite songs to play,

(3) After the machine is connected with the mobile phone once, Bluetooth has a memory function, which can be automatically connected or manually connected after booting, and if it needs to be disconnected, it can be disconnected through the Bluetooth device of the mobile phone.

TF card mode

(1) Insert the TF card, the machine will automatically carry out the rear insertion priority playback, and there is a prompt tone When the TF card is inserted, you can switch by pressing the "M" key shortly,

AUX (External Audio Input) mode

(1) Insert the AUX external audio cable, the speaker will automatically play back and prioritize, and there is a prompt sound
(2) When the AUX/TF cards are inserted at the same time, you can switch by pressing the "M" key shortly,

Musical light description

This product has a variety of music effect lighting effects optional, the default is full-color rotating lighting effect when booting, short press the light key to switch a lighting effect, long press the light key on/off the light

Wireless microphone use

The speaker and microphone are turned on at the same time, and the 2.4G wireless signal is automatically paired, at which time the user can start shouting microphone, and at this time, the user can adjust the button to his favorite style according to his hobby. Note: The size of the accompaniment music can only be adjusted when the microphone is switched to accompaniment mode; Reverb mode can only adjust the reverb multiplier when the microphone switches to reverb mode;

03

05. FM operation mode

FM operation mode: double-click the mode button to switch to the search mode, single press the play/pause button to start automatic channel search, automatically save the station after the search is over, long press the next song to select the station (Note: when using FM, plug in the charging cable as an antenna)

06. Charging instructions

1. When the battery power is too low, the product will automatically shut down;
2. Use the accessory USB charging cable, connect the USB interface of the standard mobile phone charger to charge, and the charging indicator light is red, indicating that it is charging;
3. Normal charging for 4 hours, after charging, the red light will automatically turn off;
4. Normal continuous use time: about 4 hours;

Warning:

1. If the machine has smoke or other abnormal phenomena, please contact our after-sales service
2. If the inside of the machine is exposed to rain or moisture, please put the machine in a ventilated place to dry.
3. Do not bake this machine with high temperature, otherwise it is easy to burn or make the internal components of the machine fail.
4. This product must not be exposed to excessive heat such as sunlight, fire roasting or similar.
5. Do not throw to avoid falling damage.
6. If consumers use power adapters for power supply, they should purchase power adapters that are CCC certified and meet the requirements of the standard

04

07. Product technical parameters

Brand:GojoDooq
Model:AB4063
Pickup: Capacitive microphone
Speaker impedance: 4Ω
Charging power supply: DC 5V
Bluetooth version: 5.3
Process manufacturing: ABS material process
Speaker power: 115W
Frequency range: 100Hz-10KHz
Maximum sound pressure level: >115dB 1KHz THD<1%
Reverb Mode: Built-in mix sounds
Power supply mode: built-in 18650

08. Product information

Three packs of vouchers

When this product fails, the customer can enjoy the three-guarantee service with a valid ticket and warranty card (the warranty card must be completed immediately when the customer purchases the machine),

Matters not covered in this clause shall be implemented with reference to the provisions of the National Three Guarantees Law.

Tips

Improper use of the product, easy to cause the product itself, or may endanger the safety of people and property;
If the consumer violates the product manual, improper use, caused personal and property damage, will bear all the consequences, the company will not bear any legal responsibility;

Quality Assurance:

The company's products follow the national industry implementation standards, which is indeed the company's product quality problems, and the warranty period is 12 months from the date of purchase,
(If the product is damaged due to abnormal use, it is not covered by the warranty)

05

WARNING

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

06



Wireless K-song Bluetooth speaker



User manual




AB4063

Before using this product, please read this instruction manual carefully and follow the instructions to operate this product correctly, please keep this instruction manual properly for reference

  01. Schematic diagram of audio function

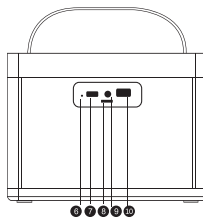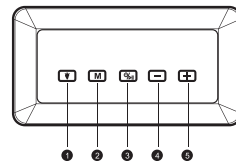

01

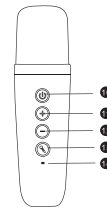

02. Audio button operation

- 1 Light key:
short press to switch the light effect, long press to turn the light on/off
- 2 M key:
short press to switch Bluetooth, USB, TF card, AUX mode, double-click to force disconnect Bluetooth; (Note: TF card and AUX mode can be switched only if the corresponding device is connected)
- 3 Power on button:
short press play/pause, long press on/off
- 4 - Key:
Short press volume down, long press previous song
- 5 + Key:
Short press volume plus, long press next song
- 6 Charging indicator hole, red light is always on when charging, full electric light off;
- 7 TYPE-C charging interface
- 8 TF card interface
- 9 AUX interface
- 10 USB interface

03. Microphone button operation

- 11 Power on button:
long press to turn on and off; Short press to switch: microphone on/off; Double-click to control speaker playback pause;
- 12 + number key:
short press to adjust microphone volume plus, accompaniment volume plus, reverb multiplier plus; Long press to control the next song on the speaker;
- 13 - Number key:
short press to adjust the microphone volume reduction, accompaniment volume reduction, reverberation multiplier reduction; Long press to control the previous song on the speaker;
- 14 Microphone keys:
short press to switch: KTV mode, professional mode, original sound, loli, monster; Long press to cancel vowel on/off; Double-click the microphone, reverb, accompaniment mode switch
- 15 The blue light flashes quickly, the blue light is always on when the wireless phone is connected successfully, the red light is always on when the wireless microphone is charging, the red light is always on when the red light is fully charged, and the red light is turned off when the battery is low, flashing twice every 5 seconds;

02