

Angelbliss

3 in 1 Baby Swing & Bouncer



User manual

Content

I、Product List1

II、Installation2~3

III、Instructions for use3~9

IV、Precautions9~10

V、Cleaning and maintenance10~11


I、Product List

No	Photos	Item	Quantity
1		Main Control	1pc
2		Support Tube	1pc
3		Seat Support	1set
4		Seat Cover	1pc
5		Bouncer support	1pc
6		Latch locking	4pcs
7		Feet Support	2pcs
8		Support Joint	1set
9		Toy bar	1pc
10		Adaptor	1pc
11	Manual/Remote Control		1bag
12		Gloves	2pc
13		Screwdriver	1pc


II、 Installation

⚠ WARNING! This product should only be assembled by adults.


1. Assembling the host group: Insert 4 pins into the two foot sockets and then insert them into the corresponding holes of the host until you hear "CLICK", as shown in the figure below. The bullet head pops out of the holes to indicate that it has been assembled in place.

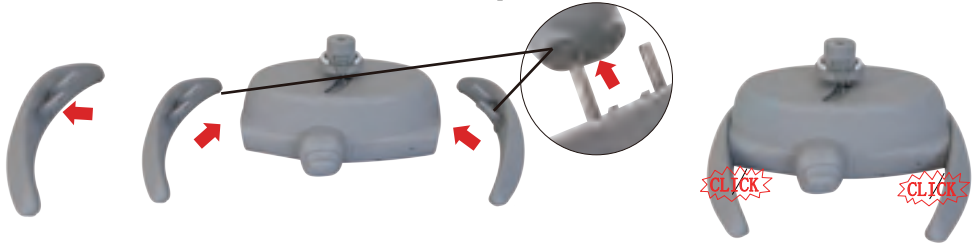


2. Assemble the seat group: 1 put the joint into the support tube to ensure the shrapnel eject completely; 2 put the joint into the seat frame (as shown in Figure 2 below) to ensure the button head eject completely; 3 put the seat frame before and after the seat frame tube into the left and right joint respectively (A to a) to ensure that the shrapnel fully ejected; 4 fasten the seat cloth forcefully along the seat frame before and after the edge and pull the zipper. Figure 4 below shows the effect of the seat cloth installation

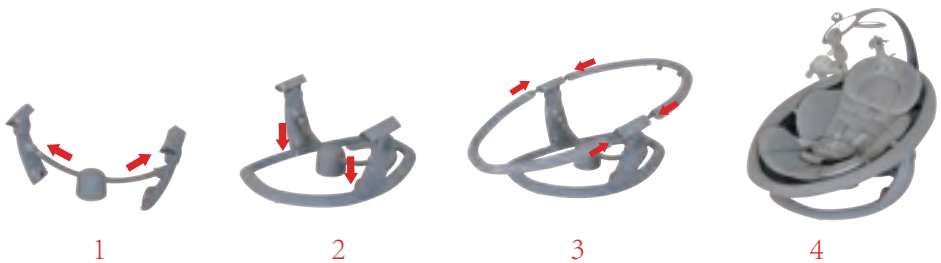


3. Put the seat assembly into the main unit, and make sure the buttons on both sides are fully popped out. As shown below:

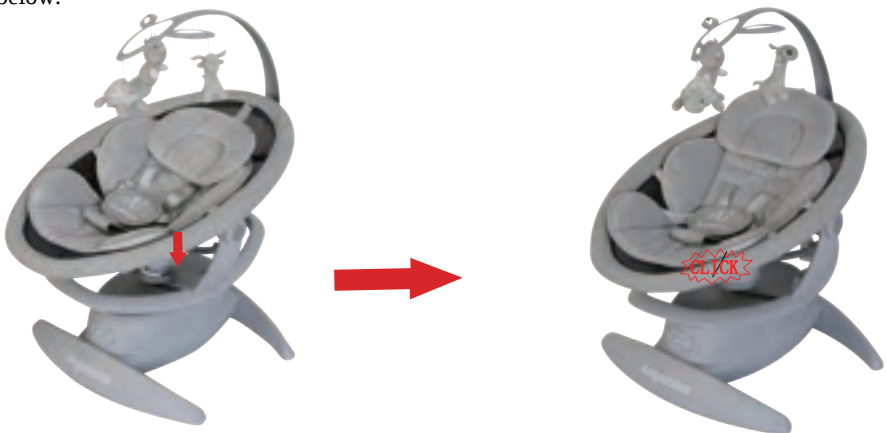

4.Assemble the toy stand; as shown in the figure below, pull the two buttons of the toy stand towards the middle (as shown by arrow 1) and put them into the rear slot of the seat frame (as shown by arrow 2) until you hear a click , shown to indicate it is fully assembled.

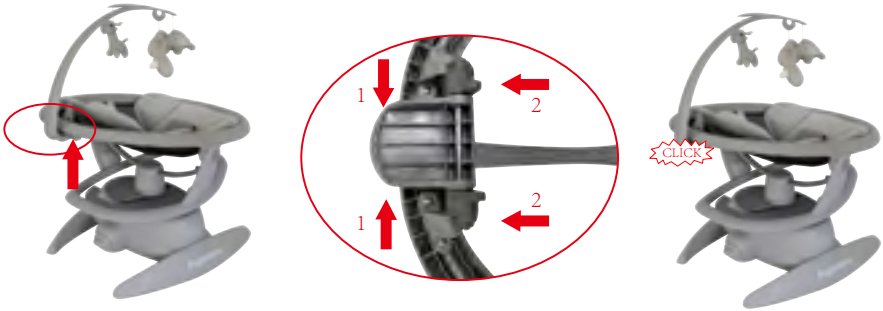

5. Put on the strap as shown in the picture below:


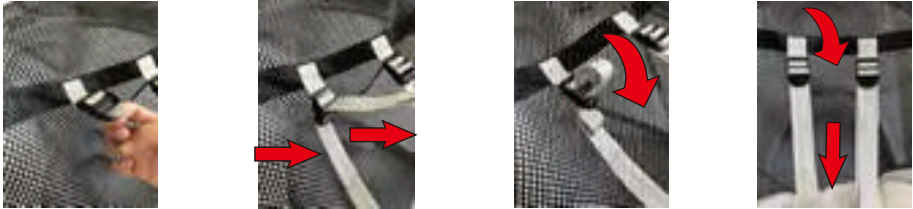






Top Bottom strap passes through the top Flip out from bottom Tighten the cloth belt

6. The length of the seat belt can be adjusted through the Japanese buckle on the shoulder belt and waist belt



III、Instructions for use

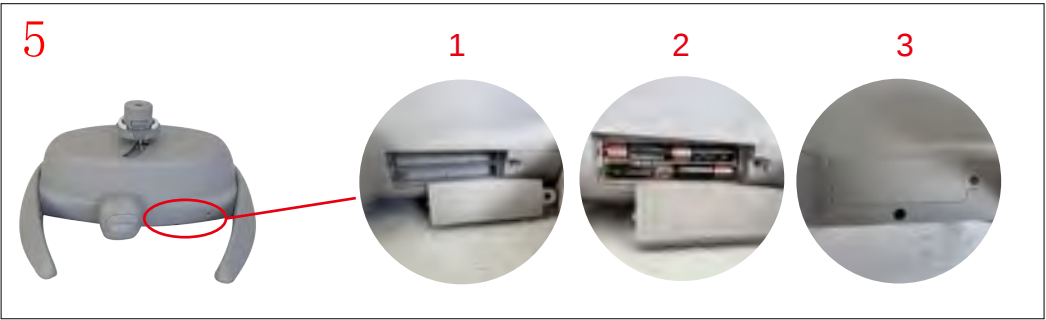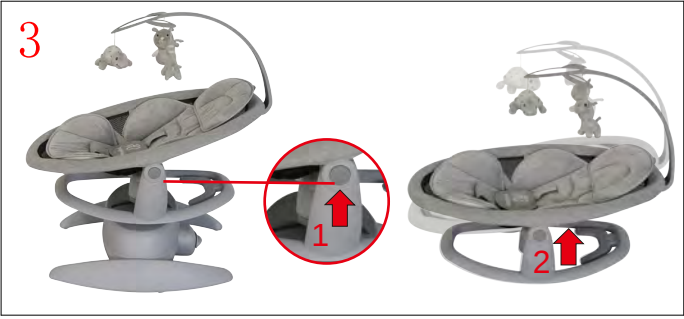

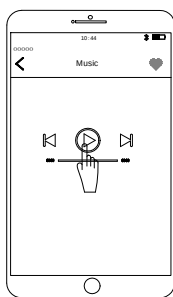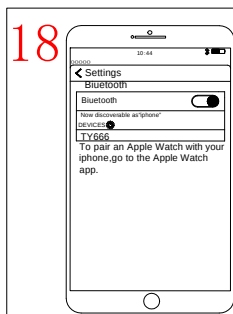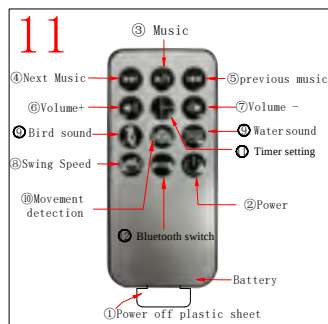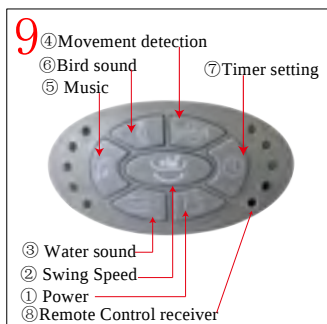

1.The first step, open the bluetooth setting, turn on the bluetooth switch.

2.The second step, click with TY666, pairing and connection.

3.The third step, return to home page once the Bluetooth pairing success, open any music player software to play the music

1. Toy rack adjustment function:

The height adjustment of the toy rack is shown in (Figure 1), and it can be adjusted to a suitable height at will;

⚠ WARNING : There is a limit to the height adjustment of the toy rack. When it cannot be adjusted, it means that the limit has been reached. Do not adjust it blindly!

2. Seat Rotation Function :

The seat can be rotated 360° to the left or right at will, as shown in (Figure 2), and the user can adjust the position at will according to the angle he likes ;

3. Seat adjustment function:

The seat has 2 files adjustment, respectively for sitting, lying, with (Figure 3) Step 1 as shown in the method, first the left and right sides of the seat adjustment button, then the seat is rotated up and down for gear adjustment by the method as shown in step 2;

4. electric rocking chair to Manual Rocking Chair features:

4. 1 Push the button in the method shown in Figure 6 while lifting the seat up (Figure 6) remove the seat as shown in steps 1 and 2;

4.2 as shown in Figure 7, manually swing the chair back and forth;

4.3 as shown in Figure 8, the support foot is propped up to make the rocking chair stable.

⚠ WARNING : do not remove the seat while the child is in it, as this could cause a safety accident!

5. Power supply instructions, this rocking chair uses 2 power supply methods :

5. 1 The first is: 5V~6V/0.8A DC power adapter for power supply, as shown in (Figure 4), insert the DC plug of the adapter into the power socket, and then insert the AC plug into the 100-240V 50/60Hz 0.2A AC socket;

5.2 The second is: 4 AA batteries for power supply, as shown in (Figure 5), use a Phillips screwdriver to loosen the battery cover screw until the cover can be taken out, take out the cover, and use (Figure 5) step 1 and step 2 according to Insert the battery according to the positive/negative polarity direction of the mark, close the battery cover, and tighten the screws. Use the same steps to remove the battery;

⚠ WARNING :

1) the screws of the battery cover must be locked tight, otherwise, there will be leakage phenomenon, there will be a safety risk!

2) the battery should be put in the correct polarity!

3) can not install the reverse, otherwise will not be electrified!

4) non-rechargeable batteries can not be charged!

5) rechargeable batteries can only be charged under adult supervision!

6) the rechargeable battery should be removed from the product before

charging!

- 7) different types of batteries and old and new batteries can not be mixed!**
- 8) used batteries should be removed from the product for disposal! And stay away from children!**
- 9) power terminal must not short-circuit!**
- 10) do not supply power to the product using an adapter not provided by this product. The input voltage of the adapter is 100.240V/50/60Hz 0.2A, and the output voltage is 5-6V/0.8A!**
- 11) Keep adapters away from children when using them!**
- 12) regularly check rope sockets, accessories and other parts for rocking chair adapters and discontinue use in case of any damage!**

6. Control panel features:

- 6.1 Power Button as shown (figure 9)1, connect Power Button Power Indicator Light, press 1 switch control;
- 6.2 Swing shift button as shown (figure 9)2, there are 5 swing gear options (1 to 5 swing gradually increase) , key 2 for the selection of gear; 6.3 water and bird sound button as shown (figure 9)3 and 6, water and bird sound button, press the“Birdsong Button” to send out birdsong, then press it to stop. Press the“Water sound button” to send out the sound of running water, and then press it to stop. Long press 3 seconds to switch the Bluetooth connection, hear the speaker issued a“Jingle” sound that can be connected to Bluetooth, to connect successfully after clicking on the music playback button can play Bluetooth music normally.
- 6.3 Special Instructions: Every time you turn on the phone, you will hear the“Jingle” sound from the speaker, which means you can connect with Bluetooth. If you play native music/Bird Music/Water Music first when you turn on the phone, need to press the water sound key for 3 seconds to switch, hear the speaker issued a“Jingle” sound can be connected to Bluetooth.
- 6.4 As shown in Figure 9, press the action button, turn on the action indicator and turn off all functions. Wait for the rocking chair to swing to a standstill for 3-5 seconds before entering the action-control standby mode, at this point, if the rocking chair has a slight swing, it will immediately trigger the swing function and the music function to start (when the motion control indicator is turned off) , and when the motion control indicator is turned on (indicating that the motion control function has not yet been triggered) , at this time need to cancel the dynamic control function can press any key to cancel;
- 6.5 Press the volume button as shown in (figure 9)5. Press the volume button and play the swing music to begin (the swing comes with 128-chord music) . Press two to play the next music, press three to pause the music, in turn, long press“Volume button” to adjust the volume, determine the volume can be released.

6.6 As shown in Figure 9,7, there are two timing options. Press the next indicator light for 15 minutes and the second indicator light for 30 minutes until all functions stop, if the timing function is not activated, the activated function will work indefinitely until the power is exhausted;

7. Swing mode handle as shown (figure 10) , there are 3 swing mode, the swing mode handle pull up and move left and right into the gear slot (swing mode handle arrow points to the corresponding positions 1,2,3) .

7.1 the swing mode function is described as follows:

7. 1. 1 when the swing mode pulls the arrow on the hand to the corresponding position 1 the swing mode is shown (Figure 11) .

7. 1.2 when the swing mode pulls the arrow on the hand to the corresponding position 2 the swing mode is shown (figure 12) .

7. 1.3 when the swing mode pulls the arrow on the hand to the corresponding position 3 the swing mode is shown (figure 13) .

7. 1.4 the swing mode shown (Fig. 14) , based on the swing mode shown (Fig. 11) , is achieved when the base is rotated in the same direction as shown (Fig. 14) ;

7. 1.5 the swing mode shown (Fig. 15) , based on the swing mode (Fig. 12) , the swing mode is achieved when the base is turned in the same direction as shown (fig. 15) ;

7. 1.6 the swing mode shown (Fig. 16) , based on the swing mode (Fig. 13) , the swing mode is realized when the base is rotated in a direction consistent with the position shown in Fig. 16;

⚠WARNING: After each gear selection, you need to wait about 10 seconds to sway normally, during which you can not push and pull to assist sway, otherwise you need to wait about 10 seconds to sway normally, this is a normal situation, please feel free to use!

8. Remote control function description:

8. 1 before using the remote control as shown in Figure 11, you must pull out the power-off plastic sheet before using the remote control.

8.2 as shown in Figure 11 power switch 2: Click, Power Indicator light up or off.

8.3 Music Switch Button 3: Press and the music is played or turned off.

8.4 next music key 4: with each click, the music is played to the next song.

8.5 last music key 5: each time you press it, the music plays a song up.

8.6 volume button (+)6: each time you press it, gradually increase the volume to the maximum volume set by the rocking chair.

8.7 volume button (-)7: each time you press it, you can gradually reduce the volume to the minimum set by the rocking chair.

8.8 swing shift key 8: with each click, add 1 swing shift, press 5(maximum shift) and then

press cyclic shift shift.

- 8.9 birdsong and water sound button 9, press“Birdsong Button” to send out birdsong, then press to stop. Press the“Water sound button” to send out the sound of running water, and then press it to stop. Note: When the sound of birds or water is played, pressing the pause button will also pause the play.
8. 10 dynamic control key 10: click, Dynamic Control Indicator light on or off.
8. 11 there are two timing options for the timer button. Click on one indicator for 15 minutes and click on the second indicator for 30 minutes until all functions stop. If the timer is not activated, the activated function will work indefinitely until the power supply is exhausted;
8. 12. Bluetooth switch key 12, a circular key to switch the Bluetooth connection state with the native state, from the native state switch Bluetooth connection state, the speaker will jingle (indicating that Bluetooth connection can be made) .

9. Single Bluetooth connection using a schematic flow chart, Bluetooth connection audio playback function instructions:

9. 1 open the mobile bluetooth settings, click settings and open the Bluetooth switch.
- 9.2 go to the Bluetooth settings pairing page, Bluetooth search for TY666 and click on TY666 to connect (select only TY666 pairing) .
- 9.3 after connecting successfully, return to the home page of the mobile phone, open any third-party music player software to play music.

10. Note to use Bluetooth connection activation:

10. 1 when using Bluetooth, please use within 5 meters, otherwise it may affect your normal use.
- 10.2 when playing songs on your phone, make sure you have downloaded or added music to your phone.
- 10.3 turn the volume of your Bluetooth into a baby-friendly setting when connected.
- 10.4 in the normal use of the process, if there is a phone access, after the end of the call found that the music reduced or no sound, please check whether the Bluetooth volume of the phone is back to the default minimum or whether the Bluetooth is disconnected, if disconnected, please follow the Bluetooth connection mode instructions to reconnect.

IV 、 WARNING :

1. Always use the restraint system!
2. Never leave the child unattended!
3. Suitable age: 0-5 months!
4. Children using this product should not weigh more than 17.5 lbs!

5. When children are in this product, do not lift or move this product!
6. This product is strictly prohibited to be used in high places (such as: countertops, tables, stairs or other places higher from the ground) to prevent the danger of falling!
7. It is dangerous to place this product on a non-planar surface!
8. It is forbidden to use the adapter not provided by this product to supply power to the product. The input voltage of the adapter is 100-240V/50/60Hz 0.2A. The output voltage is 5-6V /0.8A!
9. Don't use a toy stick to lift a reclining rocker!
10. Do not let children use this product as a toy!
11. Do not open or fold this product until the child is away from it!
12. After this product is connected to the power supply or the power switch is pressed, other function buttons must wait for 3-5 seconds before they can start to work!
13. Do not use this product if any part is damaged or missing. Do not use replacement parts unless approved by the manufacturer!
14. Stay away from Tinder!
15. Cords, plugs, accessories and other parts of the baby bouncer adapter need to be checked frequently, Once the above parts are damaged, do not continue to use it!
16. Only use the matching adapter for the baby bouncer!
17. This product is not intended for children to sleep with!
18. This product is not equivalent to a bed, if the child falls asleep, he should be brought back to the bed!
19. This product contains coin batteries which, if swallowed the coin batteries, it can cause severe internal chemical burns!
20. Stop using the product when the child starts to stand up!

V、Maintenance and cleaning

1. Cushion: remove the cushion; assemble it well; wash it by machine or hand with cold water.
Toy rack and toy: wipe with wet cloth and soft soap and dry. Please don't wash with water.
Support frame: please wipe it with clean wet cloth and soft soap.

Fabric: flannel.

Inner filler: fireproof hard resin cotton

 **WARNING! Prohibit bleaching, dehydration, and drying.**

Maintenance:

1	The circuit board fails when plugged in	Please unplug the power and press the power switch 3-5 times
2	There's music and swing, and then it stops suddenly	The battery may not be fully charged/do not install correctly
3	No function when starting	Check whether the positive and negative poles of the battery are installed reversely
4	If not used for a long time	Please take off the battery
5	Serious shaking	Please check whether the retraction joint is open in place
6	The indicator light becomes weak	The battery may not be fully charged

WARNING

FALL HAZARD: Children have suffered head injuries falling from swing, rocker and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in rocker.
- **STOP** using product when baby attempts to climb out or has reached 17.5lbs., which comes first
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.
- **ALWAYS** place rocker on floor. Never use on any elevated surface.

SUFFOCATION HAZARD: Babies have suffocated when seats tipped over on soft surfaces.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types
- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.

- A crib mobile is intended for visual stimulation and is not intended to be grasped by the child
- If attached to the crib or playpen, remove when baby begins to push up on hands and knees. If so designed, mount on wall or ceiling clearly out of a standing baby's reach
- If mounted on a wall or ceiling, install the mobile clearly out of a standing baby's reach
- Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.
- Do not add additional strings or straps to attach to a crib or playpen.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

Warranty

We have purposely designed our high-quality product so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom warranty per product, starting from the day it was purchased. Please have the proof of purchase or order number, when you contact us.

Contact
Caren@angelblissbaby.com
(or contact us by Amazon seller service)

IMPORTANT !
KEEP THESE
INSTRUCTIONS FOR
FUTURE REFERENCE!
READ CAREFULLY