


说明书80*110mm 128g铜版纸 双面印刷

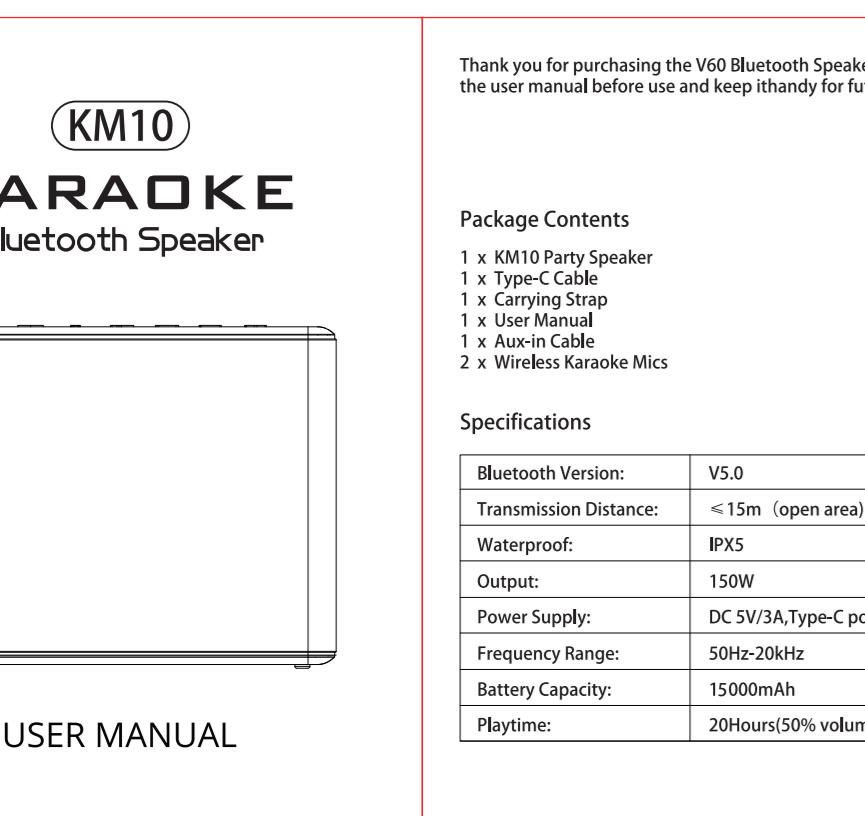

Thank you for purchasing the V60 Bluetooth Speaker. Please read the user manual before use and keep it handy for future reference.


Package Contents

- 1 x KM10 Party Speaker
- 1 x Type-C Cable
- 1 x Carrying Strap
- 1 x User Manual
- 1 x Aux-in Cable
- 2 x Wireless Karaoke Mics

Specifications

| | |
|------------------------|-----------------------|
| Bluetooth Version: | V5.0 |
| Transmission Distance: | ≤15m (open area) |
| Waterproof: | IPX5 |
| Output: | 150W |
| Power Supply: | DC 5V/3A, Type-C port |
| Frequency Range: | 50Hz-20kHz |
| Battery Capacity: | 15000mAh |
| Playtime: | 20Hours(50% volume) |

① Power on/Power off ⑩ Play/Pause
② Mode Switching ⑪ Volume-/Previous Track
③ Microphone button ⑫ Volume+/Next Track
④ Volume- of Reverberation ⑬ 6.5mm wired mic port
⑤ Volume+ of Reverberation ⑭ AUX port
⑥ Volume- of Microphone ⑮ USB port
⑦ Volume+ of Microphone ⑯ TF card slot
⑧ EQ/Power Saving ⑰ Type-C charging port/Inner recharging port
⑨ Vocal sound elimination

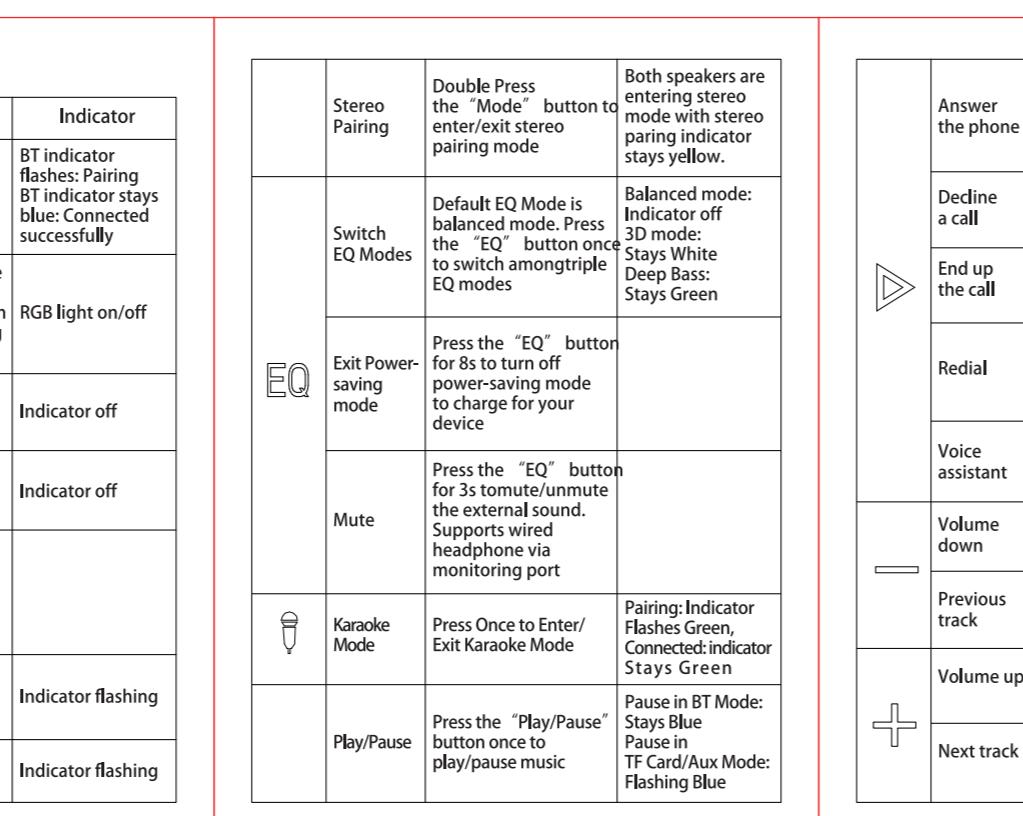

Instructions

| Button | Function | Operation | Indicator |
|--------|------------------------|--|--|
| | Turn on | Press the "POWER" button for 1s to turn on the speaker will enter pairing mode | BT indicator flashes: Pairing BT indicator stays yellow. |
| | Turn on/off | Press the "EQ" button once to switch among triple EQ modes | RGB light on/off |
| | Mode switching | Press the "Mode" button once to switch among 4 playing modes (BT/TF Card/Aux) | |
| | Disconnect from Device | Press the "Mode" button for 3s to disconnect from Bluetooth | Indicator flashing |
| | Volume up | Press the "Play/Pause" button once to turn up volume | Pause in BT Mode: Stays Blue |
| | Volume down | Press the "Volume-" button once to turn down volume | Pause in BT Mode: Stays Blue |
| | Previous track | Press the "Volume-" button for 2s to skip to previous track | Pauses in BT Mode: Stays Blue |
| | Next track | Press the "Volume+" button for 2s to skip to next track | Pauses in BT Mode: Stays Blue |
| | Play/Pause | Press the "Play/Pause" button once to play/pause music | Indicator flashing |
| | Reset | Press the "Mode" button for 8s to reset | Indicator flashing |

