

# THE ESC SOUNDS MINI

## USER MANUAL




### SAFETY INSTRUCTIONS

#### Read all instructions

- Only charge this speaker with the charging cable provided with the device.
- Never open the speaker or attempt to make any modifications or repairs. This would void the warranty and may damage the product.
- Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles varies by use and settings.
- Never expose the speaker to high temperature heat sources.
- Never charge the product while wet and always ensure that the charging cover is closed when exposing the product to moisture.

### PARTS & FUNCTIONS

1. Battery level indicator.
2. Power button: power on/off, siri.
3. Pause button: play, pause, answer call, TWS.
4. Bluetooth button: switch the playing mode
5. Bluetooth indicator.
6. -: Volume down button: previous song, decrease the volume.
7. +: Volume up button: next song, increase the volume.
8. Bass button.
9. AUX IN port, reset.
10. TF card slot.
11. Type-C charging port.

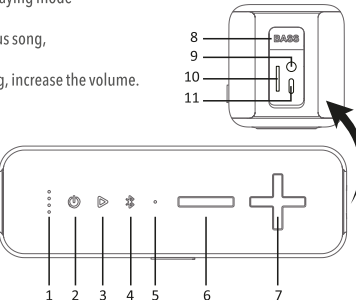

### THE SPEAKER'S BATTERY

A built-in rechargeable battery powers the speaker.

#### CHARGING

Connect the supplied charging cable to the charge input and to a USB port on your computer or to a USB charger. The charging LED will illuminate white when charging, and the 4 LED indicator will be solid white when fully charged.

#### POWER ON/OFF

Power on: Hold the power button for three seconds to turn on the speaker. Once the white light starts flashing, you can connect to the speaker.

Power off: Hold the power button for three seconds to turn off the device.

#### SIRI FUNCTIONALITY

While the speaker is connected to your phone, a short press of the power button will activate your voice assistant.

#### CONNECT THE SPEAKER

Once the speaker is turned on, a white light will flash, indicating it is ready to connect. Select 'ESC Sounds Mini' on your devices Bluetooth list and then a chime will sound to indicate a successful connection. Only one Bluetooth device can be connected at a time.

#### DISCONNECT THE SPEAKER

To disconnect the speaker, hold down the Bluetooth button on the device for three seconds.

#### RECONNECT THE SPEAKER

Once paired, the speaker will automatically connect when turned on. If the speaker fails to connect automatically, hold the Bluetooth button for three seconds and the speaker will connect to the most recently connected device.

### PLAYING MODE

Press the Bluetooth button to switch between Bluetooth or AUX.

#### PLAY MUSIC USING MICRO SD CARD

Insert a micro SD card to the appropriate slot.

#### AUDIO CABLE CONNECTION

When powered on, connect a 3.5 mm audio cable to the speaker from your device to connect without Bluetooth.

#### THE PAUSE BUTTON'S FUNCTIONALITY

- Press:**
- 1) Music playback status: press the button to operate play, pause function.
  - 2) When there is an incoming call: press to answer the call.
  - 3) When you're on a call: press to hang up the phone call.

- Press and hold:**
- 1) When a call is incoming: Press for two seconds to reject the call.
  - 2) Press for two seconds to enter multi-speaker pairing mode, once connected, press for two seconds to disconnect from multi-speaker pairing mode.

**Double press:** When the speaker is connected to your phone via Bluetooth, double press to call back the most recent contact.

#### CHANGE VOLUME AND SONG

##### When listening to music

- |                  |                                |            |                                |
|------------------|--------------------------------|------------|--------------------------------|
| Increase volume: | Press the "+" button.          | Next song: | Press and hold the "+" button. |
| Decrease volume: | Press the "-" button.          |            |                                |
| Previous song:   | Press and hold the "-" button. |            |                                |

HANDS-FREE FUNCTIONALITY

- 1. Turn on the speaker and the Bluetooth indicator will flash white.
- 2. Press the pause button to answer a call on the speaker and you can talk through the built-in microphone. After the call ends, music will resume.
- 3. Press and hold the pause button on the speaker to reject an incoming call.
- 4. The Bluetooth indicator will be solid white, only one Bluetooth device can be connected at a time.

RESET FUNCTIONALITY

Hold the pause button down for 8 seconds to automatically reset the speaker and turn it off.

AUTO POWER OFF FUNCTIONALITY

The speaker will automatically turn off after ten minutes when disconnected and no music is playing.

TECHNICAL PARAMTERS

- |                           |                                                          |                             |
|---------------------------|----------------------------------------------------------|-----------------------------|
| • Model: ESC Sounds Mini  | • Product Weight: 655g                                   | • Product Size: 206*67*71mm |
| • Speaker: Ø52mm 4Ω 10W*2 | • Built-in rechargeable battery: Li-on, 7.4V, 2200mAh    | • Range: Up to 10m          |
| • Charging time: 3 hours  | • Playing time: Up to ten hours (varies by volume level) | • Waterproof level: IPX7    |
| • Input: 5.0V 2.0A        |                                                          |                             |

PACKAGE INCLUDING

- |                     |                        |                      |
|---------------------|------------------------|----------------------|
| 1 x ESC Sounds Mini | 1 x Instruction Manual | 1 x Type-C USB Cable |
|---------------------|------------------------|----------------------|

MULTI-SPEAKER PAIRING MODE

- 1: Turn on both speakers and ensure they are disconnected from all devices.
- 2: Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear the indicator tone. This will become the primary speaker.
- 3: Release the play/Pause button. The speakers may take a few seconds to connect to each other. Check the indicator lights to distinguish L/R channel: The primary speaker (left channel) will flash white; the secondary speaker (right channel) will be solid white.
- 4: Enter the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting 'ESC Sounds Mini'. (Only one will show up, however it will connect you to both speakers.)

MULTI-SPEAKER PAIRING DISCONNECTION

Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear the indicating tone.

NOTES

Playtime varies according to volume level, audio content and wireless interference.

Average Playtimes:

- |                             |                              |
|-----------------------------|------------------------------|
| 100% Volume = Up to 4 Hours | 50% Volume = Up to 7.5 Hours |
| 75% Volume = Up to 6 Hours  | 25% Volume = Up to 10 Hours  |

COMPATABILITY

This device is compatible with all smartphones, tablets, Windows operated computers and Ventura operated Mac computers.

GENERAL INFORMATION: NOTES BEFORE USE

The ESC Sounds Mini was designed with full attention to safety performance.

To ensure safe operation of the product, please adhere to the following guidance:

- 1. When in use, place The ESC Sounds Mini in a stable position, to prevent it from falling and consequently, causing damage or personal injury.
- 2. Do not drop, disassemble, open, crush, bend, puncture or burn The ESC Sounds Mini.
- 3. Do not expose to sources of extreme temperature (such as radiators, heating equipment, stoves, or other heat generating equipment).
- 4. Please do not attempt to make any modifications to or attempt to disassemble this product.
- 5. Never attempt to clean this product when in charging mode or while powered on.
- 6. Listening to the ESC Sounds Mini with the volume too high can harm your hearing. Please ensure that the volume is always used at a comfortable level.
- 7. Keep this product away from children.
- 8. Your ESC Sounds Mini is guaranteed for a period of 6 months from date of purchase, subject to the terms and conditions of sale.
- 9. Please dispose of the product as per your local authority's recycling processes.
- 10. Please charge your device at least every three months.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.