

Haitech



HPAD-T80 USER MANUAL

SAFETY INSTRUCTIONS

Attention! This manual contains important safety measures and correct usage information for the product to prevent accidents. Please read the manual carefully before using the device.

Do not expose to moisture, dust, or high temperatures.

Avoid drops or strong impacts, and do not make violent movements on the screen, as this may cause abnormalities or damage to the screen.

Please select an appropriate volume. If using earphones, the volume should not be too high; if distortion occurs, lower the volume.

Please charge the product under the following conditions:

When the battery icon shows no charge.

The system shuts down automatically and cannot complete startup.

The operation buttons do not respond.

When the device is charging, do not disconnect it suddenly, as this may cause errors.

In cases where the memory is erased due to product damage, repairs, or other reasons, the company is not responsible for its content.

Do not disassemble the product, and do not use alcohol, solvents, or benzene to clean the unit.

The USB is used for data transmission and charging.

This tablet is in no way water or splash resistant.




All images in this manual are for illustrative purposes only and may vary from the actual product.

Do not throw the battery or device into the trash. Consult your municipality about the correct way to dispose of electronic components.

Help us care for the planet.

GENERAL DESCRIPTION

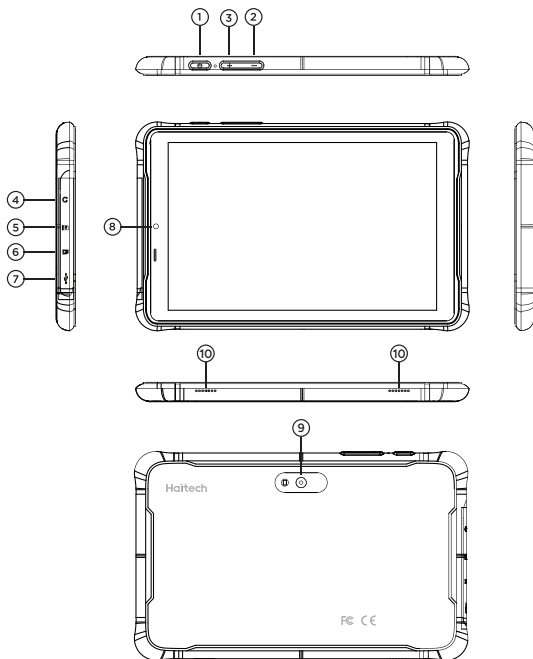

① Power On/Off Button

② Volume -

③ Volume +

④ 3.5mm Earphones

⑤ SIM Card Slot

⑥ TF Card Slot

⑦ USB Type C

⑧ Front Camera

⑨ Rear Camera

⑩ Speakers

Haitech

USAGE METHOD

Before first use, ensure the device battery is fully charged.

Simply connect the USB interface to charge.

Note: This tablet with a battery uses a standard adapter (Input: 9.0V).

During charging, the battery icon will animate. When charging is complete, it will indicate 100% and stop animating.

To prolong the product's service life, it is recommended to use up all the battery power before recharging.

Observations:

If you do not use the tablet for an extended period, to avoid damage, please charge and turn it on once a month.

The device should be on standby for normal charging time, as screen usage during operation may cause longer charging time.

To turn on the tablet: Press and hold the button for two seconds.

To turn off the tablet: Press and hold the button for two seconds, then select the "Power Off" option.

To lock: Press the button.

To reset: Press and hold the button for 6 seconds.


To use the device without Wi-Fi: Switch to Airplane Mode.

Go to Settings > Wireless & Networks > Airplane Mode.

To view notifications appearing at the top-left of the screen: Swipe them down.

Haitech

MAIN INTERFACE DESCRIPTION On the home screen, you can:

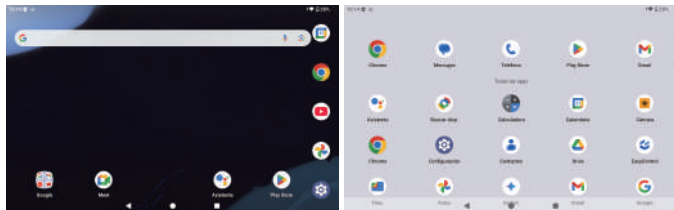

Manage main interface software icons: Long-press an icon for 3 seconds, then drag it to any part of the interface.

Delete icons: Long-press an icon for 3 seconds, drag it to the trash icon, and release when the trash turns red to delete the icon.

Change the wallpaper: Tap and hold the screen to bring up a dialog box "Select Wallpaper".

Touch Panel Usage:

Below the main touchscreen area is the status bar, where three main buttons serve as shortcuts.

No matter which interface you are on, you can return to the home screen by pressing the function key.

In different applications, you can return to the previous menu interface. Or, in different applications, tapping the menu key in the upper-right corner of the touchscreen will bring up the settings interface.

PROBLEM-SOLVING

Device cannot start	Check the battery charge
	Connect the adapter, then you can try again
	After charging if it does not start, please contact the manufacturer.
After the home screen or the opening image, the device turns off	The load is not enough, please load the equipment.
The speaker does not emit volume	Check that the volume is not at zero
	Check if the music file is not damaged. Try to play another music track, if the file has been damaged it may carry a low noise or sound with jumps.
The music file cannot be copied	Check that the connection between the computer and the device is correct.
	Check that the memory storage space is sufficient.
	Check that the USB cable is not damaged.

SPECIFICATIONS

System Operative	CPU
Android 15	MT8768CX
RAM Memory	Storage Memory
4GB	64GB
Audio Port	TF Card
Multi-touch - IPS 800x1280px	Supports up to 128GB
Audio Port	USB Port
3.5mm Jack miniplug	Type C
Wi-Fi	Bluetooth
802.11ac/b/g/n	5.0
Battery	Camera
Lithium Polymer 3.8V/6000mAh	Front 2.0 MP / Rear 5.0 MP

Power supply: Input 100-240V~ 50/60Hz . 0.35A Max-Class II. Output 9V --- 2A

Haitech

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Tablet meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the Tablet kept 0mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the Tablet. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.