










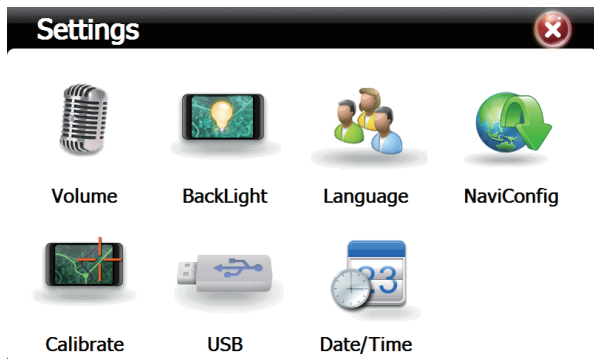

## 2.4 Software Settings




	Tap Volume, you can adjust the sound level, then tap  to save.
	Tap Backlight, you can adjust the backlight brightness and bright screen time, then tap  to save.
	Tap Language, to select the language you need, then tap  to save.
	Tap NaviConfig, please reset the file path after updating the map. The GPS can remember it automatically.
	Tap Calibrate, if touch the screen is not working or not accurate, please calibrate.

	<p>Tap USB, there are two options: MASS STORAGE/MS ACTIVESYNC. If you need to update the map data, please select “MASS STORAGE” and keep it.</p>
	<p>Tap Date/Time to change the time. You can set the time zone and time according to your country. Please make sure the GPS navigation time is correct by changing the time zone settings on the home screen.</p>

## 2.5 Navigation Path Setting

If you are pressing the navigation application on the home screen and it does not appear to launch, then you will need to set the Navi path.

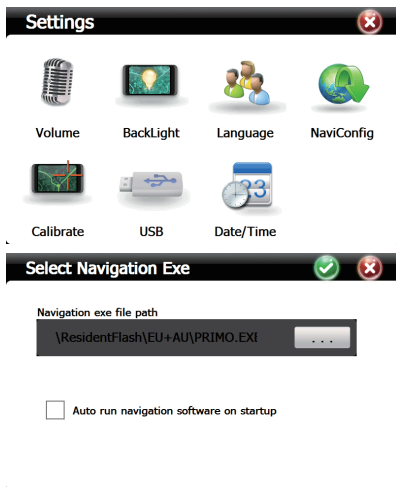

Set path as follows:


Settings-NaviConfig- icon-ResidentFlash- EU/US- PRIMO (NAVI).EXE- 

Double Click the Resident folder and any other folders until you find the PRIMO.EXE or NAVI.EXE file, double click the PRIMO.EXE or NAVI.EXE file to select it (if you have world maps edition with sdcard then you can select the sdcard folder-SDMMC) double click it to select.

【Note】 If you select the “Auto run navigation software on startup”, the machine will automatically enter the map when it is turned on. If you want to cancel this function, please exit the map after booting, and then cancel the function.

## 2.6 GPS Info


If it can't find the signal, please reset the GPS information. In application menu go to Tools-GPS Info. Until at least 3 green bar channels are displayed. It usually takes 5-20 minutes to complete.

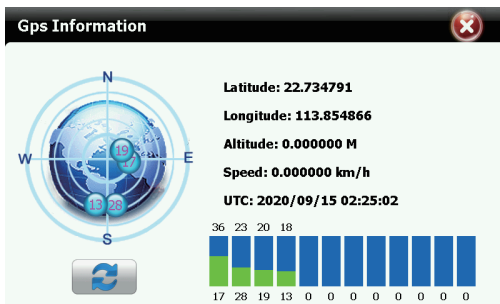

Many factors such as high, dense buildings (in the tunnel, between the high building, underground parking, under the trestle), various weather condition, and closure of the satellite will affect receive signal and result in inaccurate position, inefficiency of navigation operation. **Please go to the outside area to receive the signal and don't search for signals indoors.**

## 2.7 FM Function

The FM function can be used to play sound from the device to your vehicle's stereo, follow steps below if you wish to use this feature. The FM setting must be in the off position if not use, or GPS sound will be muted.

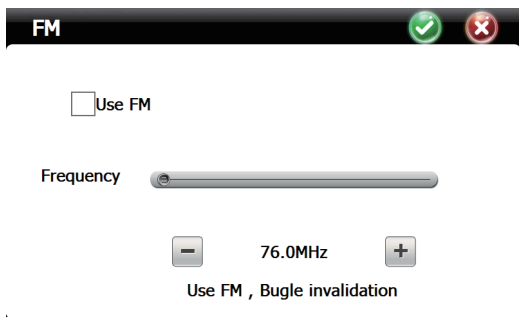


1. Locate an empty station on your vehicles FM frequency band, this frequency will be used to sync with your device.

2. On the device home screen go to the FM Settings and change the frequency to match the frequency on the vehicle's FM frequency band.
3. Next, please make sure the FM setting is turned on by clicking and check marking the Use FM box.
4. The sound from the GPS should now play through your vehicle's stereo.



## 3. Navigation Menu

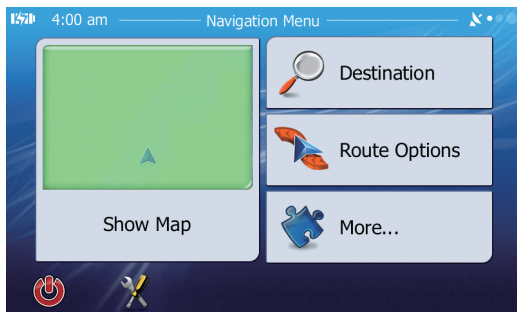Navigation Menu interface is as follows:




You have the following options:

- Click “ **Destination icon** ” to select your destination by entering an address or selecting a place of interest, a location on the map or one of your favorite destination. You can also look up your recent destinations from the Smart History or by entering its coordinate. Note Find setting may also be called Destination.

- Click “**Route Options icon**” to display the route parameters. You can view the route in its full length on the map. You can also perform route-related actions such as editing or canceling your route, setting a start point for the route, picking route alternatives, avoiding parts of the route, simulating navigation or adding the destination to your Favorites.
- Click “**More icon**” to use some extra function.
- Click “**Show Map**” to start navigating.
- Click  to stop navigation and exit the software.
- Click  to set navigation, meaning “**Settings**”.

## 3.1 Find Menu

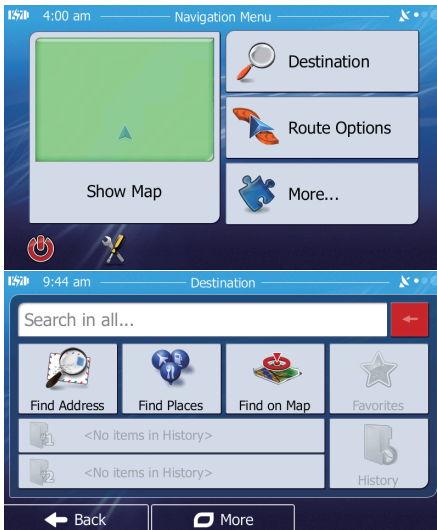

In the Navigation menu, tap “ **Destination icon** ” to provide you with the following options:

- Tap “ **Find Address icon** ” to specify an address as your destination.
- Tap “ **Find Places icon** ” to select a place of interest as your destination. Such as Petrol Station, Parking, Restaurant, Accommodation and so on.
- Tap “ **Find on Map icon** ” to navigate to a location selected on the map.
- Tap “ **Favorites icon** ” to choose from the list of your favorite destinations.
- Tap “ **folder 1** ” or “ **folder 2** ” to navigate to the recent destination that is shown on the button.
- Tap “ **History folder** ” to choose from the list of all recent destinations.
- Tap “ **More icon** ” for the search method-Coordinate.

### 3.1.1 Navigating to an Address

In the Navigation menu, tap “ **Destination icon** ” , then tap “ **Find address icon** ” . If a GPS signal is present the screen proposes the city or town where you are located, if not it may be blank.

9:44 am Find Address

Country Select Country or State

City <City Name>

Street <Street Name>

<Intersecting Street> <House Number>


Back Select Country

If needed, change the country. Tap the button showing the name of the country.

1. Use the keyboard to enter the name of the country.
2. After entering a couple of characters, the list of countries that match the entered string appears. Tap the country of your choice.




If needed, change the city/town. Tap the button showing the name of the city/town, and use the keyboard to enter a part of its name. As you enter letters, the most likely city/town name is always shown in the input field.
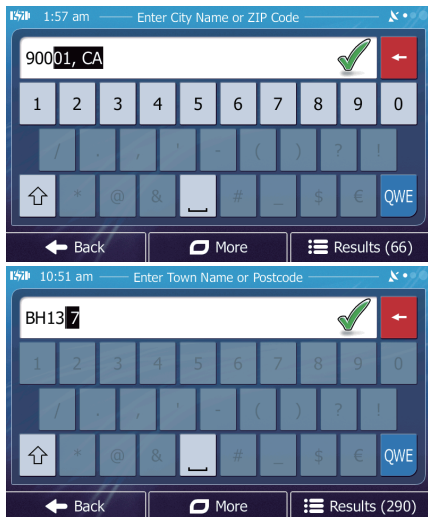
### 3.1.2 Enter by Postcode













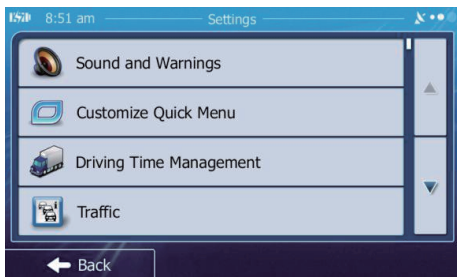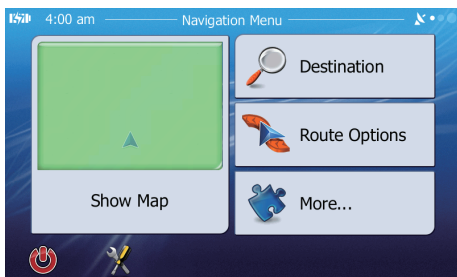


You can enter the destination by postcode in the city field. Enter a space between the postcodes or it may not continue i.e. 90001 in the United States, BH13\_7HF in the United Kingdom. You have the following options:





- Tap  to select the city/town that is offered in the input field.
- Tap  to correct your entry.
- Tap  **Results** to browse the list of city/town names matching your input. Select a city/town from the list.

## 3.2 Navigation Settings Menu




In the Navigation menu, tap . The Settings menu provides you with the following options (scroll the list of see all):


	Adjust the different sound volumes, change the voice guidance profile, or enable and set up warnings.
	Change the function buttons in the Quick menu of the map screen.
	Configure driving timers.
	Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.
	Adjust map related settings: change the daytime and night colour schemes, change the default zoom level, switch between 2D and 3D map, suppress buildings or change the vehicle gallery.
	Adjust how the software helps you navigate with different kinds of route related information on the Map screen.
	Turn the menu animations on or off, select a different skin for the application, or adjust the display backlight.
	Change the program language, the time format, units or the time zone.

	Turn the automatic trip or track log saving on or off, check the current size of the trip database.
	The application collects usage information and GPS logs and is generally only to be used by analysts, enabling this will take up space on your device and is generally best to be left disabled.
	The wizard takes you through the setup process allowing you to customize parameters.
	Delete all saved data and reset all settings to their factory default.

## 3.3 Sound and Warnings

### 3.3.1 Volume Setting

Settings  -Sound and Warnings-Volume

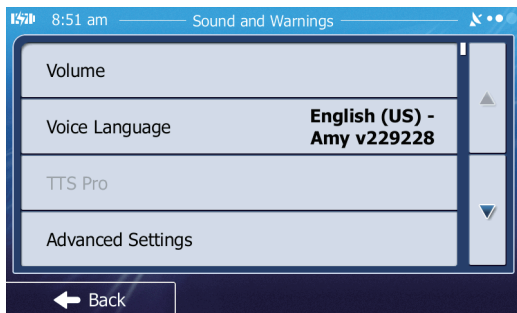



### 3.3.2 TTS Pro Setting


the function can be set to read out traffic, route summary, country Info and system messages.

### 3.3.3 Speed Warnings Setting


You can set the warn when speed in audio or visual. Warn when my speed is 100% of limit. It is recommended to set it to 100%.


## 3.4 Language Settings

In navigation mode, You can set the voice language and program language. Voice Language Setting Steps: Settings-Sound and Warnings-Voice Language.

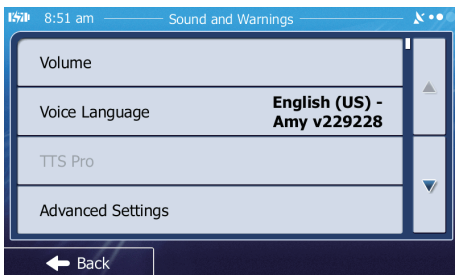

Program Language Setting Steps:  
Settings-Regional-Program Language.

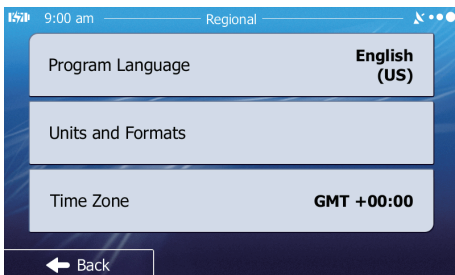

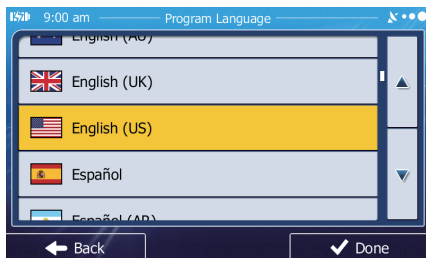


## 3.5 Vehicle Settings

In navigation mode, go to Settings-Route Settings-Vehicle. There are 7 types of Vehicle: Car, Pedestrian, Bicycle, Emergency, Bus, Taxi, Truck. For motorhome select the vehicle type as truck and set the dimensions for the motorhome.




If you have a truck or RV, please set the vehicle type first, and then enter the size and load of the truck. “confirm Parameters for Each Route Planning” need to be checked.



**【Note】** click  to set vehicle profile.


### 3.6 Visual Guidance Settings

Setting steps: Settings-Visual Guidance Settings-Data Fields.Choose the 3 data fields you want from the right. These three data are displayed in the lower right corner of the navigation route screen.

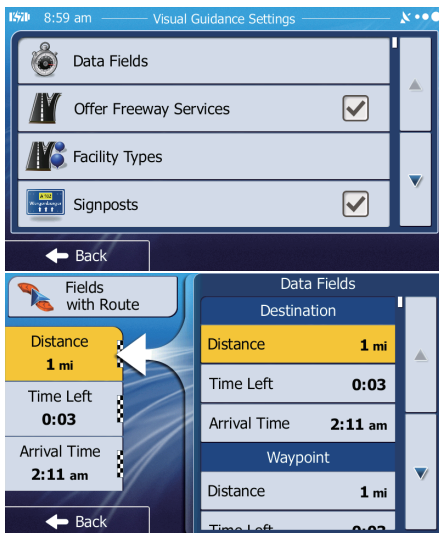


## 3.7 Units Settings

Setting steps: Settings-Regional-Units and Formats-Distance You can set the unit you want according to your needs:Miles/yards-Kilometers/meters-Miles/feet

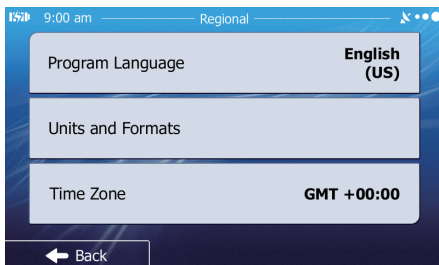



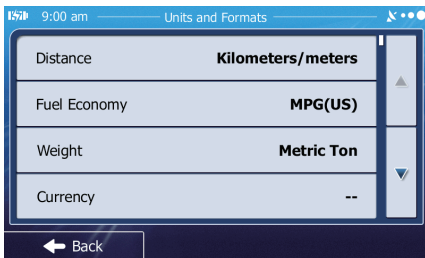

## 3.8 Time Setting

To change time in navigation mode, go to Settings-Regional-Time Zone.

Use Auto Time Zone--The time of the current location.

GMT--Set the time in your time zone.

