


Product Instruction Manual

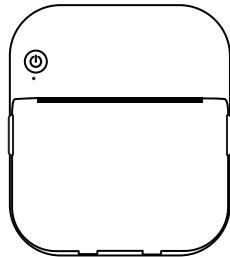

Please read this user manual carefully before using product.
This user manual is for reference only, and the actual product shall prevail.

Information to User

FCC WARNING


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

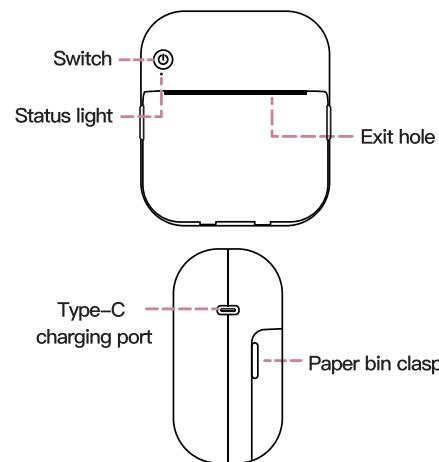


Indicator status

Green light out	Machine Power Off
Green flashing	Bluetooth not connected
The green light is on.	Bluetooth connected

Operating instructions

Power on/off


Press and hold to power on.

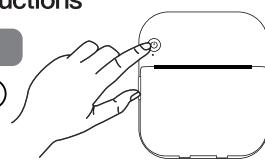

Install Paper


01

Fasten the paper bin clasps on both sides and open them to the sides.

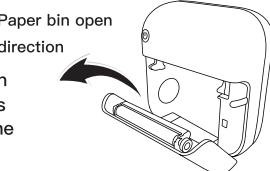


02

Install the paper roll with the thermal side facing outward as shown below.

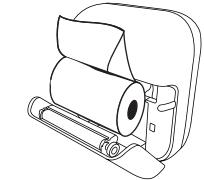

03

Adjust the position of the paper limiter according to the width of the paper roll, and lock the paper limiter into the card slot after adjustment. If label paper is used, a paper limiter is required. If ordinary printing paper is used, no paper limiter is required.

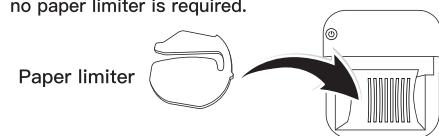

04

Pull out a small piece of paper and close the lid.

APP Download


Scan the QR code to download the APP.



Fun Print APP

Link Print

01 Long press the power button to turn on the phone, first turn on Bluetooth, then open Fun Print, click "Me-Connect" to find Bluetooth, click to connect.

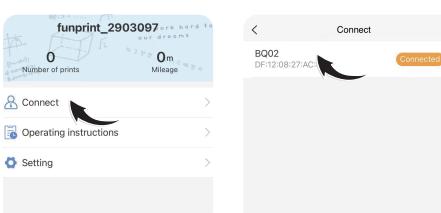


02 Click "New Label" and set the label width and height according to the actual size of the label paper.



03 Edit the label as required. After editing, click in the upper right corner to preview the label content. Adjust it as required and click "Print".

Battery charging

If you need to charge, please use the supporting USB cable to charge in time. If you continue to print, the printer may auto power-off.

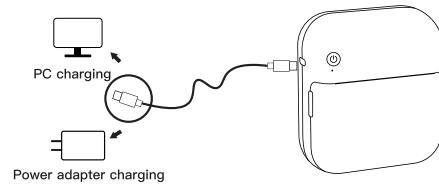

Power adapter charging

Warning

- Contains small parts, not suitable for children under three years old!
- Keep away from fire while playing!
- Guardians should be present when children are playing.
- When cleaning this product, ensure that the charger is disconnected.
- Please use 5V/1A USB adapter to charge.

This product should not be placed in a humid environment like water or for a long time. Please wipe the surface stains with a dry cloth. Wires, plug housings and other parts must be checked regularly for damage, and should be stopped immediately until repaired. In addition, in order to reduce battery aging and bulging; If it is not used for a long time, it needs to be charged once every three months.

Matters needing attention

- This product should not be used in water or humid environment, please keep the machine shell dry.
- Built-in battery is not removable, not replaceable, if damaged, please contact the business or customer service for repair.
- Please charge under adult supervision. Keep it dry and charge in accordance with safety regulations when touching the charging object or part.