


# 双面印刷

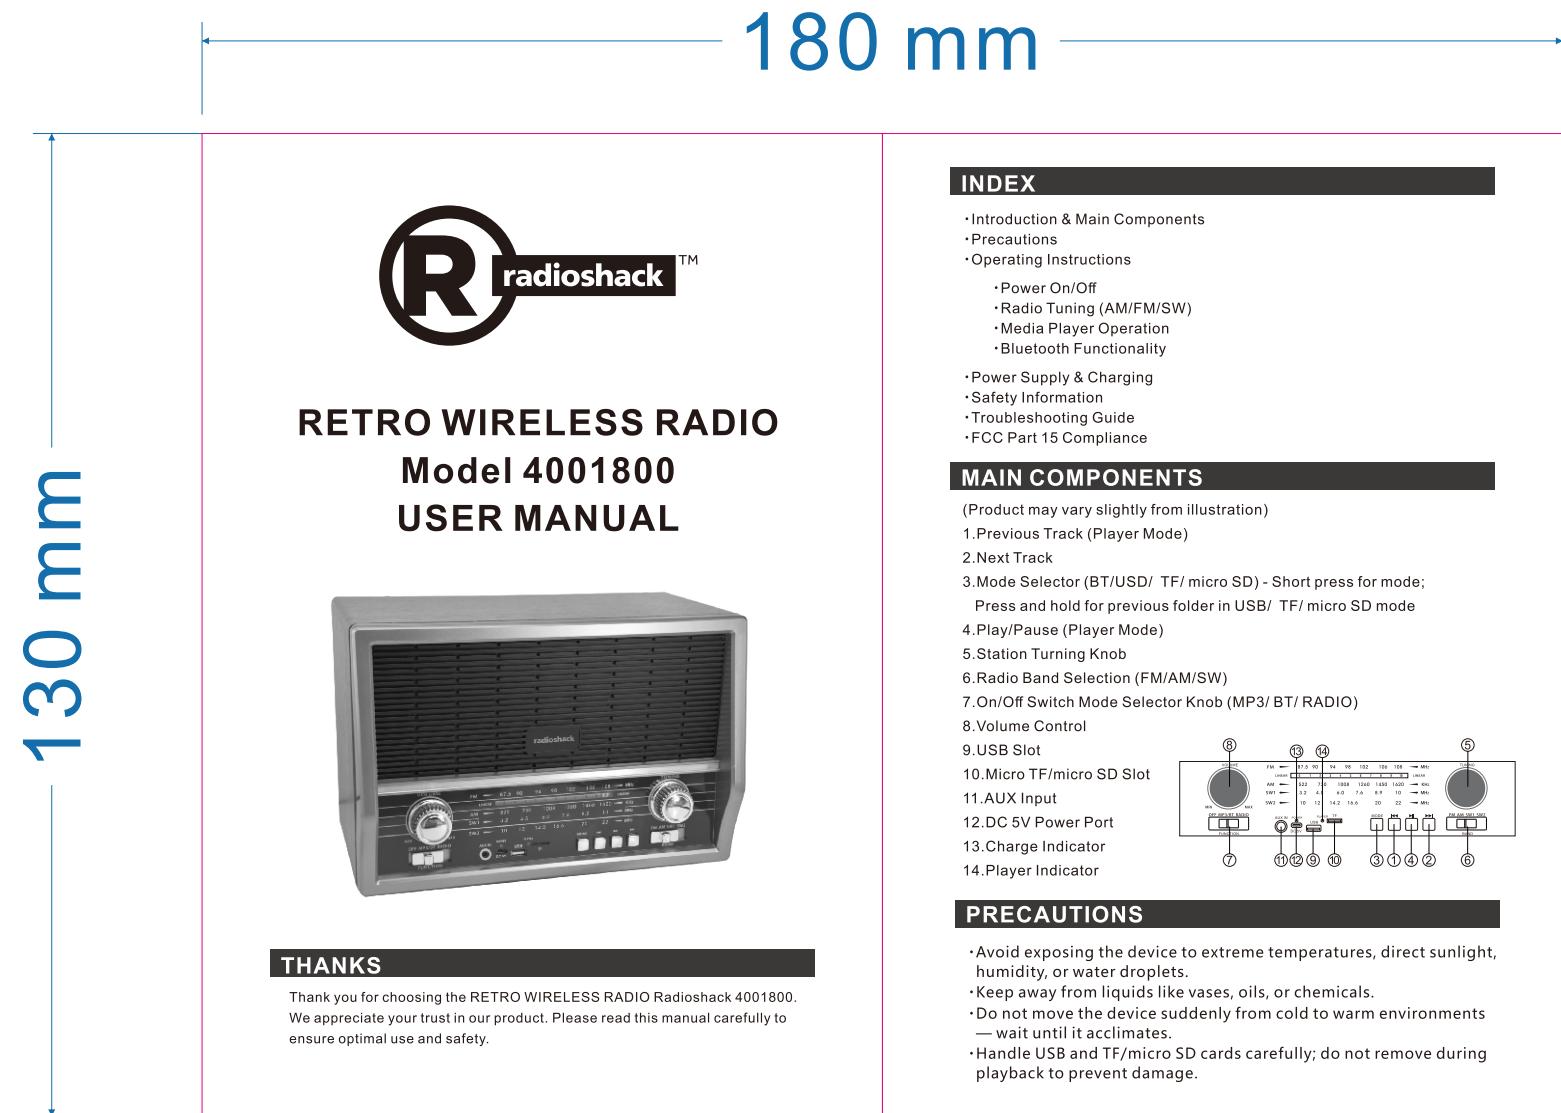

## OPERATING INSTRUCTIONS

**1. ON/OFF Switch**  
• Slide to turn the unit ON or OFF.  
• Select the desired mode: MP3/BT or Radio.

**2. AM/FM/SW Button**  
• Slide the band switch to select your desired band.  
• FM and SW use a built-in ferrite antenna—rotate for better reception.

**3. Media Player**  
• Slide the MP3/BT button to switch to media mode.  
• Insert an USB drive or TF/micro SD card with compatible audio files; playback starts automatically.  
• Use NEXT/F.F and PREV/REW buttons to navigate songs.  
• Long press for fast forward or rewind.  
• Adjust volume with the VOLUME knob.  
• Note: Do not remove the USB drive or TF/micro SD during playback.

**4. Bluetooth Function**  
• Switch to Bluetooth mode by pressing the MODE button until listen “Bluetooth Waiting for pairing” voice prompt.  
• Enable Bluetooth on your device, search, and connect to the device named “4001800”.  
• Once connected, the prompt “Bluetooth Connecting” confirms pairing.

## POWER OPERATION

**DC Operation**  
• Connect the power adapter to the device and plug into an outlet matching the indicated voltage.  
• For battery recharge, Insert the DC plug into the socket; charging takes about 8 hours.  
• The unit can be used during charging.  
• When the device stops working or the sound disappears, charging is needed.

**Safety Information**  
• Avoid exposure to moisture, rain, and direct sunlight.  
• Do not expose to heat sources or high temperatures.  
• Ensure all connections are secure before powering on.  
• Place in well-ventilated areas; avoid placing near curtains, carpets, or in built-in installations.  
• This device contains dangerous voltage — handle with care.

## TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Solution
No power	Power switch off or faulty power supply	Turn on switch; check power connection, full charge the battery
No sound	Volume too low	Increase the volume
Poor radio reception	Bad antenna orientation	Rotate set for better reception
Bluetooth not pairing	Device not in pairing mode	Enable Bluetooth and pair again; reset device if necessary
Media won't play	Incorrect insertion or unsupported format	Check card insertion and formats supported
Device not responding	connection issue	Power cycle device, reconnect Bluetooth, forget the speaker from Bluetooth list and reconnect again.

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference.  
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.  
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.  
The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.