

双面印刷

180 mm

130 mm



RETRO WIRELESS RADIO Model4001801,4001802 USERRMANUAL



THANKS

Thank you for choosing the RETRO WIRELESS RADIO Radioshack 4001801/4001802. We appreciate your trust and support. Please read this manual thoroughly to ensure safe and optimal use of your device.


INDEX

- Introduction & Main Components
- Precautions & Safety Information
- Operating Instructions
 - Power On/Off & Volume Control
 - Radio Tuning (AM/FM/SW)
 - Media Player Operation
 - Bluetooth Functionality
- Power Supply & Charging
- Troubleshooting Guide
- FCC Part 15 Compliance

MAIN COMPONENTS

(Product may vary slightly from illustration)

- 1.Previous Track (Player Mode)
- 2.Next Track (Player Mode)
- 3.Mode: BT/USB/TF (short press)
- 4.Play/Pause (Player Mode)
- 5.Station Turning Knob
- 6.Mode Selector Switch: MUSIC/FM/AM/SW
- 7.On/Off & Volume Control Knob
- 8.USB Slot
- 9.TF/Micro SD Slot
- 10.DC 5V Power Input
- 11.Player Indicator
- 12.Headphones

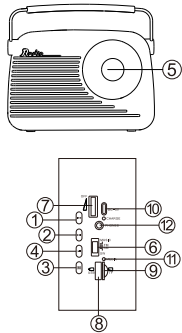

PRECAUTIONS & SAFETY INFORMATION

- Avoid exposing the device to excessive heat or cold, direct sunlight, or moisture.
- Do not spill liquids or use chemicals near the device.
- Do not move the device abruptly from cold to warm environments; wait until it stabilizes.
- Keep USB and TF/micro SD cards securely inserted and avoid removing during playback to prevent damage.
- Handle electrical connections carefully and ensure proper ventilation.
- This product contains hazardous voltage; handle with care.

OPERATING INSTRUCTIONS

1. Power On/Off & Volume

- Turn the ON/OFF & VOLUME control knob to power the unit on or off.
- Adjust volume with the same knob.

2. Radio Tuning (AM/FM/SW)

- Slide the switch to select the AM, FM, or SW bands.
- Use the Station Turning Knob to tune in desired stations.
- For FM/SW, rotate the built-in ferrite antenna for optimal reception.

3. Media Player

- Slide the switch to MUSIC (short press) media mode to activate.
- Insert an USB or TF/micro SD card with compatible audio files; playback starts automatically.
- Use NEXT/F.F and PREV/REW buttons to navigate songs.
- Long press NEXT/F.F or PREV/REW to fast forward or rewind.
- Adjust volume with the VOLUME knob.
- Note: Do not remove the USB or TF/micro SD card during playback to avoid damage; stop playback before removal.

4. Bluetooth Function

- Press the MODE button to switch to BT mode; you will hear "Waiting for pairing."
- Enable Bluetooth on your device (mobile, tablet, computer).
- Search for and connect to the device named "4001801" or "4001802"
- Once connected, you'll hear "Bluetooth Connecting" and the device is ready to play audio wirelessly.

POWER OPERATION

DC Power & Rechargeable Battery

- Plug the DC power cord into a compatible adapter (ensure voltage matches).
- Insert the adapter plug into the DC input to begin charging; recommended charge time is over 8 hours.
- The unit can be used while charging.
- If the sound stops or the device powers down, recharge the battery.

Special Attention

- Observe all safety warnings and instructions included.
- Do not expose the unit to moisture or rain.
- Ensure all connections are secure before powering on.
- Position the device in a well-ventilated area, away from curtains, carpets, or built-in installations.
- Avoid direct sunlight or heat sources.

TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Solution
No power	Power switch off or faulty power supply	Turn on switch, check power connection, full charge the battery
No sound	Volume muted or headphones connected	Increase volume, disconnect the headphones
Poor radio reception	Antenna positioning	Rotate or adjust the antenna for better reception
Bluetooth won't connect	Not in pairing mode or out of range	Enable Bluetooth, ensure device is discoverable, and within range
Media won't play	Incorrect insertion or unsupported format	Check card insertion and formats supported
Device not responding	connection issue	Power cycle device, reconnect Bluetooth, forget the speaker from Bluetooth list and reconnect again.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.