

A	1	2	3	4	5	6	修改区域		描述	日期	担当									
							1		XXXXXXXXXXXXXXXXXXXXXXXXXXXX	XXXXXXXXXX	XXXXXX									
B	<div><div><div><div>HOPESTAR -H70</div><div>便携式无线音箱</div><div></div><div>无线扬声器说明书</div></div><div><div>70 mm</div><div>122.5 mm</div></div></div><table><tr><th>HOPESTAR</th><th>无线扬声器-H70</th><th>HOPESTAR</th><th>无线扬声器-H70</th><th>HOPESTAR</th><th>无线扬声器-H70</th></tr><tr><td>技术规格: 无线标准: 5.3 传输距离: 10米 输出功率: 80W 播放时间: 4-6小时 频率响应: 80Hz~20KHz 扬声器 : 93mm 4D 50W, 66mm 4D 15W*2 输入电源: 5V === 2A 电池类型: 18650锂离子电池8800mAh 音频信号输入接口:标准中3.5mm耳机插孔(立体声)</td><td></td><td>蓝牙音箱按键说明: 1. 开机按键 长按开关机 约3秒/次 短按: “+” 长按: 下一曲 2. 按键 “+” 短按: 音量加 长按: 音量减 3. 按键 “-” 短按: 音量减 长按: 上一曲 4. 暂停/播放键 短按: 播放/暂停 长按: 退出/暂停蓝牙连接 蓝牙模式下双击为接听电话, 短按: 接听/挂断 来电情况下长按2秒为拒接电话 5. 灯按键 短按: 切换灯光模式 长按: 开/关灯 6. TWS按键 (连接2个扬声器) 短按: 进入/退出TWS 长按: 转换模式 7. AUX 插孔 标准Φ3.5mm耳机插孔 8. TF插孔 (支持64GB) 插入TF卡时, 默认为TF卡播放模式Φ. USB插孔 9. 插入U盘时, 默认为USB播放模式 10. Type-C 插孔 插入Type-C充电线时, 默认为设备充电</td><td>使用说明: 1. 无线配对 打开无线设备, 搜索蓝牙配对名称: HOPESTAR-H70 连接配对。 播放指示: 蓝牙搜索状态: 白灯快闪, 约0.5秒/次。 蓝牙配对状态: 白灯常亮 播放状态: 白灯灯慢闪 约1秒/次。 2. 充电指示灯: 充电为4颗指示灯闪烁 电量充满时4颗灯常亮 3. 充电提示: 1. 开/关机有语音提示音。 2. 音量加到最大音量有语音提示, 最小音量无语音提示。 3. 当机器电量过低时, 有低电量提示音。 4. 模式切换: 1. 开机默认进入蓝牙模式。 2. 模式切换顺序: 蓝牙模式-TF卡模式-U盘模式-AUX模式, 模式: 自动优先。 5. 音量要求: 开机默认音量70% 6. 省电功能 无工作状态 15分钟自动关机 8. TWS (真无线立体声) 操作说明 请确保两个扬声器是同一型号, 使用TWS有两种连接方式: 第一种方式: 打开两个扬声器并连接其中一个TWS键, 直到听到“哔”声, 表示连接成功, 然后连接手机的蓝牙, 播放音乐。 第二种方式: 1. 打开一个扬声器, 连接到手机的蓝牙。 2. 连接成功后, 打开第二个扬声器, 按下第一个扬声器的TWS键, 已连接蓝牙。听到“嘟嘟嘟”确认后, 扬声器连接上, 你就可以开始播放音乐了。 注意事项: TWS功能只有在两个扬声器型号相同, 且工作在蓝牙模式下(不支持TF卡或USB模式)才能使用。 点击“TWS按键”即可配对, 也可断开连接。 故障排除: 1. 自动关机: 电池电量不足时会自动开启电池保护,请充电4小时后使用。 2. 无法播放音乐: 音乐文件存储路径不能被播放识别, 音乐文件请存储在可移动设备的根目录下。 3. 连接电脑无声: 电脑界面连接错误, 请选择正确的音频输出端口。 4. 按键无反应或功能错乱: 关机后重试。 5. 复位: 当机器出现异常情况时, 可用细长圆棒, 按压AUX后面孔中的复位按钮进行复位</td><td>产品保修 用户名: _____ 联系电话: _____ 购买日期: _____ 产品编号: _____ 维护故障: _____ 注意: 产品保修期为6个月</td></tr></table></div>						HOPESTAR	无线扬声器-H70	HOPESTAR	无线扬声器-H70	HOPESTAR	无线扬声器-H70	技术规格: 无线标准: 5.3 传输距离: 10米 输出功率: 80W 播放时间: 4-6小时 频率响应: 80Hz~20KHz 扬声器 : 93mm 4D 50W, 66mm 4D 15W*2 输入电源: 5V === 2A 电池类型: 18650锂离子电池8800mAh 音频信号输入接口:标准中3.5mm耳机插孔(立体声)		蓝牙音箱按键说明: 1. 开机按键 长按开关机 约3秒/次 短按: “+” 长按: 下一曲 2. 按键 “+” 短按: 音量加 长按: 音量减 3. 按键 “-” 短按: 音量减 长按: 上一曲 4. 暂停/播放键 短按: 播放/暂停 长按: 退出/暂停蓝牙连接 蓝牙模式下双击为接听电话, 短按: 接听/挂断 来电情况下长按2秒为拒接电话 5. 灯按键 短按: 切换灯光模式 长按: 开/关灯 6. TWS按键 (连接2个扬声器) 短按: 进入/退出TWS 长按: 转换模式 7. AUX 插孔 标准Φ3.5mm耳机插孔 8. TF插孔 (支持64GB) 插入TF卡时, 默认为TF卡播放模式Φ. USB插孔 9. 插入U盘时, 默认为USB播放模式 10. Type-C 插孔 插入Type-C充电线时, 默认为设备充电	使用说明: 1. 无线配对 打开无线设备, 搜索蓝牙配对名称: HOPESTAR-H70 连接配对。 播放指示: 蓝牙搜索状态: 白灯快闪, 约0.5秒/次。 蓝牙配对状态: 白灯常亮 播放状态: 白灯灯慢闪 约1秒/次。 2. 充电指示灯: 充电为4颗指示灯闪烁 电量充满时4颗灯常亮 3. 充电提示: 1. 开/关机有语音提示音。 2. 音量加到最大音量有语音提示, 最小音量无语音提示。 3. 当机器电量过低时, 有低电量提示音。 4. 模式切换: 1. 开机默认进入蓝牙模式。 2. 模式切换顺序: 蓝牙模式-TF卡模式-U盘模式-AUX模式, 模式: 自动优先。 5. 音量要求: 开机默认音量70% 6. 省电功能 无工作状态 15分钟自动关机 8. TWS (真无线立体声) 操作说明 请确保两个扬声器是同一型号, 使用TWS有两种连接方式: 第一种方式: 打开两个扬声器并连接其中一个TWS键, 直到听到“哔”声, 表示连接成功, 然后连接手机的蓝牙, 播放音乐。 第二种方式: 1. 打开一个扬声器, 连接到手机的蓝牙。 2. 连接成功后, 打开第二个扬声器, 按下第一个扬声器的TWS键, 已连接蓝牙。听到“嘟嘟嘟”确认后, 扬声器连接上, 你就可以开始播放音乐了。 注意事项: TWS功能只有在两个扬声器型号相同, 且工作在蓝牙模式下(不支持TF卡或USB模式)才能使用。 点击“TWS按键”即可配对, 也可断开连接。 故障排除: 1. 自动关机: 电池电量不足时会自动开启电池保护,请充电4小时后使用。 2. 无法播放音乐: 音乐文件存储路径不能被播放识别, 音乐文件请存储在可移动设备的根目录下。 3. 连接电脑无声: 电脑界面连接错误, 请选择正确的音频输出端口。 4. 按键无反应或功能错乱: 关机后重试。 5. 复位: 当机器出现异常情况时, 可用细长圆棒, 按压AUX后面孔中的复位按钮进行复位	产品保修 用户名: _____ 联系电话: _____ 购买日期: _____ 产品编号: _____ 维护故障: _____ 注意: 产品保修期为6个月	正面	B	
	HOPESTAR	无线扬声器-H70	HOPESTAR	无线扬声器-H70	HOPESTAR	无线扬声器-H70														
	技术规格: 无线标准: 5.3 传输距离: 10米 输出功率: 80W 播放时间: 4-6小时 频率响应: 80Hz~20KHz 扬声器 : 93mm 4D 50W, 66mm 4D 15W*2 输入电源: 5V === 2A 电池类型: 18650锂离子电池8800mAh 音频信号输入接口:标准中3.5mm耳机插孔(立体声)		蓝牙音箱按键说明: 1. 开机按键 长按开关机 约3秒/次 短按: “+” 长按: 下一曲 2. 按键 “+” 短按: 音量加 长按: 音量减 3. 按键 “-” 短按: 音量减 长按: 上一曲 4. 暂停/播放键 短按: 播放/暂停 长按: 退出/暂停蓝牙连接 蓝牙模式下双击为接听电话, 短按: 接听/挂断 来电情况下长按2秒为拒接电话 5. 灯按键 短按: 切换灯光模式 长按: 开/关灯 6. TWS按键 (连接2个扬声器) 短按: 进入/退出TWS 长按: 转换模式 7. AUX 插孔 标准Φ3.5mm耳机插孔 8. TF插孔 (支持64GB) 插入TF卡时, 默认为TF卡播放模式Φ. USB插孔 9. 插入U盘时, 默认为USB播放模式 10. Type-C 插孔 插入Type-C充电线时, 默认为设备充电	使用说明: 1. 无线配对 打开无线设备, 搜索蓝牙配对名称: HOPESTAR-H70 连接配对。 播放指示: 蓝牙搜索状态: 白灯快闪, 约0.5秒/次。 蓝牙配对状态: 白灯常亮 播放状态: 白灯灯慢闪 约1秒/次。 2. 充电指示灯: 充电为4颗指示灯闪烁 电量充满时4颗灯常亮 3. 充电提示: 1. 开/关机有语音提示音。 2. 音量加到最大音量有语音提示, 最小音量无语音提示。 3. 当机器电量过低时, 有低电量提示音。 4. 模式切换: 1. 开机默认进入蓝牙模式。 2. 模式切换顺序: 蓝牙模式-TF卡模式-U盘模式-AUX模式, 模式: 自动优先。 5. 音量要求: 开机默认音量70% 6. 省电功能 无工作状态 15分钟自动关机 8. TWS (真无线立体声) 操作说明 请确保两个扬声器是同一型号, 使用TWS有两种连接方式: 第一种方式: 打开两个扬声器并连接其中一个TWS键, 直到听到“哔”声, 表示连接成功, 然后连接手机的蓝牙, 播放音乐。 第二种方式: 1. 打开一个扬声器, 连接到手机的蓝牙。 2. 连接成功后, 打开第二个扬声器, 按下第一个扬声器的TWS键, 已连接蓝牙。听到“嘟嘟嘟”确认后, 扬声器连接上, 你就可以开始播放音乐了。 注意事项: TWS功能只有在两个扬声器型号相同, 且工作在蓝牙模式下(不支持TF卡或USB模式)才能使用。 点击“TWS按键”即可配对, 也可断开连接。 故障排除: 1. 自动关机: 电池电量不足时会自动开启电池保护,请充电4小时后使用。 2. 无法播放音乐: 音乐文件存储路径不能被播放识别, 音乐文件请存储在可移动设备的根目录下。 3. 连接电脑无声: 电脑界面连接错误, 请选择正确的音频输出端口。 4. 按键无反应或功能错乱: 关机后重试。 5. 复位: 当机器出现异常情况时, 可用细长圆棒, 按压AUX后面孔中的复位按钮进行复位	产品保修 用户名: _____ 联系电话: _____ 购买日期: _____ 产品编号: _____ 维护故障: _____ 注意: 产品保修期为6个月															
C	<div><div><div><div>HOPESTAR -H70</div><div>Portable Wireless Speaker</div><div></div><div>WIRELESS SPEAKER INSTRUCTIONS</div></div><div><div>70 mm</div><div>122.5 mm</div></div></div><table><tr><th>HOPESTAR</th><th>Wireless speaker-H70</th><th>HOPESTAR</th><th>Wireless speaker-H70</th><th>HOPESTAR</th><th>Wireless speaker-H70</th></tr><tr><td>Technical Specifications: Wireless standard: 5.3 Transmission distance: 10 meters Output power: 80W Playing time: 4-6 hours Frequency effect:80Hz-20KHz Speaker: 93mm 4D 50W, 66mm 4D 15W*2 Input power: 5V === 2A Battery type: 18650 lithium ion battery 8800mAh Audio signal input interface: standard 3.5mm headphone jack (stereo)</td><td></td><td>Button instruction: 1. Power On/Off button Long press: turn on/off the speaker Short press: Volume Up Long press: Next song 2. Button “+” Short press: Volume decrease Long press: Previous song 3. Button “-” Short press: Volume increase Long press: Next song 4. Pause/Play button Short press: Pause/Play</td><td>Long press:Disconnect/connect to bluetooth Double click in Bluetooth mode to call back; single click to answer/end; In case of a call, long press for 2 seconds to reject the call. 5. Light button Short press: Switch Light mode 6. TWS Button (Connect 2 speakers) Short press: Connect/disconnect TWS Long press: Switch modes 7. AUX Jack Standard Φ 3.5mm audio jack 8. TF Jack (Max 64GB) When insert the TF card , the default is the TF card playing mode 9.USB Jack When insert the USB flash, it defaults to USB playback mode 10. Type-C Jack The charging cable connector, when plugged into the Type-C charging cable, charges the device by default. Directions for use: 1. Wireless pairing Turn on the wireless device and search for the Bluetooth pairing name: HOPESTAR-H70 to connect. 2. Play Instructions: Bluetooth search status: The white light flashes quickly, about 0.5 seconds per flash.</td><td>Bluetooth pairing status: The white light remains on steadily. Playback status: The white light flashes slowly, about once per second. 3. Charging indicator: When charging, four running water lights flash. Four lights are always on when the battery is fully charged. 4. Voice prompt: 4.1. There is a voice prompt when turning on/off. 4.2. When the volume is increased to the maximum volume,there will be a voice prompt, and the minimum volume will not have a voice prompt. 4.3. When the power of the machine is too low, there is a low power voice prompt. 5. Mode switching: 5.1 Turn on the Bluetooth mode by default. 5.2 The device switches modes in the following sequence: Wireless mode → TF card mode → USB mode → AUX mode. 6. Volume Requirements: The default volume at power-on is 70%. 7. Power Saving Function The device will automatically shut down within 15 minutes inactivity. 8. TWS (True Wireless Stereo) Operation Instructions Make sure that the two speakers are the same model. There are two ways to connect using TWS: First way : Turn on both speakers and press one of the series keys until you hear a “beep,” indicating successful connection.Then connect the Bluetooth of the mobile phone to play music. Second way: 1. Turn on one speaker and connect it to the Bluetooth of the mobile phone. 2. Once connected, turn on the second speaker 3. Press the series key of the first speaker, already connected with Bluetooth. After hearing “dudu” for confirmation, the speakers are connected, and you can start playing music. > Note: TWS function is available only when both speakers are the same model, operating in Bluetooth mode (not compatible with TF card or USB mode). Click the “TWS” button once to pair or disconnect the speakers. Troubleshooting: 1. Automatic shutdown: when the battery power is low, the battery protection will be turned on automatically and remind you through beep voice prompt for three times then automatic shutdown, please charge for 4 hours After use. 2. Cannot play music: The storage path of the music file cannot be recognized by the player, and the music file Please store it in the root directory of the removable device. 3. There is no sound when connecting to the computer: the computer interface is connected incorrectly, please select the correct audio output port. 4. There is no response to the keys or the function is in disorder: try again after shutting down. 5. When the machine encounters abnormal situations, a slender round pin can be used to press the reset hole inside the AUX to reset.</td><td>Product warranty Username: _____ Contact number: _____ Date of purchase: _____ Product number: _____ Maintenance failure: _____ Note: The product warranty is 6 months</td></tr></table></div>						HOPESTAR	Wireless speaker-H70	HOPESTAR	Wireless speaker-H70	HOPESTAR	Wireless speaker-H70	Technical Specifications: Wireless standard: 5.3 Transmission distance: 10 meters Output power: 80W Playing time: 4-6 hours Frequency effect:80Hz-20KHz Speaker: 93mm 4D 50W, 66mm 4D 15W*2 Input power: 5V === 2A Battery type: 18650 lithium ion battery 8800mAh Audio signal input interface: standard 3.5mm headphone jack (stereo)		Button instruction: 1. Power On/Off button Long press: turn on/off the speaker Short press: Volume Up Long press: Next song 2. Button “+” Short press: Volume decrease Long press: Previous song 3. Button “-” Short press: Volume increase Long press: Next song 4. Pause/Play button Short press: Pause/Play	Long press:Disconnect/connect to bluetooth Double click in Bluetooth mode to call back; single click to answer/end; In case of a call, long press for 2 seconds to reject the call. 5. Light button Short press: Switch Light mode 6. TWS Button (Connect 2 speakers) Short press: Connect/disconnect TWS Long press: Switch modes 7. AUX Jack Standard Φ 3.5mm audio jack 8. TF Jack (Max 64GB) When insert the TF card , the default is the TF card playing mode 9.USB Jack When insert the USB flash, it defaults to USB playback mode 10. Type-C Jack The charging cable connector, when plugged into the Type-C charging cable, charges the device by default. Directions for use: 1. Wireless pairing Turn on the wireless device and search for the Bluetooth pairing name: HOPESTAR-H70 to connect. 2. Play Instructions: Bluetooth search status: The white light flashes quickly, about 0.5 seconds per flash.	Bluetooth pairing status: The white light remains on steadily. Playback status: The white light flashes slowly, about once per second. 3. Charging indicator: When charging, four running water lights flash. Four lights are always on when the battery is fully charged. 4. Voice prompt: 4.1. There is a voice prompt when turning on/off. 4.2. When the volume is increased to the maximum volume,there will be a voice prompt, and the minimum volume will not have a voice prompt. 4.3. When the power of the machine is too low, there is a low power voice prompt. 5. Mode switching: 5.1 Turn on the Bluetooth mode by default. 5.2 The device switches modes in the following sequence: Wireless mode → TF card mode → USB mode → AUX mode. 6. Volume Requirements: The default volume at power-on is 70%. 7. Power Saving Function The device will automatically shut down within 15 minutes inactivity. 8. TWS (True Wireless Stereo) Operation Instructions Make sure that the two speakers are the same model. There are two ways to connect using TWS: First way : Turn on both speakers and press one of the series keys until you hear a “beep,” indicating successful connection.Then connect the Bluetooth of the mobile phone to play music. Second way: 1. Turn on one speaker and connect it to the Bluetooth of the mobile phone. 2. Once connected, turn on the second speaker 3. Press the series key of the first speaker, already connected with Bluetooth. After hearing “dudu” for confirmation, the speakers are connected, and you can start playing music. > Note: TWS function is available only when both speakers are the same model, operating in Bluetooth mode (not compatible with TF card or USB mode). Click the “TWS” button once to pair or disconnect the speakers. Troubleshooting: 1. Automatic shutdown: when the battery power is low, the battery protection will be turned on automatically and remind you through beep voice prompt for three times then automatic shutdown, please charge for 4 hours After use. 2. Cannot play music: The storage path of the music file cannot be recognized by the player, and the music file Please store it in the root directory of the removable device. 3. There is no sound when connecting to the computer: the computer interface is connected incorrectly, please select the correct audio output port. 4. There is no response to the keys or the function is in disorder: try again after shutting down. 5. When the machine encounters abnormal situations, a slender round pin can be used to press the reset hole inside the AUX to reset.	Product warranty Username: _____ Contact number: _____ Date of purchase: _____ Product number: _____ Maintenance failure: _____ Note: The product warranty is 6 months	反面	C
	HOPESTAR	Wireless speaker-H70	HOPESTAR	Wireless speaker-H70	HOPESTAR	Wireless speaker-H70														
	Technical Specifications: Wireless standard: 5.3 Transmission distance: 10 meters Output power: 80W Playing time: 4-6 hours Frequency effect:80Hz-20KHz Speaker: 93mm 4D 50W, 66mm 4D 15W*2 Input power: 5V === 2A Battery type: 18650 lithium ion battery 8800mAh Audio signal input interface: standard 3.5mm headphone jack (stereo)		Button instruction: 1. Power On/Off button Long press: turn on/off the speaker Short press: Volume Up Long press: Next song 2. Button “+” Short press: Volume decrease Long press: Previous song 3. Button “-” Short press: Volume increase Long press: Next song 4. Pause/Play button Short press: Pause/Play	Long press:Disconnect/connect to bluetooth Double click in Bluetooth mode to call back; single click to answer/end; In case of a call, long press for 2 seconds to reject the call. 5. Light button Short press: Switch Light mode 6. TWS Button (Connect 2 speakers) Short press: Connect/disconnect TWS Long press: Switch modes 7. AUX Jack Standard Φ 3.5mm audio jack 8. TF Jack (Max 64GB) When insert the TF card , the default is the TF card playing mode 9.USB Jack When insert the USB flash, it defaults to USB playback mode 10. Type-C Jack The charging cable connector, when plugged into the Type-C charging cable, charges the device by default. Directions for use: 1. Wireless pairing Turn on the wireless device and search for the Bluetooth pairing name: HOPESTAR-H70 to connect. 2. Play Instructions: Bluetooth search status: The white light flashes quickly, about 0.5 seconds per flash.	Bluetooth pairing status: The white light remains on steadily. Playback status: The white light flashes slowly, about once per second. 3. Charging indicator: When charging, four running water lights flash. Four lights are always on when the battery is fully charged. 4. Voice prompt: 4.1. There is a voice prompt when turning on/off. 4.2. When the volume is increased to the maximum volume,there will be a voice prompt, and the minimum volume will not have a voice prompt. 4.3. When the power of the machine is too low, there is a low power voice prompt. 5. Mode switching: 5.1 Turn on the Bluetooth mode by default. 5.2 The device switches modes in the following sequence: Wireless mode → TF card mode → USB mode → AUX mode. 6. Volume Requirements: The default volume at power-on is 70%. 7. Power Saving Function The device will automatically shut down within 15 minutes inactivity. 8. TWS (True Wireless Stereo) Operation Instructions Make sure that the two speakers are the same model. There are two ways to connect using TWS: First way : Turn on both speakers and press one of the series keys until you hear a “beep,” indicating successful connection.Then connect the Bluetooth of the mobile phone to play music. Second way: 1. Turn on one speaker and connect it to the Bluetooth of the mobile phone. 2. Once connected, turn on the second speaker 3. Press the series key of the first speaker, already connected with Bluetooth. After hearing “dudu” for confirmation, the speakers are connected, and you can start playing music. > Note: TWS function is available only when both speakers are the same model, operating in Bluetooth mode (not compatible with TF card or USB mode). Click the “TWS” button once to pair or disconnect the speakers. Troubleshooting: 1. Automatic shutdown: when the battery power is low, the battery protection will be turned on automatically and remind you through beep voice prompt for three times then automatic shutdown, please charge for 4 hours After use. 2. Cannot play music: The storage path of the music file cannot be recognized by the player, and the music file Please store it in the root directory of the removable device. 3. There is no sound when connecting to the computer: the computer interface is connected incorrectly, please select the correct audio output port. 4. There is no response to the keys or the function is in disorder: try again after shutting down. 5. When the machine encounters abnormal situations, a slender round pin can be used to press the reset hole inside the AUX to reset.	Product warranty Username: _____ Contact number: _____ Date of purchase: _____ Product number: _____ Maintenance failure: _____ Note: The product warranty is 6 months														
D	成品尺寸: 122.5x70mm 材质工艺: 128g双铜, 单张双面四色印刷, 风琴折						深圳品质人生科技有限公司		订单编号:											
							设计: LZY		料号:											
							业务: 2024-11-23		文件编号: 001											
							电子: 审核:		名称: H70-中性说明书											
							结构: 核准:													
									页次: 1/1 版次: 1.0											
1		2		3		4		5		6										

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.