

Uideal™ True Wireless Stereo Earbuds CC-TCN01

Instruction

Please read the instruction manual carefully before using the product and keep it with proper care.

1. Product parameter

Name: Uideal™ ColorCube True Wireless Stereo Earbuds
Model No.: CC-TCN01
Material: ABS
Wireless version: V5.3
Music time: 7 hours
Talking time: 7 hours
Battery capacity: 3.7V,30mAh(earphones)
3.7V,250mAh(charging case)

Chip: JL7006
Wireless pair name: CTCN01
Working distance: ≥10m
Frequency response: 20Hz~20KHz
Charge interface: Type-c
Compatibility: compatible with all wireless devices
Charging time: 1 hour (earphones)
1.5 hours (charging case)

The above data are measured by UIDEAL laboratory, the actual use will be slightly different depending on the specific circumstance

2. Packing list



Charging case
*1pcs



Earphone (L&R)
*2pcs



Charging cable
*1pcs

 


User manual
*1pcs



Warranty card
*1pcs

3. Product Appearance



Touch area



Type-c charging port



Indicator light

Music mode:

- Volume + : Double-click on right earphone(R)
- Volume - : Double-click on left earphone(L)
- Play/Pause : Tap the earphone (L or R)
- Activate voice assistant(Siri) : Long touch the left or right earphone (L or R)
- Next song : Triple-click right earphone(R)
- Last song : Triple-click left earphone(L)

Call mode:

 
- Answer/Hang up : Double-click earphone (L or R)
- Reject a call : Long press earphone 3s (L or R)

4. Product Operating Method

1. Initial use

Step 1 - Turn on

The earphones automatically power on after open the cover and take it out.

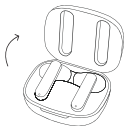


Step 2 - Pairing mode

The earphones automatically enter pairing mode after power on.




Step 3 - Wireless connectivity

 Turn on the Wireless function of the mobile phone, select the device model: CTCN01, then click it to connect earphone to mobile phone.



Step 4 - Shutdown

 The earphone automatically shutdown after place the earphone back in charging case and close the cover.

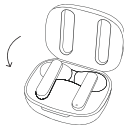

Note:

1) Indicator light

- Earphones power on/off : red light flashes 3 times.
- Charging case charges earphones: earbuds red light always on
- Charge the charging case: case green light flashes when charging, green always on when case full charged.
- Earphones are in pairing mode: red and blue light flash alternately

2) Pairing time

In pairing mode, if the connection is not successful for over 3 minutes, the earphones will automatically power off. (The earphones have a memory function, they will automatically reconnect to the phone when restarting.)

5. Product safety information

Please read all the instructions and warnings before using this product. Non-standard use will damage the product or personal safety.

- The battery is included in the product. Please do not expose it to sunlight, fire or similar overheating; Do not store the product in high temperature, strong light and strong magnetic field. Do not place it in other harsh environments such as fire source. If water enters, dry it naturally and use it again.
- Improper use of the product can easily cause damage to the product or may endanger personal and property safety.
- Consumer shall be liable for any personal and property damage resulted from their improper use against the user manual or ignoring the warning, to which our company will not bear any legal liability.
- Disintegration of this product by non-professionals is strictly prohibited.
- Use of household appliances or loads in excess of the output current of this product shall be avoided (no output due to circuit protection).
- Intense physical actions including knocking, throwing, trampling on and squeezing, etc. shall be avoided.
- The ambient temperature of product is 0-45°C.

Warning



Please follow the above safety instructions otherwise it will cause fire, electric shock, damage or other damage.

6. FAQs:

Q1. Why my product can not be turned on/off?

- A: 1) Make sure that the charging case has battery left, put the earphones back in the charging case, and close the lid to turn off the earphones automatically.
- 2) When the charging case is out of battery, please turn off the bluetooth function on your phone and the earphones will turn off automatically in 5 minutes;
- 3) Keep the charging area of the earphones and Pogo pin of the charging case clean, and regularly clean them with dry cloth.

Q2. Why is the touch function not sensitive?

- A: 1) Make sure that the functional area of the earphones is clean and water-free;
- 2) Make sure that the fingers to touch the earphones are without water or other foreign objects;
- 3) Make sure that the touch position is correct, and complete the quick double-click or triple-click operation within 1s;
- 4) If the earphones can not be returned to normal after the above steps, please put the earphones back into the charging case, manually ignore the phone wireless device and turn off wireless, and restore factory settings before reconnection.

Q3. Why can't my product connect to the wireless device again?

- A: 1) The earphones will be disconnected if they are out of the connection range of 10 meters. The earphones will automatically shut down if they are not back to the connection range within 5 minutes.
- 2) If the earphones fail to connect to the wireless device again within 5 minutes, please put the earphones into the charging case and close the lid, and then take them out.

Q4. Why is one of my earphones without sound after I take them out?

- A: 1) If this problem occurs, please put the earphones into the charging case and close the lid, and then take them out.
- 2) If it is unable to connect after the above operation, please turn off the bluetooth of other mobile phones close to the mobile phone and restore factory settings before connecting.

Q5. The mobile phone cannot find the Wireless headphone, the bluetooth connection is unstable or disconnected during use, thus resulting in unsmooth sound/interruption?

- A: 1) Please do not exceed the bluetooth connection distance of the mobile phone, so as to avoid interference from the wall or the human body;
- 2) Please make sure the earphone has enough power, and re-enter the pairing mode to connect;
- 3) If it is unable to connect after the above operation, please turn off the bluetooth of other mobile phones close to the mobile phone and restore factory settings before connecting;
- 4) Due to the property of the Wireless earphone, the electromagnetic waves in your area may interfere with the bluetooth connection, resulting in sound problem or disconnection, please stay away from such areas before connecting.

Contact Us:

📧 service@hkuideal.com
💼 bussiness@hkuideal.com

✉ uidealaffiliate@hkuideal.com
🌐 <https://www.hkuideal.com>

 
Authorizer : Guangzhou Sesame Blossom Intelligent Technology Co., Ltd
Add : Dongpeng Debao Business Center, 109 Huanhua Road, Fangcun, Liwan District, Guangzhou
Manufacturer : Huizhou Kasimo Electronics Co., Ltd
Add : 1-5th Floor, Xinyi Garden, Shiwan Town, Boluo County, Huizhou City, Guangdong Province, China

Made in China
Designed by Uideal™





Youth is Wireless

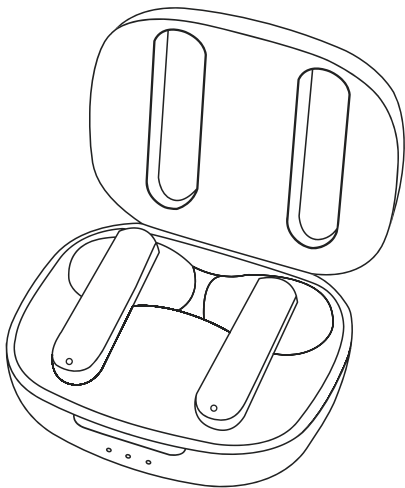

Uideal真无线降噪蓝牙耳机CC-TCN01

使用说明书

使用产品请仔细阅读本使用说明，并请妥善保管

一、产品参数

名称: Uideal真无线降噪蓝牙耳机

型号: CC-TCN01

材质: ABS

蓝牙版本: V5.3

音乐时间: 7小时

通话时间: 7小时

电池容量: 3.7V, 35mAh (耳机)

3.7V, 250mAh (充电仓)

芯片: 杰里7006

蓝牙配对名: CTCN01

连接距离: ≥ 10 米

频响范围: 20Hz-20KHz

接口: Type-c

适用: 具有蓝牙功能的设备

充电时间: 1小时 (耳机)

1.5小时 (充电仓)

以上数据来源于Uideal实验室测定值, 但因客观环境改变数据会有所不同或误差

二、包装清单



充电盒*1pcs



耳机(L&R)*2pcs



充电线*1pcs



说明书*1pcs



保修卡*1pcs

三、产品外观



音乐模式:

- 音量+: 双击右耳机(R)
- 音量-: 双击左耳机(L)
- 播放/暂停: 单击左耳机或右耳机(L or R)
- 激活语音助手(Siri): 长按左或右耳机2s
- 下一曲: 三击右耳机(R)
- 上一曲: 三击左耳机(L)

通话模式:

 
- 接听/挂断: 单击左耳机或右耳机 (L or R)
- 拒接: 长按左耳机或右耳机3s (L or R)

四、产品操作方法

1.首次使用

第1步--开机

打开充电仓盖子后，将耳机取出，耳机自动开机。

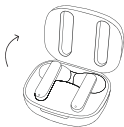

第2步--配对模式

耳机开机后自动进入配对模式。



 
第3步--蓝牙连接

打开手机蓝牙功能，选择蓝牙配对名CTCN01，点击进行连接手机与耳机。



第4步--关机

将耳机放回充电盒，并盖上盖子，耳机自动关机。

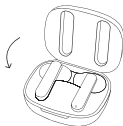

注意:

1) 指示灯

- 耳机开机/关机：耳机红灯闪3下
- 充电盒给耳机充电：耳机红灯常亮
- 给充电盒充电：充电仓绿灯闪烁，充满绿灯常亮
- 耳机在配对状态：耳机红蓝交替闪烁

2) 配对时间

配对模式下，若超过3分钟未成功连接，耳机将自动关机。（耳机有记忆功能，后续开机后会自动回连到手机。）

五、产品安全信息

在使用本产品前请阅读所有的指示与警告，不规范使用将会给产品与人身安全带来损害。

- 产品内含电池，请不要暴露在日照，火烤或者类似过热环境中；不要将本产品存储在高温，强光及强磁场环境下，不要放置在火源等其它恶劣环境中，如果进水，请自然晾干后再使用。
- 产品使用不当，容易造成产品本身或者可能危及人身财产安全。
- 如因消费者违反产品说明书不恰当使用，造成的人身及财产损害将自行承担一切后果，本公司将不承担任何法律责任。
- 非专业人员严禁分解本产品。
- 避免使用超出本产品输出电流的用电器或负载(电路会保护，无输出)。
- 避免强烈的物理作用，包括敲击、投掷、践踏、挤压等。
- 产品使用环境温度：0-45℃



警告 请遵循以上安全说明，否则会导致起火、触电、损害或者其他伤害

六、常见问题解答：

1. 为什么我的产品不能关机？

- 答：1) 确保充电盒有电的情况下，将耳机放回充电盒，并关上盖子，耳机将自动关机；
- 2) 当充电盒没有电时，请关闭手机上的蓝牙功能，等待5分钟后，耳机将自动关机；
- 3) 保持耳机充电区与充电盒充电弹针的洁净，并定期用干净的干棉布进行清洁。

2. 为什么触摸功能不灵敏？

- 答：1) 请确保耳机触摸功能区域干净且无水渍；
- 2) 请确保进行触摸操作的手指无水渍或其他异物；
- 3) 请确保触摸位置正确，并在1秒内完成快速双击或三击操作；
- 4) 如上操作仍无法恢复正常，请将耳机放回充电仓，手动忽略手机蓝牙设备并关闭蓝牙，进行恢复出厂设置操作后再进行连接。

3. 为什么我的产品无法回连？

- 答：1) 超出连接范围10米耳机将断开连接，5分钟内未重新回到连接范围内，耳机将自动关机；
- 2) 超出5分钟未重新回连的，请将耳机放回充电盒并盖上盖子，再将耳机取出。

4. 为什么我的耳机取出后一边没有声音？

- 答：1) 出现此情况时，请将耳机放回充电盒并盖上盖子，再将耳机取出；
- 2) 如上操作仍无法连接，请将手机周围手机蓝牙全部关闭，进行恢复出厂设置操作后再进行连接。

5. 手机搜索不到蓝牙耳机，蓝牙连接不稳定或使用中和手机断连，出现声音卡顿/断续？

- 答：1) 请不要超出手机蓝牙连接距离10米，避免受到墙体或人体的隔挡干扰；
- 2) 请确保耳机有足够电量，并重新进入配对模式进行连接；
- 3) 如上操作仍无法连接，请将手机周围手机蓝牙全部关闭，进行恢复出厂设置操作后再进行连接；
- 4) 由于蓝牙耳机的特性，您所在区域的电磁波可能干扰蓝牙的连接，导致出现无声或者断连的情况，请远离此类区域再进行连接。



Uideal畅享无线

品牌商: 广州芝麻开花智能科技有限公司

地址: 广州荔湾区浣花路109号东鹏德宝商务中心15楼8152室

制造商: 惠州卡斯摩电子有限公司

地址: 广东省惠州市博罗县石湾镇新怡花园1-5楼

中国制造
优艾迪设计





Youth is Wireless

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.