


物料名称：用户手册


物料编号：

材质：70g书写纸，双面印刷

尺寸：540 x 144mm 成品尺寸：60x72mm

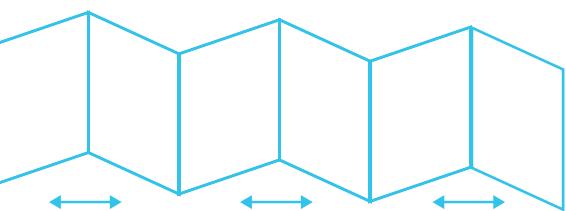

正面

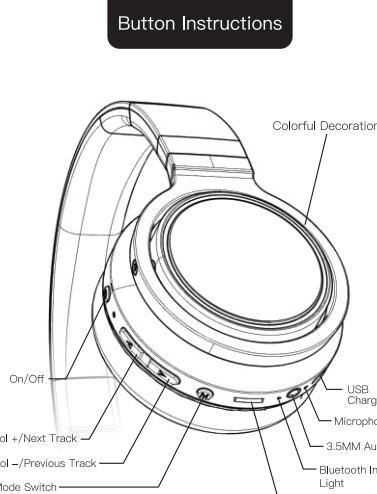FUNCTION		Button Instructions	Button Instructions	MODE DESCRIPTION	OTHER FUNCTIONS
 <b>BAMBAM</b> USER MANUAL	<b>Mode Conversion</b> - The headphone will automatically switch to TF mode when insert TF card - The headphone will automatically switch to BT mode when pull out TF card <b>TF Mode</b> green LED stay on indefinitely when pause; green LED flash slowly when music playing <b>Standby Mode</b> blue LED stay on indefinitely <b>Incoming Call Status</b> blue LED flash quickly <b>Low Battery Status</b> red LED flash quickly <b>Charging Status</b> red LED light on in charging, red LED goes off while fully charged	<b>Basic Key Operation</b> <b>Turn On</b> Press  for 3 seconds, the headphone will be turn on after blue LED light on for 3 seconds <b>Turn Off</b> Press  for 3 seconds, the headphone will be turn off after red LED light on for 3 seconds		<b>Turn On/Off Decoration Light</b> You can turn on/off decoration light by long press "Vol+" and "Vol-" for 6 seconds after headphone turned on. <b>Headphone Turn On Mode</b> Long press turn on key for 3 seconds, the headphone will be turned on and automatically enter into BT mode. It will search to pair or reconnect to last successfully connected cell phone. Also the decoration light will be light on. <b>BT Mode</b> Without inserting TF card, long press turn on key for 3 seconds, the headphone will be turned on and enter into BT mode, red and blue LED twinkle alternately. Turn on BT function on your cell phone, and search <b>BAM1</b> , click to connect. After connect successfully, blue LED stay on indefinitely, and when in music playing, blue LED flash slowly. <b>TF Mode Play</b> Long press turn on key for 3 seconds, if insert the TF card, it will play the music in the TF card. You can adjust volume by short press <b>A</b> and <b>V</b> . Long press <b>A</b> and <b>V</b> can switch to previous or next song. You can pause or play music by short press  . You can switch between BT mode and TF mode by short press <b>M</b> .	<b>Charging Mode</b> New headphones come with power, and support several times usage. When in low battery, pls charge it for around 3 hours with USB charging cable. The headphones will turn off automatically when in charging. Red LED light on in charging, and will goes off while fully charged. <b>Power Status</b> When the headphones connected to the iOS device, the current power status of the headphone will be showed in the upper right corner of the device screen. When the headphone in low battery, it will prompt "battery low", and also red LED flash quickly. <b>Line-in Mode</b> 1. Turn on status: plug in audio cable, the headphone turn off, you can listen to the music with the audio cable. 2. Turn off status: plug in audio cable, the headphone can't be turned on, you can only listen to the music with the audio cable. Note: If you want to listen to the songs in the BT or TF card, you need to unplug the audio cable and turn on to use.

反面

SPECIFICATION	SPECIFICATION	PRECAUTIONS	FCC WARNING	WARRANTY CARD
<b>Profiles Supported</b> A2DP/AVRCP/SMP/HFP <b>Accept Range</b> 8 ~ 10M <b>Resistance</b> 32Ω ± 15% <b>Sensitivity</b> 108 ± 3dB at 1K HZ <b>Frequency Range</b> 20 HZ ~ 20K HZ <b>Charging Voltage</b> 5V <b>Charging Current</b> 300MA <b>Operating Voltage</b> 3.7V <b>Operating Current</b> 15MA ~ 52MA	<b>Warm Tips</b> 1. Please charge the headphone with 5V 1A charger, high voltage may damage the headphone. 2. When the headphone has not been used for more than 3 months, it needs to be charged before using. 3. When the headphone has not been used for a long time, we suggest you to charge every 3 months to provide good protection for the battery.  <b>Packing List</b> 1. BTHeadphones      3. USB Charging Cable 2. User Manual      4. Certification	<b>Attenions</b> 1. Please keep or use the headphone in normal temperature, avoid direct sunlight. 2. Please keep the headphone away from fire or other hot object. 3. Please keep the headphone away from damp place or submerged in liquid, keep dry. 4. Please don't try to use other method for charging other than the USB charging cable we provide. 5. Please don't disassemble, repair or modify. 6. Please pay attention to excessive clash, if any damage (like dents, deformation, corrosion, etc.), please turn to us for help. 7. If the headphone produces an abnormal smell, higher than normal temperature, color or shape changes abnormally, please stop to use and turn to us for help.  <b>Warning</b> 1. There is a danger of explosion if you replace the battery in improper way. It can only be replaced with a battery of the same type or equivalent. The battery (battery pack or assembled battery) must not be exposed to the conditions such as sunlight, fire, or similar overheating environment. 2. The device should not suffer from water droplets or water splashes, and also should not be placed in vessels or similarly objects filled with liquids. 3. This product is not belong to children's toy. Children under the age of 14 are not to be accompanied by their parents to use. 4. Using headset at high volume for long periods of time may cause damage to your hearing.	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p><b>Note:</b> This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: ► Reorient or relocate the receiving antenna. ► Increase the separation between the equipment and receiver. ► Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. ► Consult the dealer or an experienced radio/TV technician for help.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>	<b>Product Model:</b> <input type="text"/> <b>Product Color:</b> <input type="text"/>  <b>Purchase Date:</b> <input type="text"/> <b>Purchase Store:</b> <input type="text"/>  <b>Purchase Account:</b> <input type="text"/> <b>Reason for Warranty:</b> <input type="text"/>  <b>User Name:</b> <input type="text"/> <b>Phone Number:</b> <input type="text"/>  <b>User Address:</b> <input type="text"/>  <b>Warranty Description</b> Please keep the warranty card and valid purchase proof properly, show it together when sending the product to repair. If you can't provide the warranty card or relevant purchase certificate, the calculation date of the product warranty will be based on the product manufacture date.  <b>Warranty Regulations</b> 1. If you have any question during using, please don't hesitate to call 910-515-0000 for help. 2. Within one year from the date of purchase, if the product has any failure due to the quality of the product or the fault of the company, the company will provide free replacement service. 3. In the following cases, our company refuses to provide free warranty service, only providing maintenance services, free of labor costs, only charges for parts: A. The product has been modified or repaired without our company's authorization. B. The product has been damaged or repaired without our company's authorization. C. The headphone driver unit has been used at high volume, and the diaphragm is deformed due to debris or impact. The headphone cable is broken, crushed, immersed in water, the case is damaged, deformed or lost. D. The original warranty card and valid purchase proof can't be provided, and the purchase date is beyond the warranty period. 4. The free service provided by this warranty card does not include product accessories, and other decorations, gift, etc.  <b>Product Qualification Certificate</b> After inspection, the product meets the technical standards and is allowed to leave the factory. 