

## Instructions for Use: Wine-Soaked Speaker

### Security structure:

Before using this device, please read the instructions for use and follow all safety instructions.

Avoid damage caused by improper use.

1. Keep the product manual for reference.
2. The manufacturer is not liable for any damage that may be caused by improper use or handling of the equipment.
3. This device is not intended for use by children.
4. Before connecting the device to a power source, please check that the power type and voltage match the information provided in the specifications.
5. Keep electrical appliances away from heat sources and open flames.
6. Do not use the device if it is damaged. To avoid danger, defective parts must be replaced by the manufacturer.
7. Under no circumstances should you disassemble the product's interior.
8. Do not immerse the speaker or power supply in water or other liquids.
9. Do not place electrical appliances directly near liquids, such as in damp basements or near swimming pools, like bathtubs and sinks.
10. Do not charge the speaker in humid conditions.
11. Please close the rubber cover when using the speaker.
12. When cleaning the bucket, first disassemble the speaker part, then dry it before reinstalling it; do not wash the speaker part.

### Accessories:

Booze-soaked speaker x1

USB charging cable x1

User Manual 1

### Specification

wireless version 5.1

Power: 5W

Battery life: 4.5 hours

Charging voltage and current: DC 5V-1A

Built-in rechargeable battery: 3.7V



### wireless connection

1. Press the power button for 2-3 seconds to turn on the speaker. The blue LED will start flashing.
2. Turn on wireless on your smartphone. For pairing instructions, refer to its user manual and connect your wireless device.
3. Select DJ-598 from the device list
4. After a successful connection, the blue indicator light stops flashing.

5. If you have used a wireless connection before, once you turn on the device, the system will start searching for the last connected device. When the device is found... It will automatically reconnect.

Attention: It will automatically shut down if there is no connection after 5 minutes!

Product Overview:

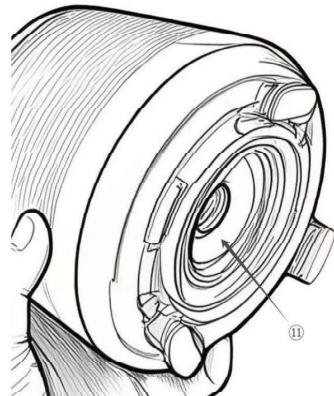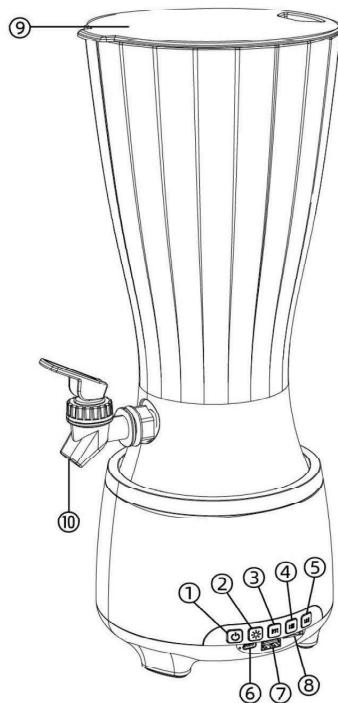

1. Power switch / Pause playback	Long press key: Power On/Off Short press: Pause/Play
2. Playback Mode Switch / Lighting Mode Switch	<b>Long press key: wireless mode / TF card mode / USB drive mode</b> <b>Short press: Switch lights</b>
Previous song/volume down	Long press: Volume down Short press: Previous track
4. Pause playback	<b>Short press: Pause</b>
5. Next song/volume up	Long press: Volume up Short press: Next track
6. TYPE-C charging port	Connect to a 5V-1A power supply for automatic charging. The red light is on when charging The red light goes out when it is full.
7.TF card	Insert autoplay
8. USB drive	Insert autoplay
9. Container lid	Open/Uncover
10. Water Outlet	Press down to dispense water
11. Loudspeaker	

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.