

User Manual

01 Remove old handle.

Remove all existing hardware and thoroughly clean door handle area.

02 Install handle into existing cutout.

- A. Insert front portion of handle into door opening while carefully placing wires ahead of handle.
- B. Align new strike plate and secure handle with the provided plates crews using a philips screwdriver.
- C. Connect back portion wires to front portion wires of your handle
- D. Tuck excess wires into opening. Align back plate with your installed front portion while inserting paddle tooth into front handle housing. Avoid pinching any wires.
- E. Using a screwdriver, install the 4black machine screws. Do not fully tighten.
- F. Adjust and straighten handle in opening. Once aligned, finish tighting backplate screws.

03 Program your handle.

You will have 30 seconds to complete programming. The default code on your handle is '1-2-3-4'

- A. Hold the code reset button until the handle responds with a prompt, Follow the prompt to complete programming.

[Handle will request user to input a new 2-8digit code followed by lock, twice.]

If you make a mistake, simply restart the steps above.

04 Program your remote.

- A. Turn switch on back plate to "ON" to activate remote capabilities.
- B. Press and release "FO BLEARN" using a pen or slim tool.
- C. Press and release "LOCK" button on remote until handle confirms pairing.

FCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.