

BOKAPOWER



User Guide

Say hello to your new trimmer



2 Cutting Blades (BallSafe & MultiSafe Blade) More suitable for different areas of hair trimming

2 Trimming Guards Four different length settings: 3, 6, 10 or 13mm.

Replaceable BallSafe or MultiSafe Blade

Specially engineered ceramic blade cuts through coarse or thick hair while helping reduce pulling, nicks or cuts. Cleaner, sharper, and rust resistant.

4000k LED Spotlight with Diffuser

Cordless/Rechargeable Powered by a robust 600mAh Li-ion battery that lasts for up to 90 minutes of use.

Multi-Function On/Off Switch
Turns the trimmer on/off
Turns the spotlight on/off
Activates travel lock


Charging & Power Display

Wireless Charging Dock

3 Mow low & slow.

Mow slow(ly) with the blade side up.

Always use with care
This product contains sharp blades; nicks, cuts, or other injury may occur if not used properly.

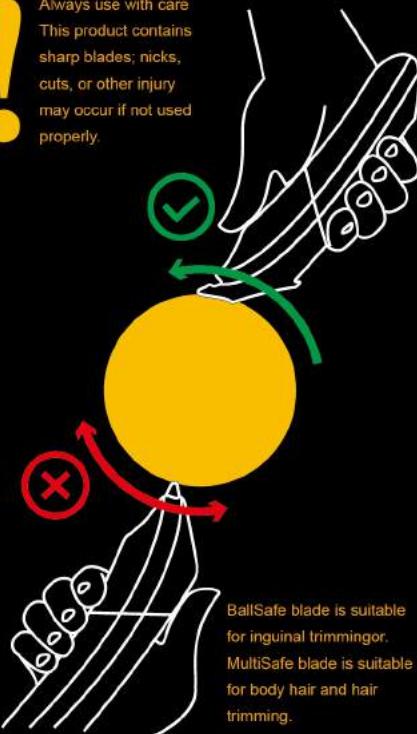

BallSafe blade is suitable for inguinal trimming.
MultiSafe blade is suitable for body hair and hair trimming.

Multi-function on/off switch

1. In standby mode, briefly press once - the first gear speed starts working/the spotlight lights up/P1 is displayed briefly, and then switch to display the power data after 2 seconds of P1 display.

2. Short press the second time - power off/spotlight off.

3. In standby mode, double click on the first and second gear speed operation/the spotlight is on/P2 is displayed briefly.

After P2 is displayed for 2 seconds, switch to display the power data, and press briefly to shut down.

4. Short press 3 times in standby mode - the travel lock starts, L displays for 2 seconds, short press 3 times again - the travel lock is released, and UL displays for 2 seconds.

5. In the normal startup state, the power data is displayed.

Charging

Replacing the blade

! ENSURE TRIMMER IS TURNED OFF AND REMOVED FROM CHARGING DOCK BEFORE REPLACING THE BLADE.
DO NOT USE THE TRIMMER IF BLADE IS DAMAGED.
THROW BROKEN BLADES AWAY IMMEDIATELY.

1 Push top of the blade with your thumb in the direction of the arrow to snap it out.
2 Put replacement blade into trimmer body with blade -side up.

3 Press blade back until it snaps in place.

For optimal performance and hygienic operation, blade should be replaced EVERY 3 MONTHS.



CHARGE TRIMMER ONLY WHEN NEEDED.
DO NOT OVERCHARGE.
DO NOT PLUG IN CABLE WITH WET HANDS.


Cleaning

! ENSURE TRIMMER IS TURNED OFF AND REMOVED FROM CHARGING DOCK BEFORE CLEANING OR REPLACING BLADE MODULES.
DO NOT USE SOLVENTS TO CLEAN TRIMMER.

1 Remove blade. Using the cleaning brush, brush hair trimmings out of blade slots and in between blade teeth.

2 Rinse head under running water.

3 Wipe with soft cloth and store in dry place.

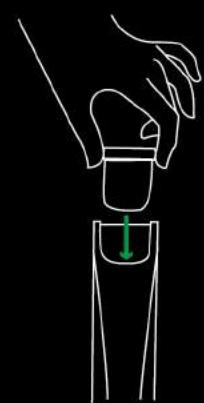

Be smart.

Pick your length and use a guard around your goods.

Using the trim guard

To attach guard, slide it over front of trimmer with notches sliding into the grooves on the sides. Adjust length by moving notches up or down. To remove, push up on bottom of guard and slide it off trimmer body.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.