

# A4 Portable printer



## Instruction manual

Before using:

1. Open the application “iPrint” and connect your phone to the printer via Bluetooth.
2. The connection between the PC and the printer requires a USB cable, otherwise the printer can not be detected.
3. Thermal printers are only suitable for thermal paper, non-thermal paper is not suitable for printers.

**01. Product packing list**

**02. Product structure**

**03. Button Function**

Button function	Operation
Turn on printer	Hold the button down for about 3 seconds until the power indicator lights up
Print the QR code	Press the button twice to print the QR code. You can use the App on your phone to scan the QR code and connect to the printer.
Turn off printer	Hold the button down for about 3 seconds until the power indicator goes off.

**04. Indicator Light Guide**

Light	Meaning
Steady on	Bluetooth connected
flicker	Wait for connection
Red light	Charging

**05. Instruction Guide**

**5.1 Install App**

Download the App Please search for “iPrint” on your phone's App market and download the App.

**5.2 Computer driver installation**

- (1) Windows computer webpage: <http://ig.fanqie365.cn/>, Download and install
- (2) Connect the computer to the A4 printer using a Type-C USB cable.
- (3) Open the document, click on print, select the name “GreatWander J597”, then click “OK” to start printing

**06. Precautions**

1. Please use 5V-2A input for charging, and it is recommended to use mobile phone power adapter for charging.  
 2. Please connect the USB cable to the power adapter before charging. Please gently insert the power adapter into the charging cable when charging, to prevent excessive force from damaging the port.  
 3. After the charging is completed, please unplug the charging cable in time.  
 4. In order to avoid damage, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near to open flame, etc.  
 5. Improper charging may cause damage to the print head.  
 6. Do not touch the print head to prevent scalding caused by overheating.  
 7. The tearing blade is sharp, please be careful to avoid touching it by mistake.  
 8. If the machine is malfunctioning, insert the reset hole to restart the machine.

**Battery warning instructions**

1. It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire;  
 2. If severe swelling occurs, please do not reuse it;  
 3. Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water;  
 4. There is a danger of explosion if the battery is replaced by the wrong type. Be sure to use the correct type of battery and do not mix old and new batteries;  
 5. If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or a power adapter with CCC certification.

**07. Install and change the printer's consumable**

**(1) Preparation before printing**

1. Remove the protective paper from the tattoo paper and unfold it, with the ink paper facing up and the protective paper facing down.  
 2. Press the open button and pull the base paper straight through the paper feeder, manually pulling it to the end. When the paper is in place, the feeder will rotate to hold the paper in place. Then you can start printing.

**(2) Printing**

- ① Press the open button
- ② Place the black tattoo paper face up in the printer
- ③ Pull the base paper straight to the end and lock the printer.
- ④ When printing is complete, you need to press the open button again to take out the paper.

**Note:** Make sure that when printing, the paper is oriented correctly and straight into the printer, otherwise the results will not be good.

**FCC Warning statement:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

**Note:** This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter