


# GYRO FLYER

## R/C Helicopter



### X11C INSTRUCTION MANUAL

Please read this instruction manual carefully before use and retain the information for future use.

#### HELICOPTER X11C

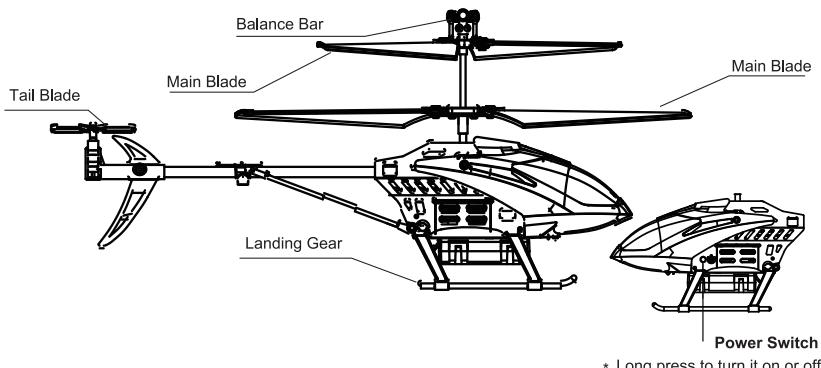


#### CONTROLLER

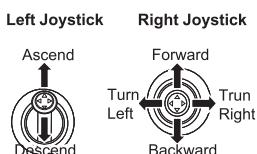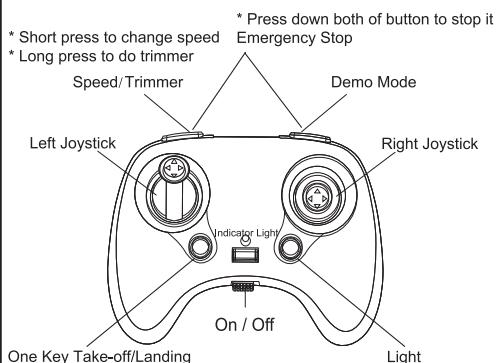

\*Light: The light can change from different colors.

\*Demo Mode:  
Short Press: It will do circle fly  
Long Press: It will do auto-rotation



#### Remote Control Battery Installation

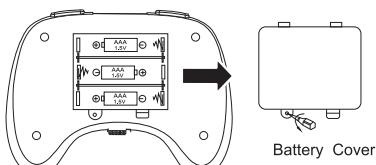

1. Unscrew the battery cover and insert 3 x AAA batteries into the battery compartment according to the correct polarities.

2. Recover the battery cover and screw it tightly.

# CHARGING THE HELICOPTER BATTERY

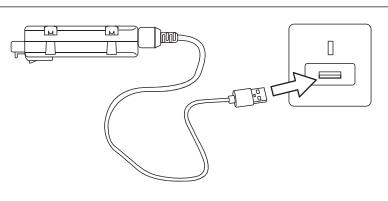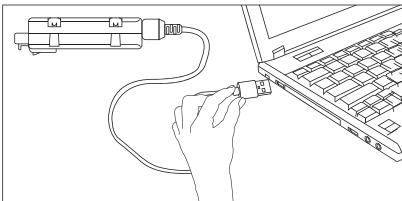

Flight Time: 15-17 Minutes /Battery      Charge Time: 45 Minutes

- Connect the charging cable to the battery.
- Connect the USB end into a computer or USB adaptor to charge.

Note: While charging, the indicator light will stay OFF. The indicator light will turn ON once fully charged.

\*If the remote power indicator light keeps flashing, the AAA batteries are out of power. You need to replace batteries.

\* If the helicopter flies weakly and the light on it turns off, the battery is out of power. You need to charge the battery.


## FLIGHT INSTRUCTIONS
 
### Connect the helicopter to the remote

1. Place the helicopter on a flat, clear and open surface. Make sure the tail of the helicopter faces the player. Then turn ON the helicopter.
2. Turn on the remote.
3. Push the left joystick to the highest position and then pull it straight down to the lowest position.
4. Press down the TAKE-OFF button or push the left joystick and the helicopter will take off.


### Ascend/ Descend

Push the left joystick up to ascend.  
Pull the left joystick down to descend.



### Turn Left/Right

 Push the right joystick to the left to turn left.  
Push the right joystick to the right to turn right.



### Forwards

Push the right joystick up to fly the helicopter forwards.





### Backwards

Pull the right joystick down to fly the helicopter backwards.





# TRIMMER

If the helicopter does not fly steadily or rotates during flight, use the trimmer buttons to stabilise it.

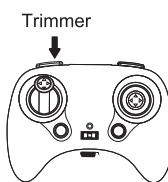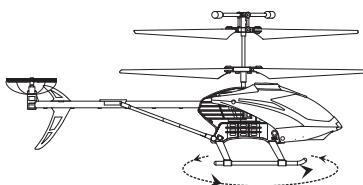

If the helicopter rotates anti-clockwise, long press the trimmer button and push the right joystick to right until the helicopter gets stabilised.

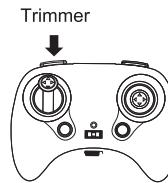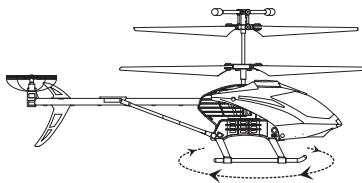

If the helicopter rotates clockwise, long press the trimmer button and push the right joystick to left until the helicopter gets stabilised.

## SAFETY INSTRUCTIONS

Only fly the helicopter in clear, open spaces. Make sure to stay away from obstructions, animals, people, power lines and buildings.

Do not fly the helicopter in wet conditions.

Do not expose the helicopter to direct heat, light or water sources.

Do not cover the remote control to avoid interrupting the infrared connection.

Only use a slightly damp cloth to clean the helicopter. Never use chemicals or alcohol.

Do not leave the helicopter unattended while charging.

Store the helicopter in its original packaging or a cool, dry place.

Do not attempt to disassemble or modify the helicopter.

Make sure the helicopter has cooled down before charging it.

If you do not intend to use the helicopter for an extended period of time, please charge the battery to 50% before storing.

Only use the cable provided.

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

- Requires 3 x 'AAA' 1.5V batteries. Not Included.
- Batteries should only be replaced by an adult.
- Alkaline batteries are recommended.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not re-charge non-rechargeable batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged.
- Ensure batteries are inserted with the correct polarity.
- Exhausted batteries should always be removed.
- The terminals should not be short circuited.
- Use a screwdriver to remove the screw from the battery cover and insert batteries. Replace battery cover and screw before use.

Please retain the important information on this packaging for future reference.

Customer Service:  
**BUSSGO@outlook.com**

Please let us know if you have any product questions.

MADE IN CHINA



## < GENERAL INFORMATION >

### FCC Notice:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### RF Exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

### IC Notice:

This device complies with Canada Industry licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference; and
- (2) this device must accept any interference. Including interference that may cause undesired operation of the device.

### CAN NMB-3 (B)

### RF Exposure

#### Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.