
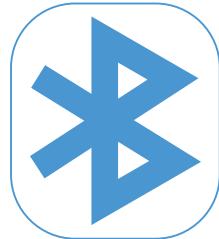


PND Carplay Type-C MP5 Player Manual

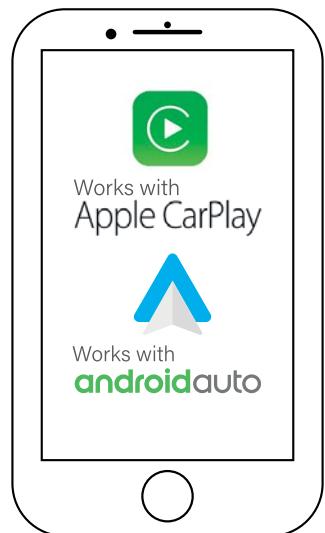


Before installation

Thank you very much for purchasing and using our products. When you receive the product, please do not take the product directly into the car for installation.


Because the product is transported over a long distance. This may affect the product. Please try it before installation.

Test method: Take the machine to the car power supply for testing. This car audio is suitable for use on 12V DC power supply voltage. Connect the machine's power plug to the socket, wait 10 seconds after connection, and press each button of the machine to see if the machine can start normally. If it can be turned on, there is no problem, then you can install it. If it cannot start normally, please reconfirm whether you are strictly following our testing method steps. If the problem is still not solved, please contact us promptly,
email: service@ogasami.com
Thank you for your cooperation!



Panel introduction

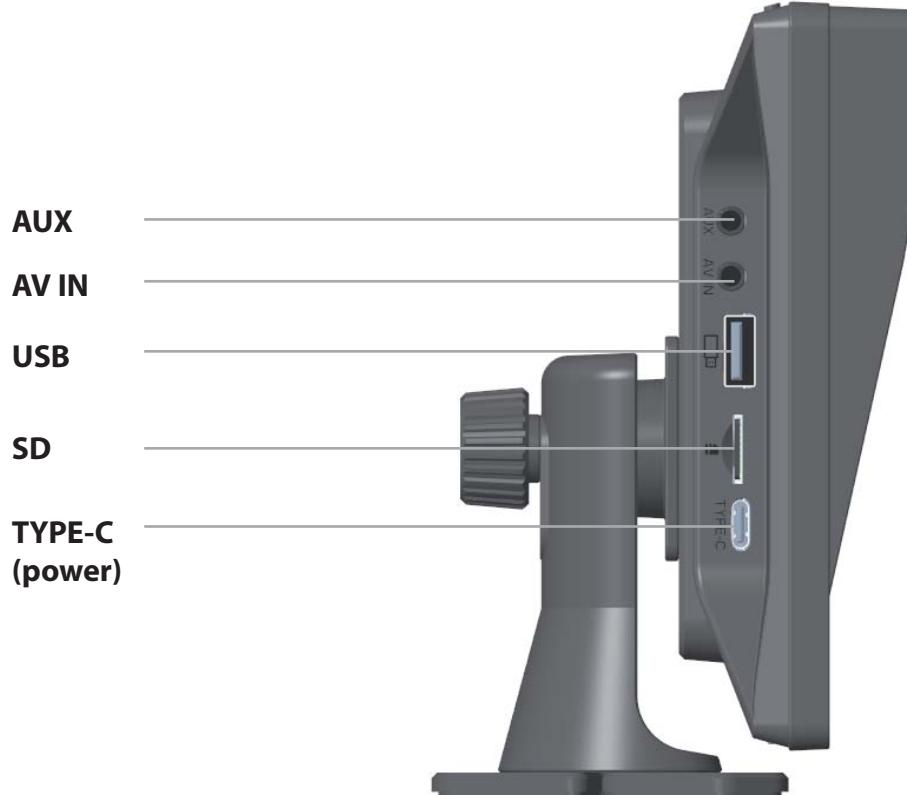

Function introduction

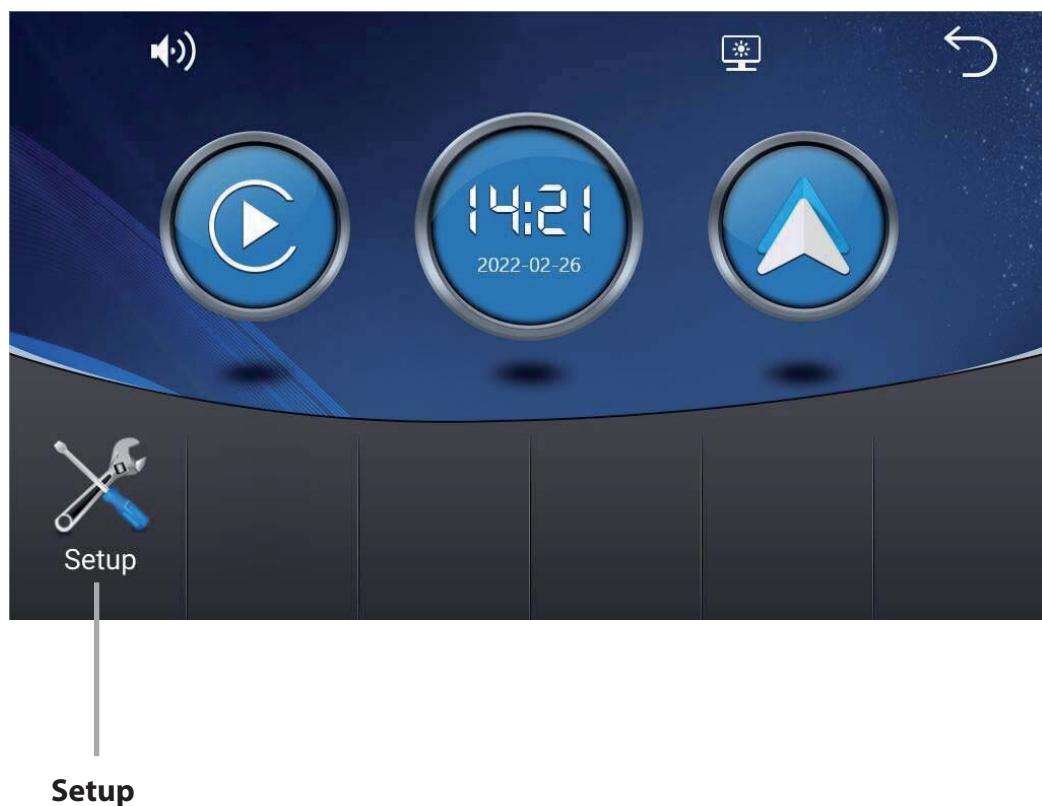


Radio transmitter

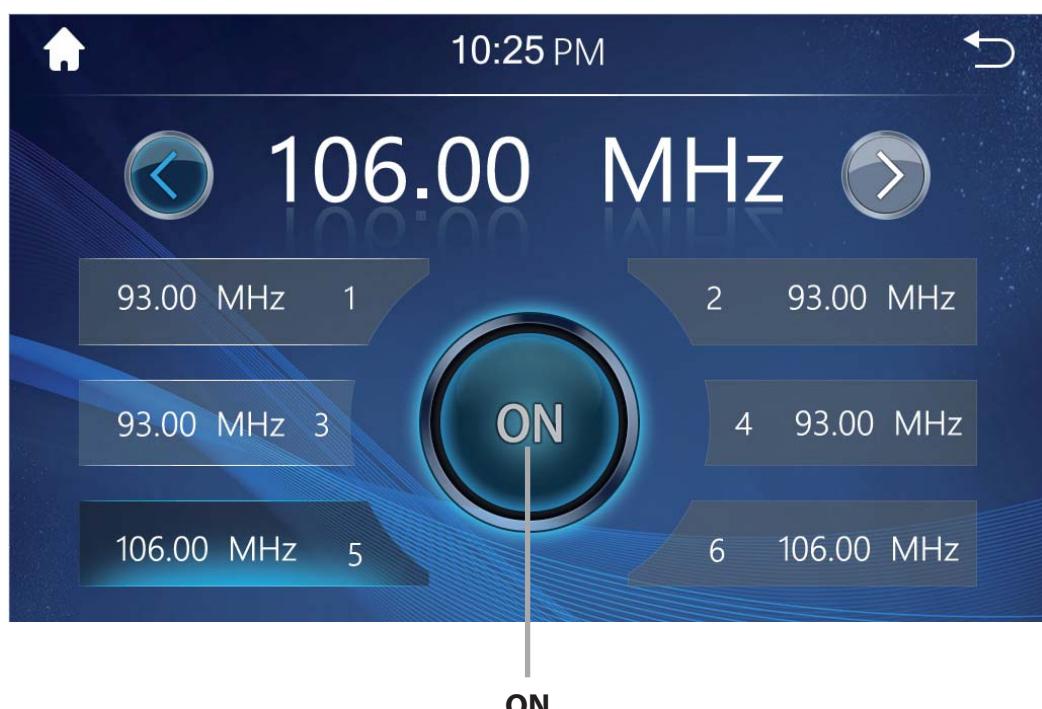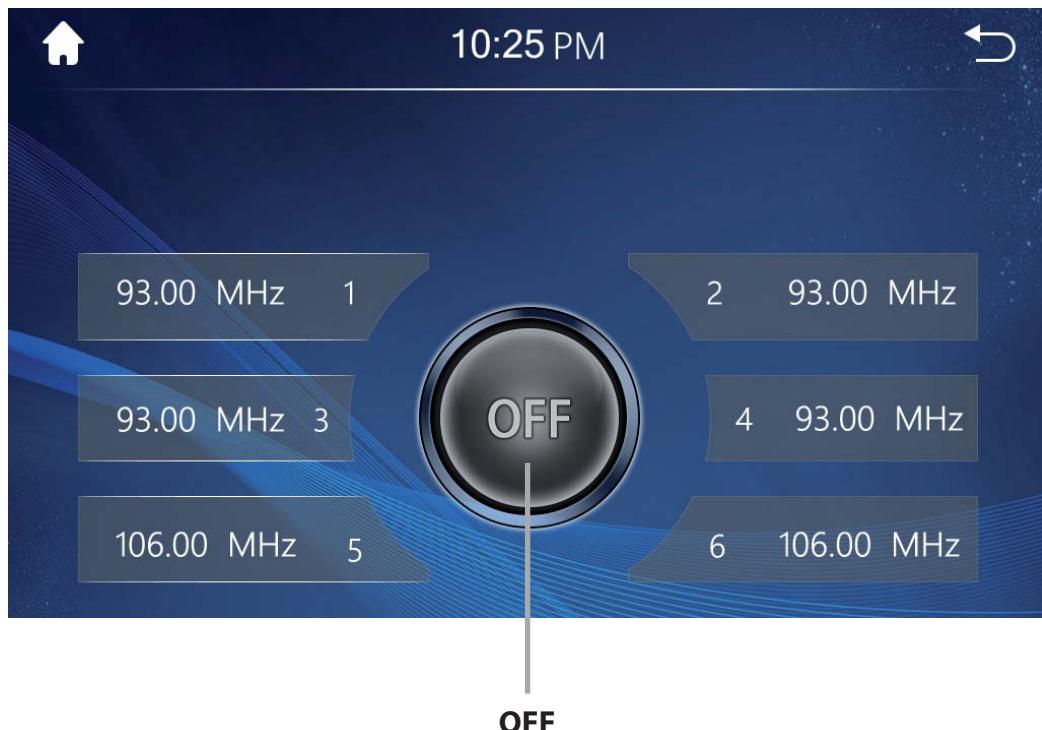

Click "ON" to turn on the radio transmitter, set a random frequency band, then use the car radio searches for the corresponding band to synchronize audio.

Function introduction

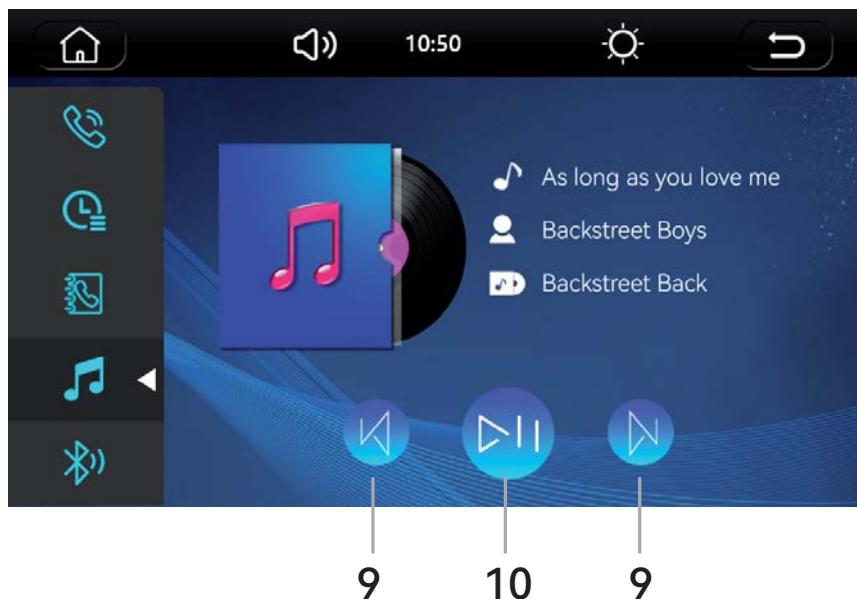

1. Make a call interface.
2. Call history interface.
3. Contact interface.
4. BT Music interface.
5. BT pairing interface.
6. Answer call key.
7. Dial keypad interface.
8. Backspace key.
9. BT Music Prev / next track.
10. Pause music / resume playback

Device Name: "Carkit" PIN Number: "0000" (fneed) Connection Method:
 1. Power on the machine and turn it on.
 2. Turn on the BT function on the mobile phone. click Search Device. when the mobile device list searches for the BT device name of the current machine. click the device name to connect it.

AV IN Function




You can connect an external audio player.such as a mobile phone or iPod. through the 3.5MM Front AUX hole.

System settings

Click the center round time area at main interface to enter settings interface.



Sound Setup:

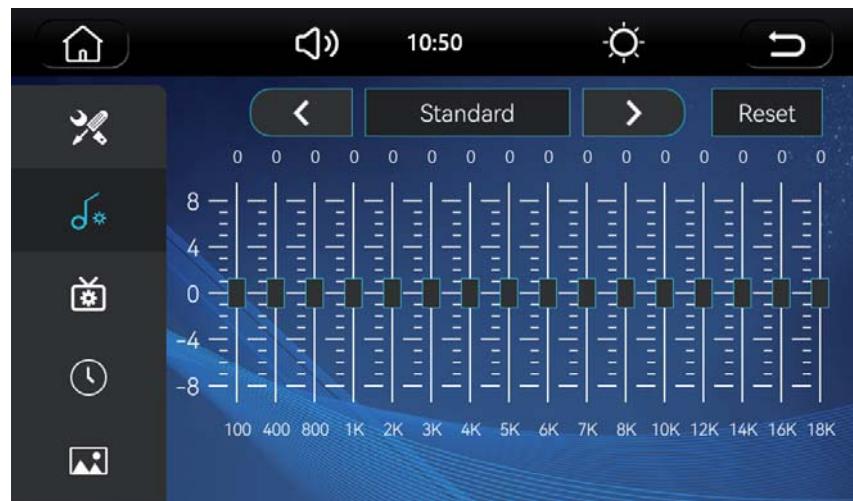

DSP sound effect setting interface.

Display Settings:




Brightness, contrast, hue, saturation can be set. Aspect ratio.

Time settings



Background image settings:

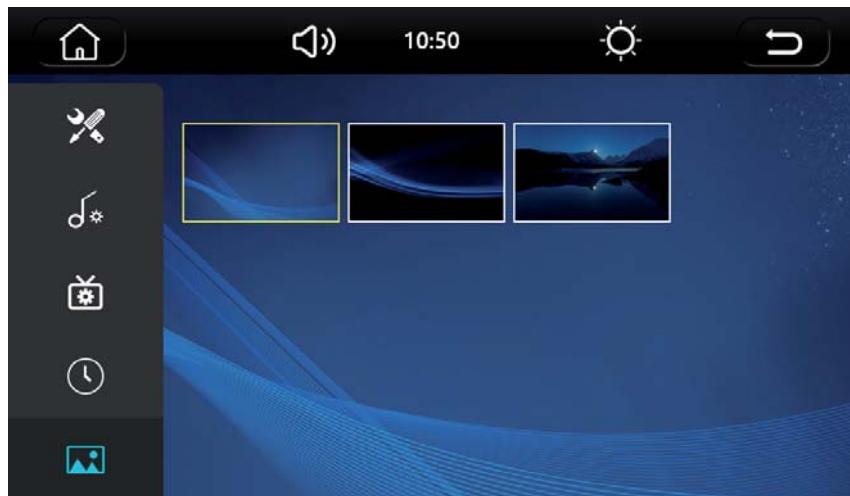

Specifications

Operating Voltage: DC 9-32V

Working Current: normal 500mA, max<10000 mA

Standby Current: <5 mA

Working Temperature: -20-60 °C

Storage Temperature: -40-70°C

Customer Service: service@ogasami.com

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Made In China