## Astronaut Sunrise Alarm Clock

## User Manual

Bluetooth Name: BL60 Service Email: 🖂

Learn how to set up via the Video website:

# Product Detail. **Button Function.** 1. First Use-Time Setting.. 2. Time Brighteness Setting. 3. Alarm Setting. 4. Volume and Setting Confirmation... 5. Snooze Button.. 6. Ambient Light Mode.. '. Light Brightness Settting. 8. White Noise Mode.. 9. Bluetooth Mode.. 10. Timer Mode. 11. Package List.. Notes: 12. Product Parameter

# Ambient Light on/off and Snooze 🗥 Touch Time Display Time Setiing--White Noise Alarm Clock ① (2) Alarm Setting Alarm Clock (2)

### Ambient light and Snooze on/off Light brightness setting VOL+/- Setting Bluetooth on/off/reset Time brightness setting Time setting Alarm setting White noise mode power adapter is plugged into the outlet, it will automatically turn on, to cut off the power, unplug the power adapter. Timer Mode Alarm setting This product has a built-in CR2032 lithium battery, which has the function of saving data during power outages, It mainly saves time, alarm clock.

# First use - Time setting

- ① Press () for 3 seconds to enter the time setting mode rotate the right button to adjust the **time format**.
- 2 Press (SET) to set the **hour**, rotate the right button (SET) to
- Press to set the **minute**, rotate the right button of

Bluetooth on/off

White Noise Mode

Timer Mode

1) Press Time Dimmer time brightness setting, brightness 4 levels to sele OFF: Turn off the screen display.

Night: The time display is at its lowest level.

Daytime: The time display is at a high level.

Auto: The screen brightness is set to the night level between 2 p.m. and 6:00 a.m. and at the day level during all other times.

## 3. ① ② Alarm Setting

- Hold to enter and start the alarm setting mode, rotate the button to adjust the **hour**.
- ② Press (str.) to set the minute, rotate the button (str.) to adjust the minute.
- 3) Press ( to set the sound of the alarm, rotate the button to adjust the sound (7 kinds of sound).
- Press to set the volume of the alarm, rotate the button to adjust the **volume** (16 levels of volume).
- ⑤ Press to set the sunrise duration of the alarm, rotate the button to adjust the Sunrise Simulation Time (10~120min and off
- ⑥ Press ( to finish the alarm setting.
- The Press (1) to turn on or off the alarm.
- ① Alarm ② works in the same way as alarm 1.
- ② The order of the alarm options: hour > minute > alarm sound > alarm volume > Sunrise Simulation time.

3 When setting, if no manipulation is done for more than 15

- seconds, the sunrise alarm clock will automatically save the current setting.
- (4) Press Alarm Clock 1 and Alarm Clock 2 to set and confirm the alarm clock.

# 1) In setting mode: Rotate selection setup parameters, press

- down to confirm the setting, and go to the next setting.
- ② In volume mode: Roate to adjust volume up or down.
- (3) In white noise mode: press to switch music.

- (1) When the alarm rings, touch the snooze button, and the alarm will ring again after 9 minutes, you can snooze without limits, each snooze lasts 9 minutes.
- 2) When the alarm rings, if no button is pressed, the alarm wil have a duration of 30 minutes the automatically turn off.

- (1) When the alarm rings, touch to enter snooze mode and press any key behind to turn off the alarm.
- When the snooze button is touched, the light and alarm will be turned off. After 9 minutes, the light and alarm will return to the set state automatically again.
- When the alarm rings, touch the snooze button and the alarm icon will be displayed on the screen.

- 1) Touch 🆟 to turn on the light.(22 kinds of light color) ② In ambient light mode, touch ( to switch the light.
- ③ Hold ( to trun off the light.

In light mode, there are night lights, book lights, ambient lights, music rhythm lights, suitable for various atmosphere scenes.

In light mode, rotate button ( ) to set the brightness level of the light. (20 levels of brightness)

Press the rotate button to turn on night light mode

White Noise Mode

- ① Press  $\sqrt{100}$  to turn on the white noise.
- ② Press to select the white noise (21 kinds of sound)
- 3 Rotate to adjust the volume level.
- 4 When the white noise mode, touch w turn on the light. 5 rotate to adjust the brightness of the light.
- Press and hold 🥅 to turn off the white noise.

- 1) Press (BT) to turn on the Bluetooth, the icons flash to indicate Bluetooth is on.
  - ② Use your phone to search for a device named **BL60** to
    - ③In Bluetooth mode, rotate 💹 to adjust the volume level. 4) Press (BT) to turn off the Bluetooth. If the icon is not
    - displayed, Bluetooth is turned off.
    - ⑤ Press and hold (BT) to reset bluetooth and enter pairing

- ① Press 🛱 to turn on/off timer mode.
- 2) Press 😾 to to select the timer setting time, A total of 5 levels are selected in sequence, one is selected each time. 15min-30min-45min-60min-90min.
- 3) When timer is turned on, you can select the timer sound effects and light, you can adjust the volume and light
- 4) When timer is turned on. Bluetooth and white noise can be used as sound effects for the timer.

Astronaut Sunrise Alarm Clock x 1 USB Cable x 1 5V/2A adapter x 1 User Manual x 1

Quick Guide x 1

Astronaut Sunrise

Product Name	Astronaut Sunrise Alarm Clock
Product Model/ Bluetooth Name	BL60
Size	8.8*5.2*4.3in
Input Voltage	5V
Input Current	2A
Power	10W
Power Mode	Type-C, does not support fast charging

### FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.