

# S

WE ONLY MAKE SOUND

注意事项/SPECIAL NOTES ————————————————————————————————————	[1
包装清单/PACKING LIST ————————————————————————————————————	[ 2
产品参数/PRODUCT PARAMETERS	
操作说明/INSTRUCTIONS FOR ———————————————————————————————————	[4
设备配对/PAIR YOUR MOBILE DEVICE ——————	[7
注意事项/WARRANTY POLICY ————————————————————————————————————	[ 9

O MOON



Follow MOON service number
Contact MOON Customer Service
Learn about the latest MOON products

Manufacturer: Shenzhen Moon AV System Technology Co. Address: 1/F, Shengtianlong Company, No.16, Lane 3, Liuxian 2nd Road, Xingdong Community, Xin'an Street, Bao'an District, Shenzhen, China.

TEL: 0755-27863813

Web: www.global-moon.com

### ABOUT US

MOON 月亮科技,成立于中国深圳。 我们一直深耕声学相关领域,致力于将 "科技 美学 人文"的品牌理念植入于 我们的产品里,为您提供聆听生活的另 一种可能性。

MOON TECH, founded in Shenzhen, China, we have been ploughing into the field of acoustics, committed to "technology, aesthetics and humanities" brand concept implanted in our products, to provide you with another possibility of listening life.

包装清单 PACKING LIST First of all, we would like to express our appreciation for your use of our digital audio products!

Before use, please read the manual and use this product correctly. For better service, the contents of this user manual may be changed, due to the performance and functionality of the product changes without notice. Do not disassemble the speaker without permission, or you will lose the warranty!





MBM

产品参数 PRODUCT PARAMETERS

Bluetooth: Bluetooth 5.3①

Distance: 20米内 Charge Jack: TYPE-C

Charge Voltage: 5V/1A Charge Time: 约2-3小时

MAH: 1200mAh



操作说明

INSTRCUTIONS FOR 04



POWER ①Long press on/Off (short press Pause/play) ②Double-tap Bluetooth to disconnect

VOL + Short press Vol+ (Long press for next song)

OL - Short press Vol- (Long press previous)

- Press and hold the machine + key to enter TWS connection mode, accompanied by a beep (to enter TWS mode)
- When TWS pairing is successful, accompanied by a tone (TWS connection), the main unit's indicator light is blinking, and the secondary unit has no indicator light.
- When TWS pairing is successful, press and hold the + - key to disconnect TWS, accompanied by a beep (TWS disconnected), if the main unit is not connected to Bluetooth, the main/secondary indicator light flashes, if the main unit is connected to Bluetooth, the main unit indicator light has no light (still maintains the Bluetooth connection), and the second unit indicator light flashes.

#### NOTE

- If TWS is not successfully connected within 15 seconds after entering TWS mode, you need to repeat the steps to enter TWS.
  - After entering TWS mode, you cannot exit this mode and connect Bluetooth within 15 seconds, you need to wait for 15 seconds to exit automatically.
  - Before entering TWS mode, both machines must be in the Bluetooth-unconnected state;
  - TWS Unable to control the secondary unit when pairing is successful Disconnect Bluetooth

#### Low battery indicator

- ① When 20% of battery power is remaining; one low battery alert occurs
- Automatic shutdown when battery level is 5%; two low battery alerts occur

#### White Light

- No Bluetooth connection, white light blinks at 1 second intervals
- White light goes out when Bluetooth is connected
- In any state, plug in the charging cable, the white light will be on for a long time, and off when fully charged.
- White light flashes at 300 ms intervals in TWS pairing state

#### FCC Warning

This device complies with part 15 of the FCC Rules, Operation is subject to

the following two conditions: (1) This device may not cause harmful

interference, and (2) this device must accept a ny interference received,

including interference that may cause undesir ed operation.

Any changes or modifications not expressly a pproved by the party

responsible for compliance could void the us er's authority to operate the

equipment.

NOTE: This equipment has been tested and f ound to comply with the limits

for a Class B digital device, pursuant to Part 15 of the ECC Rules These

limits are designed to provide reasonable pro tection against harmful

interference in a residential installation. This eq uipment generates, uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause h armful interference to radio

communications. However, there is no guara ntee that interference will not

occur in a particular installation.

If this equipment does cause harmful interfer ence to radio or television

reception.

which can be determined by turning the equi pment off and on, the user is

encouraged to try to correct the interference by one or more of the following

measures:

-- Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outl et on a circuit different

from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to me et general RF exposure requirement.

The device can be used in portable ex posure condition without restriction.

## 05



设备配对 PAIR YOUR MOBILE DEVICE Press and hold the device switch key to hear a continuous ringing tone. Switch on the Bluetooth function of your mobile phone or other device. Tip: You can usually find the Bluetooth function in the taskbar on the bottom of your phone, or in Settings Select Pocket Sound from the device list to pair and connect. Tip: When the connection is successful, a ringtone will sound.

When you are not using the device, it is recommended that you press and hold the On/Off button to switch off the device to ensure that it has sufficient power for the next time you use it. Tip: The Pocket Sound will automatically connect to your Bluetooth device when you use it again.



#### 保修政策 WARRANTY POLICY

Subject to the following terms and conditions, MOON will provide consumers with a three-year warranty for quality problems caused by raw materials or production processes.

- A. These terms and conditions apply only to products sold by MOON in mainland China.
- B. These terms and conditions are only applicable to consumers who own MOON products for daily consumption through purchase and other legal means (hereinafter referred to as consumers).
- C. Consumers should read the product manual in detail before using the product.
- D. The warranty service is limited to under normal circumstances within the effective warranty period (no date of purchase to the production date shall prevail), due to product quality caused by non-man-made damage to the fault, with the invoice and warranty card will enjoy the following services:
- 1) Consumers can enjoy free return, replacement or repair services at the original place of purchase within seven days of purchase.
- 2) Consumers can enjoy free replacement or warranty service at the original place of purchase within 15 days from the date of purchase.

- 3) Within one year from the purchase, you can enjoy free warranty service at the company's designated maintenance point.
- E. The following circumstances are not within the scope of the three Guarantees:
- Damage caused by all human factors, including failure and damage caused by use under abnormal working conditions, use not according to the instructions or use in the environment specified in the instructions;
- Without the consent of the company, the user privately disassemble, repair, modify,
   The natural wear of the product and the periodic inspection, maintenance, repair or
- replacement of parts caused by it,
- 4) The contents of the valid invoice and the warranty card are inconsistent or altered;
- Damage caused by force majeure;

F.After the expiration of the three guarantees of service, or within the three guarantees but not within the scope of service, the company can provide paid maintenance services.

G. If there is any inconsistency between the warranty instructions of this product and the provisions of the national three guarantees, the provisions of the national three guarantees shall prevail.