

USER MANUAL

WIRELESS SPEAKER



OPERATION KEY



- * **Mode key:** Switch to wireless / TF Card / FM radio / AUX
- * **Light Control:** Long press to switch light colors



- * **Volume increased:** Long Press /Short Press



- * **Volume decreased:** Long Press/Short press



- * **Play/Pause:** Short press
- * **Next song:** Press 2 times
- * **Previous song:** Press 3 times
- * **Answer/End call:** Short press
- * **Refuse call:** Long press
- * During FM, short press the button to automatically search for radio stations/press twice to the next channel/press three times to the previous channel



- 1. Power on/off:** Long press 3 seconds
- 2. Call back:** Press 2 times

CONNECTING

- **Micro SD:** Insert TF card
- **Type-c port:** charging
- **Line in:** 3.5 mm audio input(cable not included)
- Insert the Type-C port into the charging cable as an external antenna, long press the play button to automatically search for radio stations

WIRELESS CONNECTING

- Switch on the speaker.
- Turn on BT on your mobile
- Connect your mobile to "**WP-05A**"

SPCIFICATION

FREQUENCY	20Hz-20KHz
CHARGE VOLTAGE	5V 1A
PLAY TIME	Up to 12 hours
WATERPROOF PERFORMANCE	IPX5

The application of TWS technology enables the left and right channels of speakers to be independent of each other and generally not physically connected, forming a stereo channel, providing users with a better auditory experience.

STEREO MODE (TWS FUNCTION) SETTINGS:

1. Turn on two speakers first, do not connect your phone first.
2. Double click the "Light Control" button on one of the two speakers, and release it when you hear the "du du" sound. After 3-4 seconds, a "ding ding" prompt sound will appear, indicating a successful TWS connection. Connect your phone BT to the WP-05A device, and the two speakers will play music together to achieve a stereoscopic surround effect.
3. In TWS connection mode, devices on the left and right channels can run synchronously: play/pause, previous/next track, volume+/volume -, etc.
4. When restarting, TWS will automatically reconnect.
5. TWS disconnection: Double click the "Light Control" button and hear a "ding" sound to disconnect TWS.
6. When the speaker main unit is turned off, the auxiliary unit will also be turned off at the same time. After shutting down, two speakers need to be turned on separately when turning on the device.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.