



L200S Light Bulb Cam User Manual

Scan the QR code below for setup video or visit:
www.girafit.com/pages/L200S



All Girafit products come with 2-year warranty.


For any product questions, please contact our 100% satisfaction guaranteed customer service:

Technical support: +1 (415) 523-0278


Email: support@girafit.com

Live Chat: In Girafit App

Overview

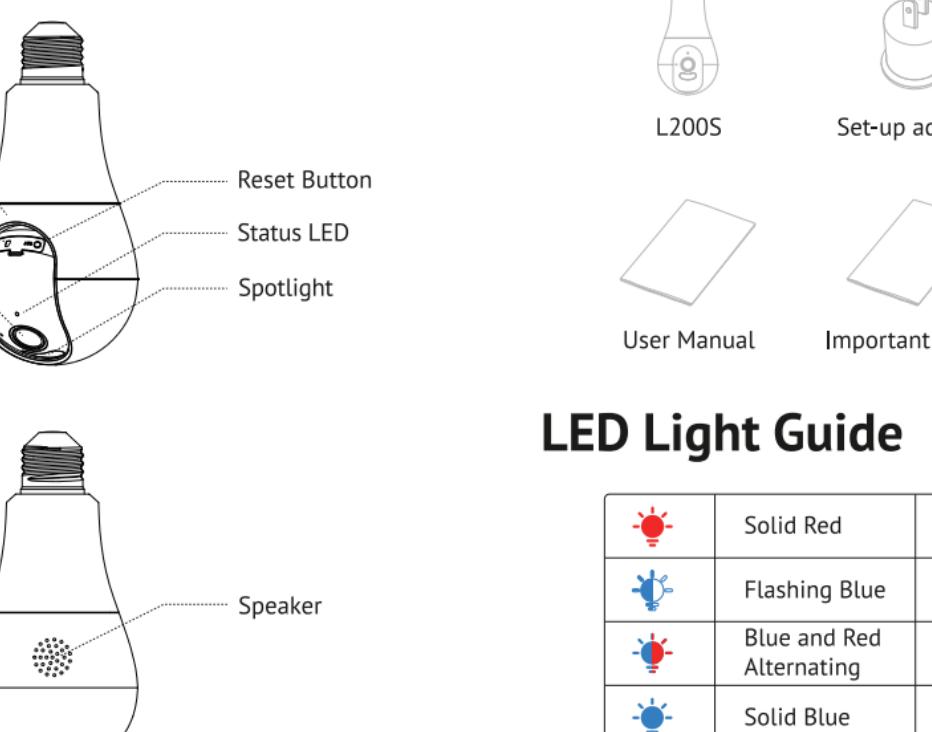

01

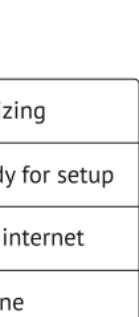

02



03




04



05




06

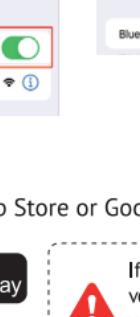

07

What's in the box

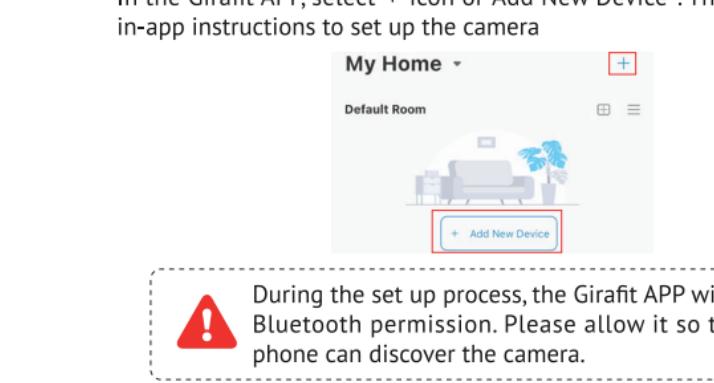

08



09

Installation

- 1

Screw the camera into a bulb socket in the direction of the arrow.

Situations that require the use of a Socket Extender



When the lampshade blocks the camera lens



Rotate the lampshade



When the lampshade is too narrow



Move closer to your router



Move closer to your router



Move closer to your router



Move closer to your router



Move closer to your router



Move closer to your router



Move closer to your router



Move closer to your router



Move closer to your router

Move closer to your router

Device Settings

Displays Wi-Fi signal strength
Displays the status of the microSD card
Adjust the detection parameter such as sensitivity or set up a detection area
Adjust Video Settings such as Rotate Image 180° or Night Vision
Adjust Audio Setting such as Alarm Sound or Speaker Volume
Adjust Notification Settings such as Push Interval or Device Offline Notification
General settings such as Device name, Status LED, Privacy Mode, Storage

Message

Select a specific date to search the event message
Filter the message by type (motion / human), device name, or location of the camera
View system message such as microSD card being malfunction or Device Offline
Swipe left to delete a message
Quickly identify an alert by alert type, device name and the thumbnail
Alert notifications from all cameras

Storage Options

The Girafit L200S camera offers two storage alternatives. You have the option to save the footage either on a microSD card or by subscribing to a cloud storage plan. To enhance security, we advise utilizing both methods to back up each other, ensuring that no critical footage is lost even if the camera malfunctions, is stolen, or goes offline.

Record on a microSD card

Insert a microSD card and format it in camera setting menu, which allows camera to record locally even if camera is disconnected from the internet.

Record on cloud storage

The Girafit L200S is designed for both indoor and outdoor use. We have rigorously tested this device in laboratory conditions to meet IP65 weatherproof standards, but please avoid submersion or exposure to heavy rain, which could cause the E27 screw to get wet. If the device or its adapter gets significantly wet or malfunctions, immediately disconnect the power and allow the device to air dry completely before use. Do not attempt to dry the device or adapter with external heat sources, such as a microwave oven or a hair dryer.

What can I do if the camera stopped working?

When installing or maintaining the device, ensure the power to the socket is turned off. The operating temperature range is 14°F to 122°F (-10°C to 50°C). In Girafit APP, subscribe to a cloud storage plan to back up your footage in encrypted data center, to ensure that you still have critical footages even if camera is stolen or broken.

What can I do if I receive too many notifications?

In 'Device Setting' menu, try adjusting the following settings to improve detection notifications:

- Turn on human detection to only get notified when a human-shaped object is detected
- Ensure camera has power
- Adjust detection sensitivity setting to low
- Enable detection area to draw an area that you only wish to receive notification
- Check if the APP is on latest version
- Try different power adapter or power outlet

FCC COMPLIANCE

I cannot connect the camera to the Internet

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Check the following steps:

- Ensure Wi-Fi password or SSID is correct
- The routers may get overloaded sometime, try restarting your router and wait for 2-3 mins
- Reset the camera and try again
- Try placing the camera as closely to the router as possible
- Ensure camera is powered on and the indicator is flashing in Blue before starting to connect
- Ensure Bluetooth is turned on your phone and Bluetooth permission is allowed for Girafit APP
- Format the microSD card in Girafit APP to enable recording
- After the card is formatted, choose to record all-day or by incident only in the 'Manage Storage' menu
- If the above steps don't help, contact our professional technical support via phone, email or live chat.

IMPORTANT PRODUCT SPECIFICATIONS

Product Warranty

This Girafit product is fully covered by 100% satisfaction guaranteed 2-year manufacturer warranty. To claim your warranty or for any inquiries, product pair exchanges, upgrades or return, please feel free to contact our customer service and our professional agents would be glad to assist you.

Technical support: +1(415)53-0278
Email: support@girafit.com
Live Chat: Girafit App

For detailed warranty and policies, please visit: www.girafit.com/warranty