

# user manual

## Points for Attention

1. Do not use the tablet in exceptionally cold or hot, dusty, damp or dry environments.
2. Do not allow the tablet to fall down while using it.
3. Please charge your battery when
  - A.Battery power icon shows an empty icon;
  - B.The system automatically shuts down and the power is soon off when you switch on the unit once again;
  - C.There is no response if you operate on any key
4. Please do not disconnect power abruptly when the tablet is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program.
5. When this unit is used as a moving disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this company will be held no liable.
6. Please do not dismantle this unit by yourself. If there is any inquiry, please contact the dealer.
7. There will be no separate notice in the case of any change in the functions and performance of this product.

# Basic Operation

## Power on

In the shutdown state, long press power button boots

## Power off

In the power on state, long press the power key 3 seconds then pop-up tablet options, select " Power off" to shut down.

## Sleep

The machine under normal operating conditions, Short press the power button, into hibernation, Now, Screen will close. Short press the power button again, resume to normal mode.

## Power reset

If there is shutdown to the tablet in the process of operation, you can turn off and restart the tablet by pressing "reset" key.

## Screen time out

If you do not contact the tablet within the set time, and do no operate by the button, the contact screen will be automatically turns off.

In any state, short press power button and for activation; Then skid the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the contact screen time out function, you can set the [Screen time out] option under [display] function into "Never ".

## Using the [Micro SD/TF](#) card

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the [Micro SD/TF](#) card. If no card is inserted, the second disk can't be opened. This unit supports the extension of the [Micro SD/TF](#) card from 4GB to 32GB.

## Inserting and Pulling out the **Micro SD/TF** card

### Inserting:

Put the **Micro SD/TF** card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the **Micro SD/TF** card.

### Pulling:

Slightly push the **Micro SD/TF**, and it will bounce by a section, and then you can take it out.

### Caution:

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (**Micro SD/TF** card).

### Battery:

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The tablet can be set up by the user as "user define power off time" or "display setup" to save batteries.

### Charging:

This unit can be recharged by **Type - C** USB port, please charge the tablet only by

equipped USB cable and Charger. Other Charger might damage the machine.

#### Warnings for charging:

1. A new battery may be empty and not charged before you get the tablet.

2. If the tablet is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.

Power adapter is a key component of the portable tablet, which play a crucial role in keeping the portable tablet's normal work and protecting your security when using the tablet, a long-term customer surveys and after-sales service Practice shows

that the malfunction of the portable tablet In many cases were caused by using inappropriate accessories, in particular the power adapter.

Use the substandard power adapter will shorten the life of the portable tablet by considerably, the voltage instability will seriously affected the normal work of the portable tablet and bring permanent damage on the tablet's performance and reliability, Use the substandard power adapter will also reduce the vocal quality of the tablets, shutdown the tablet when you using it, In addition, Use the substandard power adapter will cause combustion and explosion which will disserve the safety of the consumers.

#### Replaceable Back case:

This tablet supports replaceable of back case. There is a buckle on middle frame for back case replacement. After case opened, please don't use hard objects to touch the battery, and this battery is not replaceable.

## Setting up your tablet



After charging the battery, press and hold the power button for up to 5 seconds until the pattern was displayed.

---

Follow the on-screen instructions to select a language and a wireless network.

On the Home screen, tap , in app list, tap “Settings”->”Network & Internet” and then tap Wi-Fi to turn it on.

Click “

Short press “back” or click  on screen will go back to the upper level menu;

Click  on screen will go back to Main menu;

Click “

---

NOTE: The appearance of the Home screen may vary.



Google Search--Allow you to type one or more keywords to search.



Google Voice--Allow you to speak one or more keywords to search among the installed apps.

## Organize the Home screen

- To add an app or a widget to the Home screen, touch the Apps tab or the Widgets tab, and then tap and hold an app or widget until it is added to the Home screen.
- To remove an app or widget from the Home screen, drag it to the X at the top of the screen.

## Change your tablet's view

The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally; For portrait view, hold the tablet vertically.

---

NOTE: Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top of the main screen to display notifications, and then touch the Screen, it will show auto-rotate icon  , touch the icon change to Landscape or Portrait.

## Back up your data

Make periodically back up of your personal data and media on your tablet to another computer, a dedicated storage tablet, or to the cloud server.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harm full interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Specific Absorption Rate (SAR) information:

This Device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.