



# MVP User Manual

\*Sorry to the changes of our products parameters but without notice.


## Quick guide

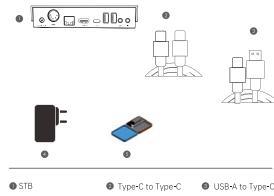

## Device information

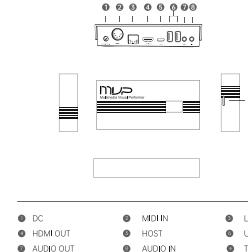

## Setup diagram

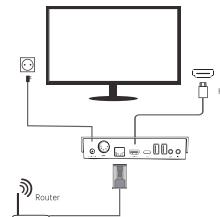

## Switch in the applications

Click "my apps" to view recently used programs, click program icon to switch Application arbitrarily.



## Wifi function

1.Home screen->settings->network->select<wi-Fi> to open wi-Fi function  
2.Choose hotspot->input password connect to the network




## Ethernet function

1.Home screen->settings->network->select<ethernet> to open ethernet Function  
2.Insert network card, network will be connected automatically

## Bluetooth function

1.Home screen->settings->Bluetooth->select<Bluetooth> to open <Bluetooth function>  
2.Choose hotspot->Input password connect to the <Bluetooth function>

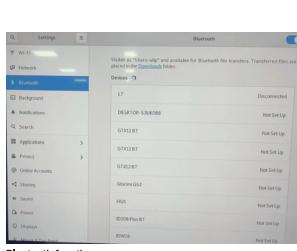

## Bluetooth function

1.Home screen->settings->Bluetooth->select<Bluetooth> to open <Bluetooth function>  
2.Click on the <Bluetooth name> that needs to be connected, and then click on <Connect to connect>

## File browser

Move to "File browser", press ok to enter into the device list.  
When inserting with usb device or sd/micro/mmc cards, the sign "Device is mounting" will be shown on the screen.  
Here you can cut, copy, paste and move the files and folder between the local disk and external storage card.



Read if card  
Insert the card into the device in the status of power on, when icon appears in Top left corner of the desktop, open "File browser", the identified Storage card will appear under "Local disk", if card's operation is available now.

## Warn

Under no circumstances should you try to repair the tv box by yourself, as this will void the warranty, do not open the box, there is a risk of electric shock, if a fault occurs, firstly check with points listed below before taking the tv box for repair. If you are unable to remedy the problem by following hints, consult your dealer for help.

Problem	Solution
No power	<ul style="list-style-type: none"> <li>&lt;Check if the power adaptor is properly connected to the power and the tv box.</li> <li>&lt;Check the power on the remote control to turn on the power.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>&lt;Reconnect with hdmi cable or av cable.</li> <li>&lt;Check if the speakers are connected correctly.</li> </ul>
No sound or distorted sound	<ul style="list-style-type: none"> <li>&lt;Adjust the volume.</li> <li>&lt;Check if the speakers are connected correctly.</li> </ul>
No audio or digital output	<ul style="list-style-type: none"> <li>&lt;Check the digital connection.</li> <li>&lt;Check if you are using the correct cable.</li> </ul>
The player does not respond to remote control	<ul style="list-style-type: none"> <li>&lt;Check if the remote control is facing the front of the tv box.</li> <li>&lt;Check if the distance is in the normal range.</li> <li>&lt;Check the batteries in the remote control.</li> <li>&lt;Check if the remote control is not blocked by any metal.</li> <li>&lt;Restart the system (reboot) with power adaptor to the tv box.</li> </ul>
No sound during movies	<ul style="list-style-type: none"> <li>&lt;The audio codes may not be supported by the tv box, you can change to the supported audio on &lt;Settings&gt; menu.</li> <li>&lt;Check the volume.</li> </ul>
The contents of the usb disk Drive cannot be read	<ul style="list-style-type: none"> <li>&lt;The used &lt;usb disk format&gt; is not compatible with the box, &lt;1&gt; one of the usb can not be read, please turn off the tv box for 10 seconds and then turn on the tv box.</li> <li>&lt;2&gt; one of the usb can not be read, please turn off the tv box for 20 seconds.</li> </ul>
Slow operation of the usb disk drive	<ul style="list-style-type: none"> <li>&lt;Slow down or high speed when USB disk drive takes longer time to read and display on the tv screen.</li> </ul>
No sound with hdmi connection	<ul style="list-style-type: none"> <li>&lt;Check your tv system setup.</li> <li>&lt;Check your hdmi cable.</li> </ul>
The screen is black and the player is blinking	<ul style="list-style-type: none"> <li>&lt;Turn off the tv box, wait 30 seconds turn it on again.</li> <li>&lt;Check if the hdmi cable is connected correctly.</li> <li>&lt;Check if the hdmi cable and the output resolution of the tv box are correct.</li> </ul>

## FCC Warning Statement

FCC Warning Statement  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- > Reorient or relocate the receiving antenna.
- > Increase the separation between the equipment and receiver.
- > Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- > Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be

installed and operated with minimum distance of 20cm the radiator your body. This device

and its antenna(s) must not be co-located or operation in conjunction with any other

antenna or transmitter.

制作要求: 说明书 ROHS 80G书写纸 风琴折页 双面黑白印刷 尺寸:  
100MM\*140MM (型号MVP(HT-3566)盒子说明书)

制图	审核	制图日期	图纸编号	比例	版本	更改记录
彭海龙		2024.2.29	?	1:1	1.0	