 


USER MANUAL

Automatic Pet Feeder

(Wi-Fi)

 
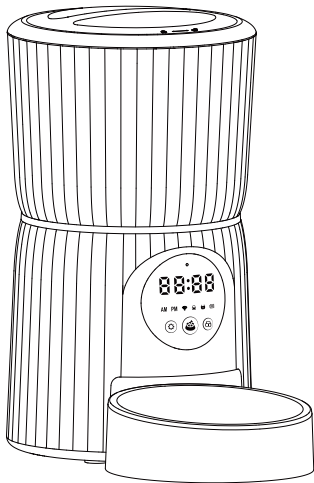 


Model: PF01W

 
Please read this manual before using the product and keep it for future reference.

PRODUCT OVERVIEW

- 1.Lid
- 2.Desiccant Box
- 3.Transparent Food Tank
- 4.Tank Base
- 5.Rotor
- 6.LCD Display
- 7.Button
- 8.Food Outlet
- 9.Feeder Base
- 10.Stainless Steel Bowl
- 11.Bowl Tray
- 12.Type-C Power Jack
- 13.On/Off Switch
- 14.Battery Compartment
- 15.Compartment Lid

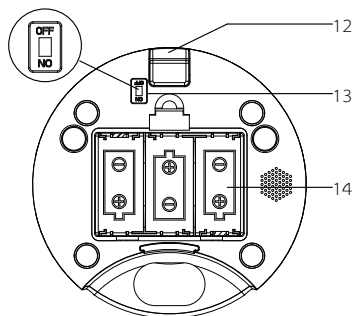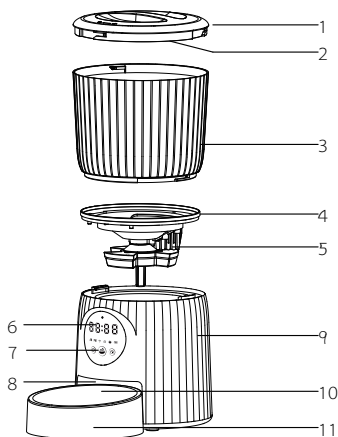




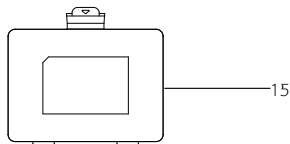




Bottom View

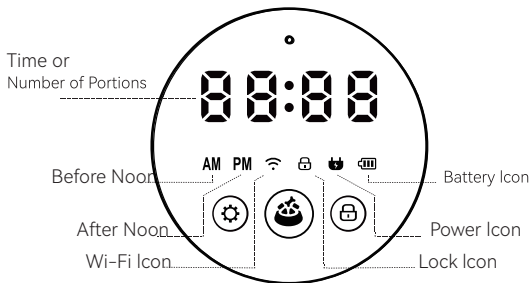 

BUTTONS AND DISPLAY OVERVIEW

Display



Icon	Meaning
	Blue Light Flash: Pairing Mode; Blue Light On: Network Connected Red Light On: Network Error
	Light On: Buttons Locked Light Off: Buttons Unlocked
	Light On: Plugged In Light Off: Unplugged
	Light On: Batteries Installed Red Light Flashing: Low Battery Light Off: No batteries
	Press and hold the setting button for 10s to reset the feeder into pairing mode.
	Double-click the feeding button to manually feed one serving, wait about 3s to the next feeding.
	Press and hold the lock button for 3s to lock or unlock the device. The feeder will automatically lock if it is not operated for 2 min;

 
HOW TO USE

Assembly and Prepare for Setting

1. Unbox and take out the food bowl and bowl tray.


2. Install the food tank.

Twist the food tank clockwise to install on the tank base. Switch the lock on the back of base. Up for Lock, Down for Unlock

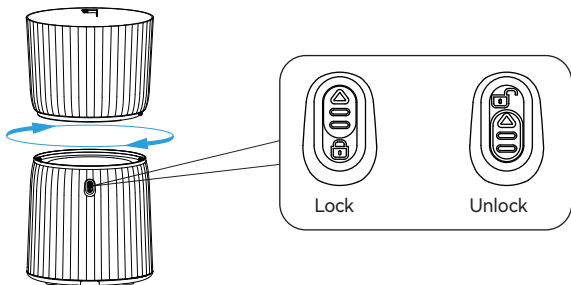


3. Add enough dry pet food.

 Recommended kibble size: 2-15mm/0.07-0.6inch in diameter. Do not use canned, wet, or moist food.

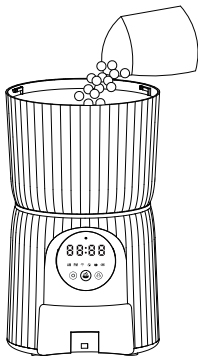


4. Put the lid back on.

 To snap into place, turn the lid clockwise from the right rotating sign to the left rotating sign.

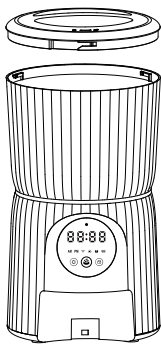

5. Install the Food Bowl

 Attach the bowl to the designated notches underneath the feeder base.

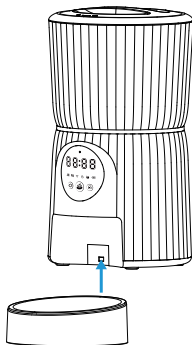





Connect Power

The feeder supports dual power modes.

 Using the power adapter and Type-C power cable: Plug 5V power adapter into a wall outlet, turn on the switch.

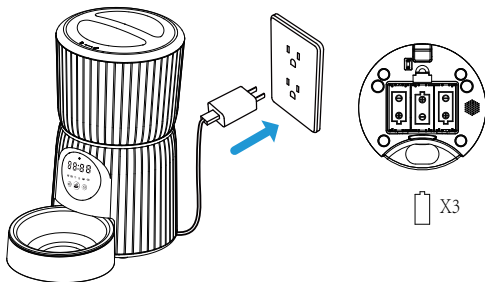Using battery power: Install three D alkaline batteries into the battery compartment, turn on the switch.



Power Mode	Icon	Display
Cable		Always On Note: Display automatically turn off during 10: 00PM to 7:00AM
Battery		Display automatically turn off after 2 mins without operation
Cable & Battery		Always On Note: Display automatically turn off during 10: 00PM to 7: 00AM

Notes

- The battery icon will flashing red light when batteries is low
- When the power adapter, power cable, and batteries are used at the same time, the feeder will only draw power via the power cable.
- If the feeder doesn't turn on, check if the On/Off Switch on the bottom is at "On" position.

Connect to APP

Make sure the Wi-Fi and Bluetooth on your smartphone is enabled. Only supports 2.4GHz Wi-Fi network.

 
Step 1: Download and Install APP

1. Search for "Smart Life" in the App store or scan the QR code to download app




2. Sign up and log in your account.


Step 2: Add the device (Auto)

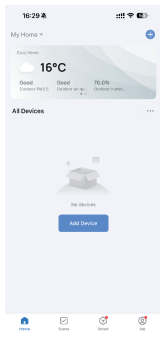

 1. Click "Add Device"

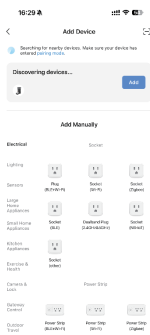


 2. The app will automatically search and find the device, then click "Add"

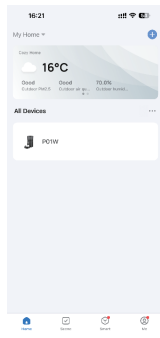

3. Connected

 
Step 2: Add the device (Manually)

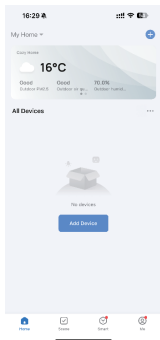


1. Click "Add Device"



 
2. In Small Home Appliances category, pet sub category, find Pet Feeder(WiFi);

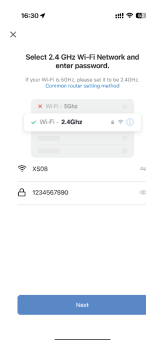

 
3. Enter the 2.4G WiFi password, and then click "Next" to finish

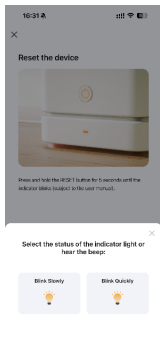

 4. Confirm that the indicator light is flashing, (select "Slow Flashing" when the indicator flashes)

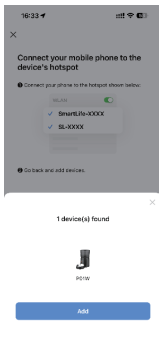

 5. Connect to the SmartLife-XXX Wi-Fi, Click Add when device found.

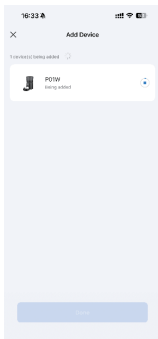


6. Wait for connect successfully.

Note:

If the pairing fails, press and hold the setting button for 10s to restore the factory settings, and then retry pairing steps.

The feeder will enter the no network state when in pairing mode for more than 3 minutes, press and hold the setting button for 10s to restore the factory settings.

 Step 3: Set the Feeding Plan

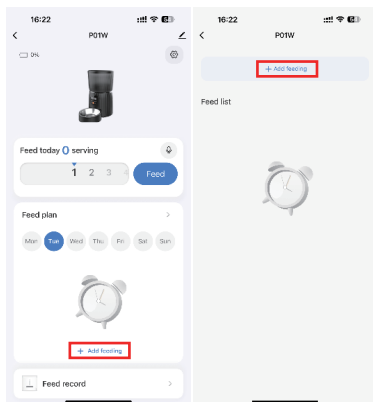


1.Click Add feeding.


2.Set of time

3.Select the day

 4.Set the feed portions (1-30) Click Save.

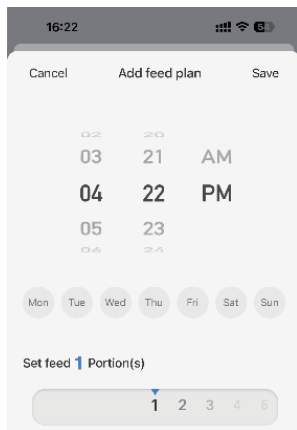

Other Setting Guide:

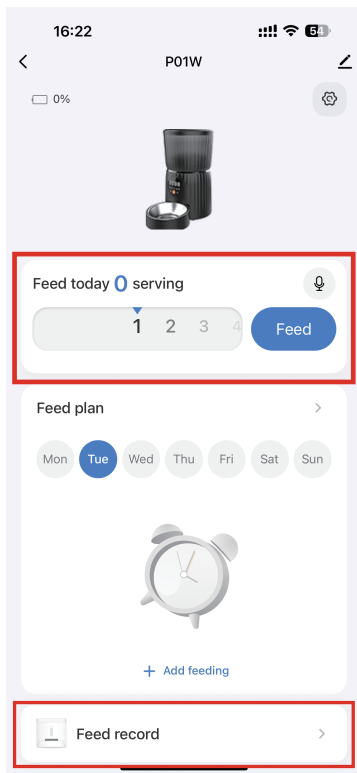 


Manual Feeding

Swipe the number to select the feed portions(1-30), tap the Feed button


Feeding Records

The feeding records will be wiped at the end of the day.

 
Audio Record and Play

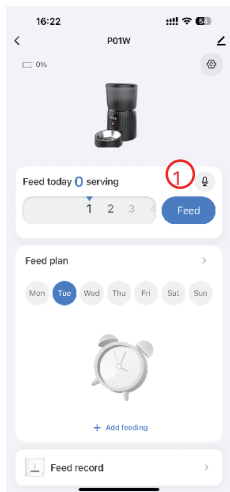

 1. Click "Voice" to enter audio record.

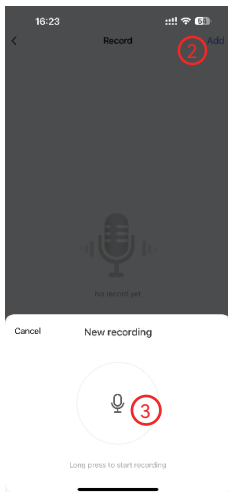


 2. Click add
3. Long press to start recording

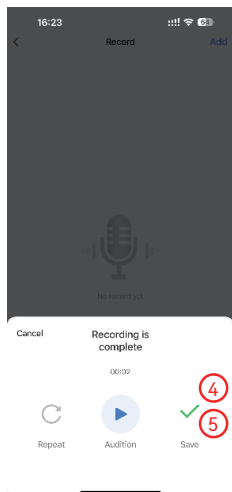

4. Click "save"
5. Rename the record and save

 Setting Page

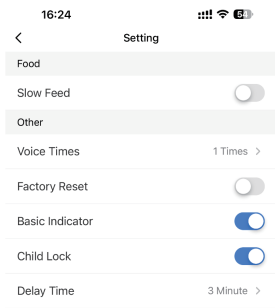

Slow Feed

Voice Times: Set from 0-10 times

 
Factory Reset: Reboot the feeder

Basic Indicator


Child Lock

Delay Time: slow feeding interval minutes (0-10mins)


CLEAN AND CARE

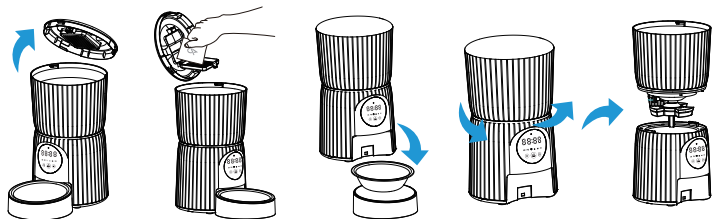

 1. Open the lid and take out the desiccant
2. Twist anticlockwise to remove the tank base
3. Remove the feeding bowl and empty the grain in the hopper.

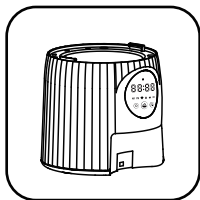

Clean other parts
with a dry cloth.

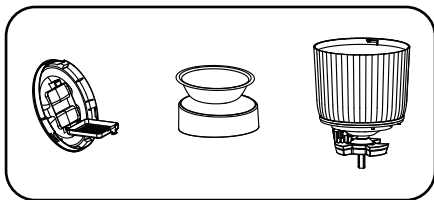 

The washable parts are as follows:
lid, stainless steel bowl, bowl tray, food tank,
tank base, rotor

Note:

Disconnect power before cleaning.

Do not clean the feeder in a dishwasher. Only the stainless-steel bowl is dishwasher safe.

It's recommended to clean the feeder regularly for the health of pets.

TROUBLESHOOTING

The answers to these questions should help you solve most problems you may have with the pet feeder.

Question	Solution
The screen shows E-01	E-01 appears on the screen to indicate that the food outlet is blocked. Please clean the food outlet in time.
LED screen is off	If powered by batteries only, the display screen will turn off after 2 mins without operation, and touch any button the display will turn on.
The food amount is not the same as the set	The food amount per portion varies according to the size of the food please test the food amount per portion several times manually before setting.

WARRANTY

12 month warranty

SPECIFICATIONS

Model	PF01W
Capacity	4L
Power	DC 5V power adapter with Type-C cable; 3 * alkaline D batteries (Not included)
Dimensions	276*199*199 mm / 10.9*7.8*7.8 in
Net Weight	1.8 kg / 4 lbs
Portion	30 portions Max; 1/10 cup per portion
Meals	10 meals per day



Made in China

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.