 


## OBW NVNT ac40 5590MHz Ant3



## OBW NVNT ac40 5670MHz Ant1

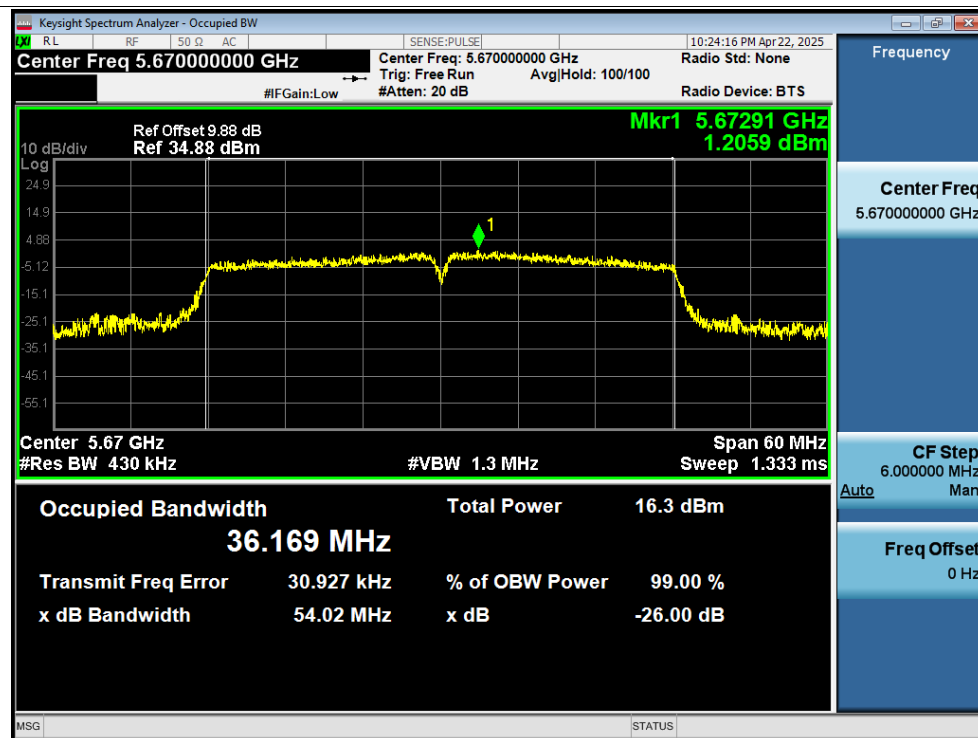

## OBW NVNT ac40 5670MHz Ant2



 
## OBW NVNT ac40 5670MHz Ant3



## OBW NVNT ac40 5755MHz Ant1




## OBW NVNT ac40 5755MHz Ant2

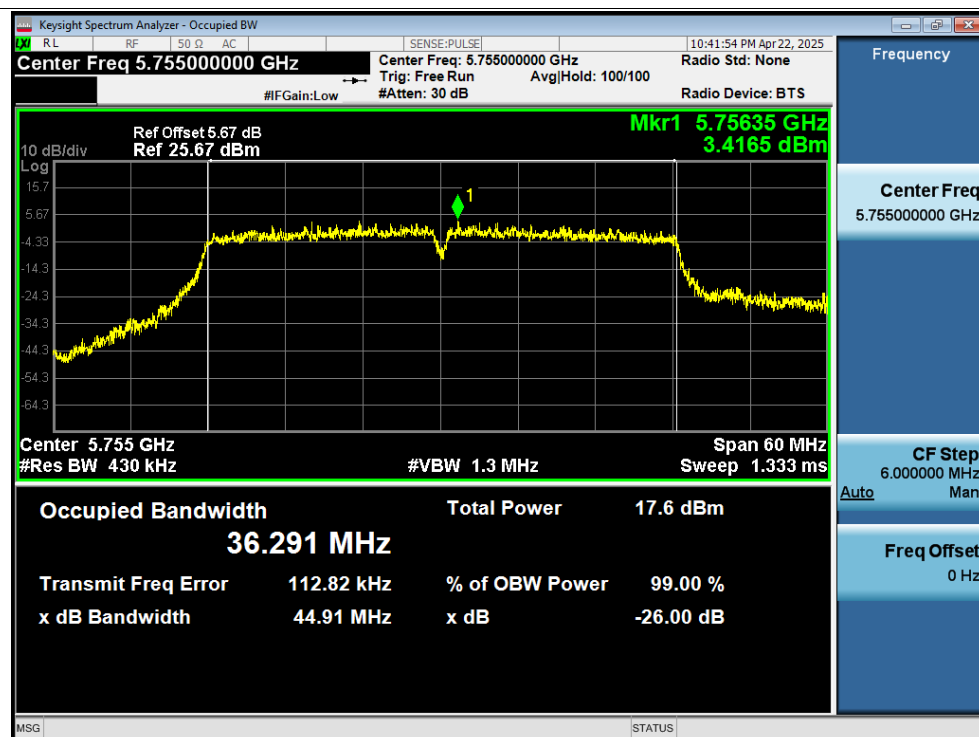

## OBW NVNT ac40 5755MHz Ant3



 
## OBW NVNT ac40 5795MHz Ant1

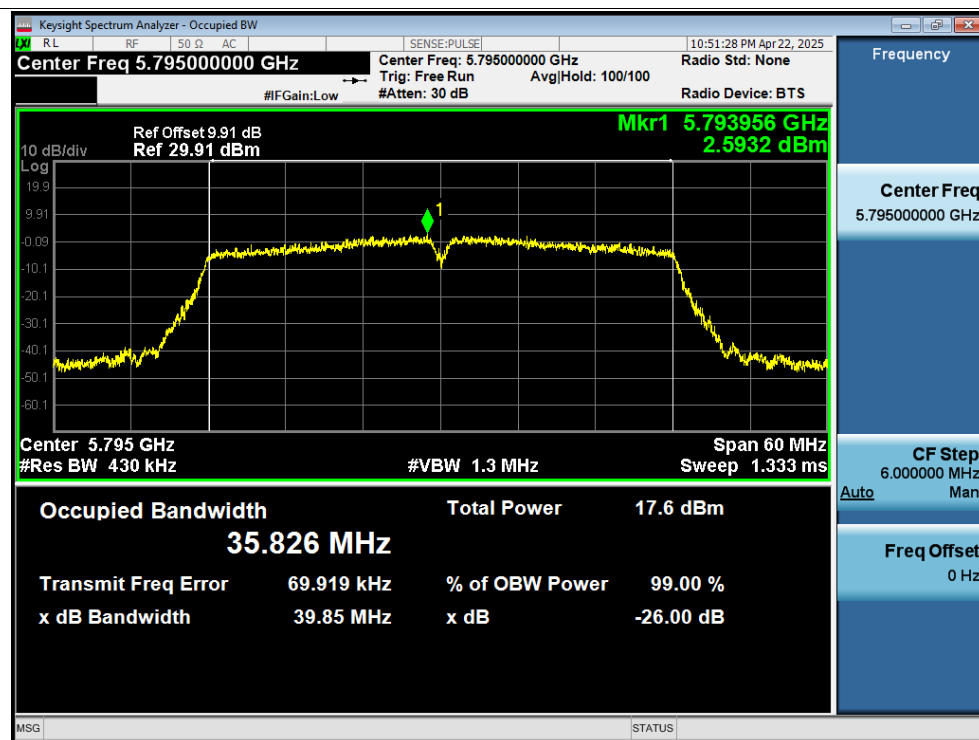


## OBW NVNT ac40 5795MHz Ant2



 
## OBW NVNT ac40 5795MHz Ant3

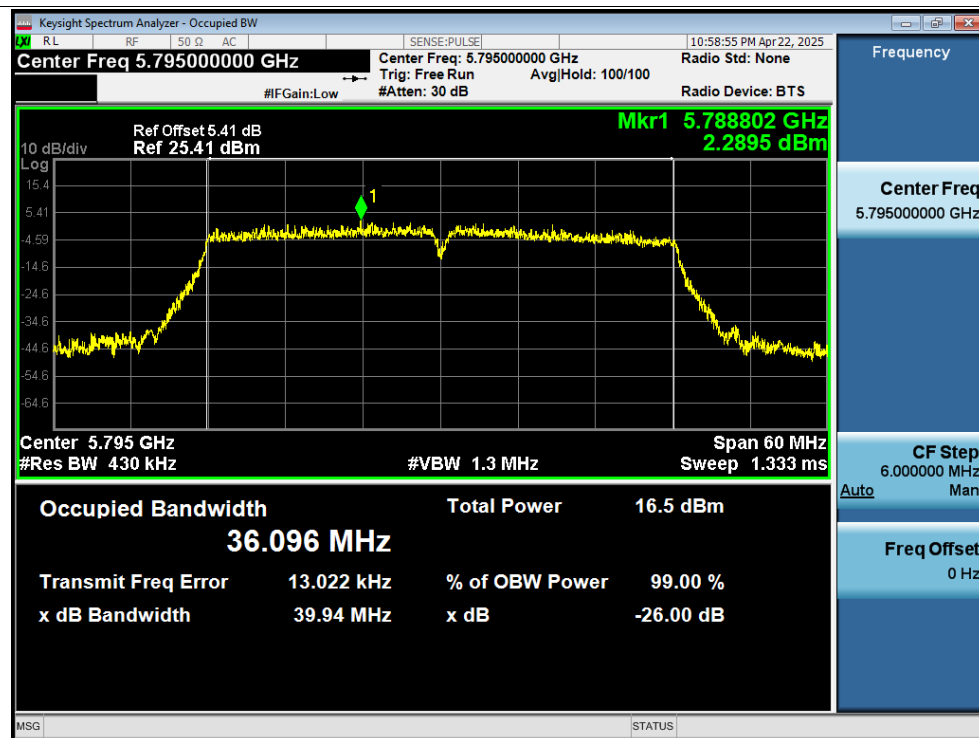

## OBW NVNT ac80 5210MHz Ant1

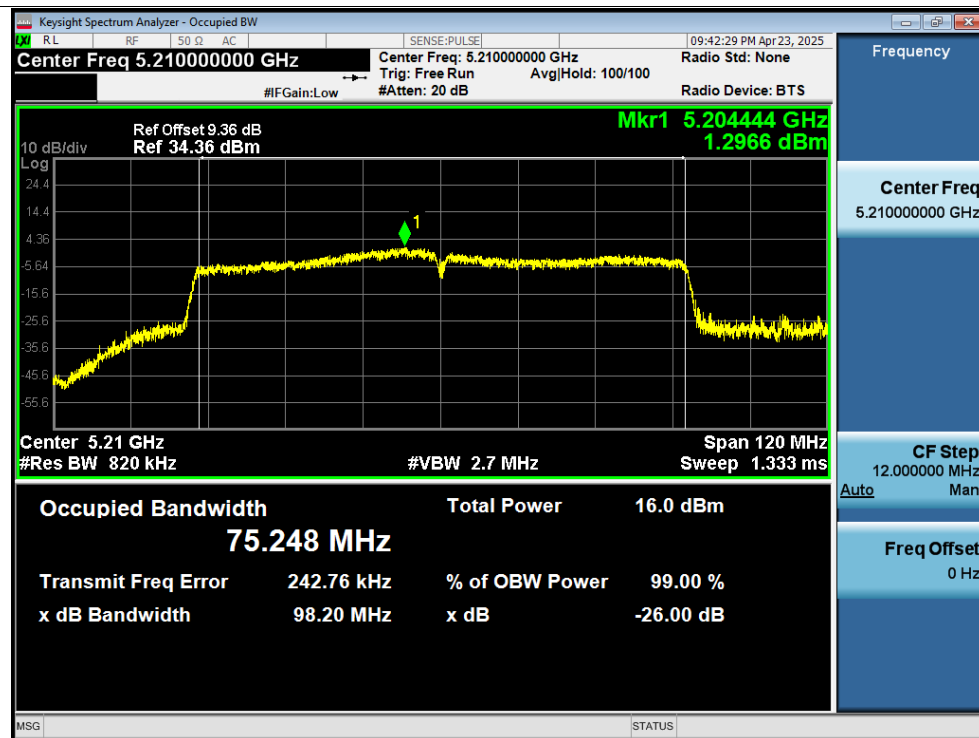 

## OBW NVNT ac80 5210MHz Ant2

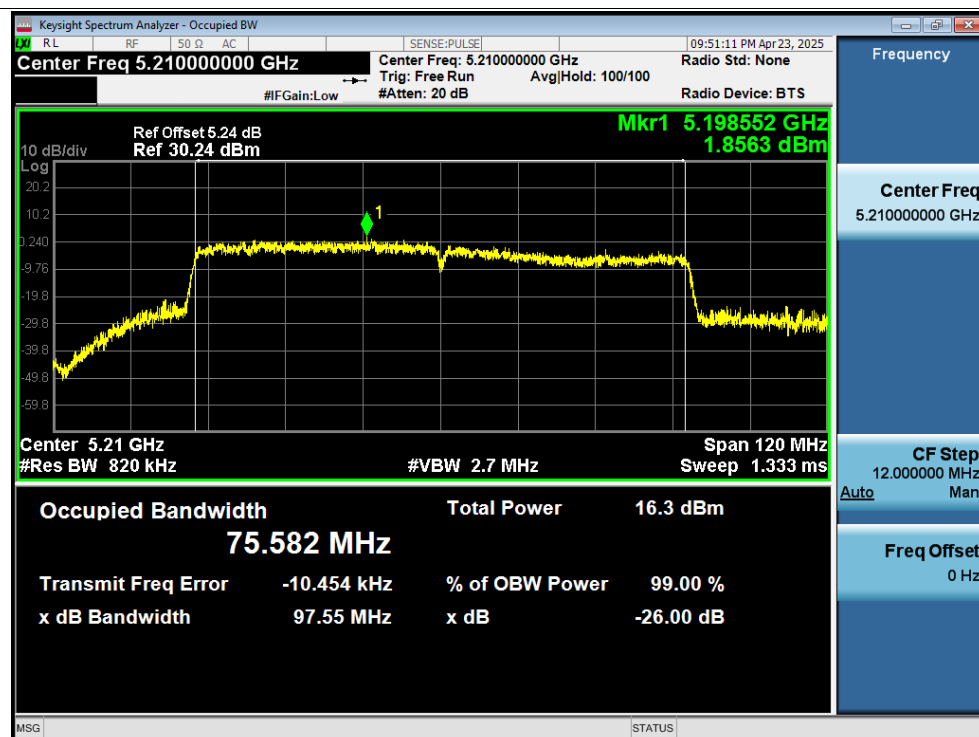 

## OBW NVNT ac80 5210MHz Ant3



## OBW NVNT ac80 5290MHz Ant1



## OBW NVNT ac80 5290MHz Ant2



## OBW NVNT ac80 5290MHz Ant3





## OBW NVNT ac80 5530MHz Ant1



 
## OBW NVNT ac80 5530MHz Ant2




## OBW NVNT ac80 5530MHz Ant3




## OBW NVNT ac80 5610MHz Ant1

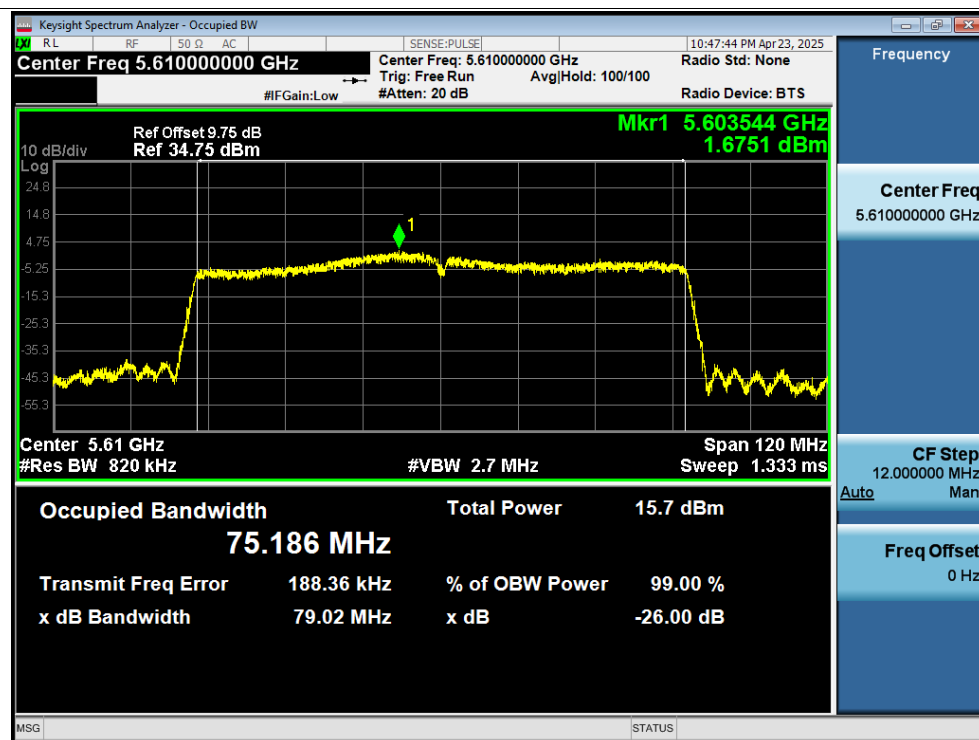


## OBW NVNT ac80 5610MHz Ant2

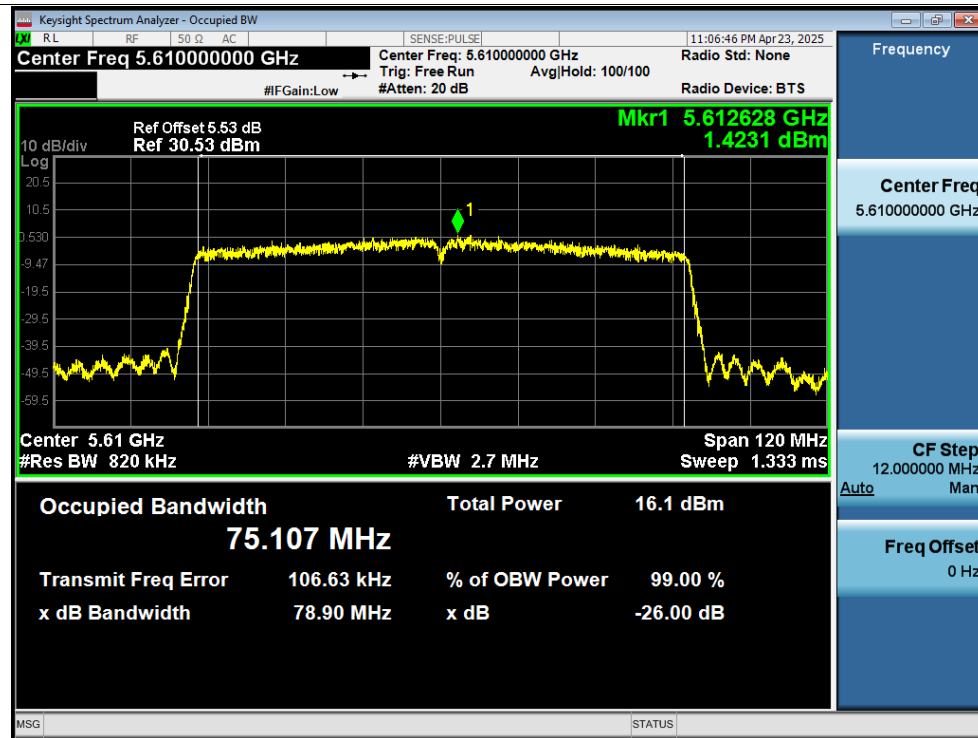 


## OBW NVNT ac80 5610MHz Ant3

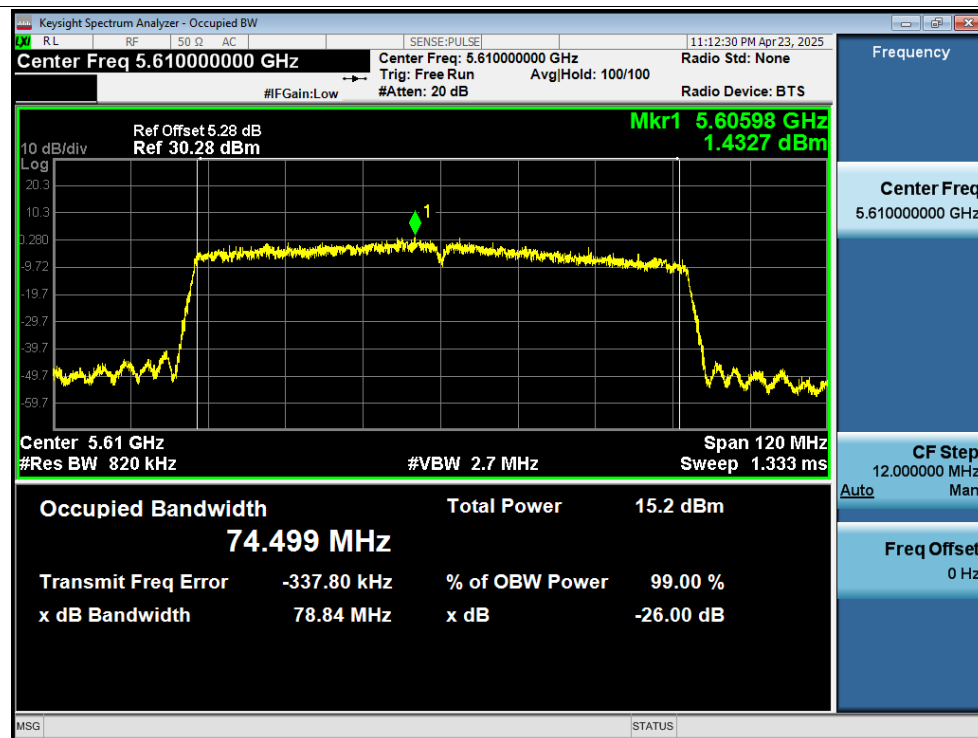 


## OBW NVNT ac80 5775MHz Ant1

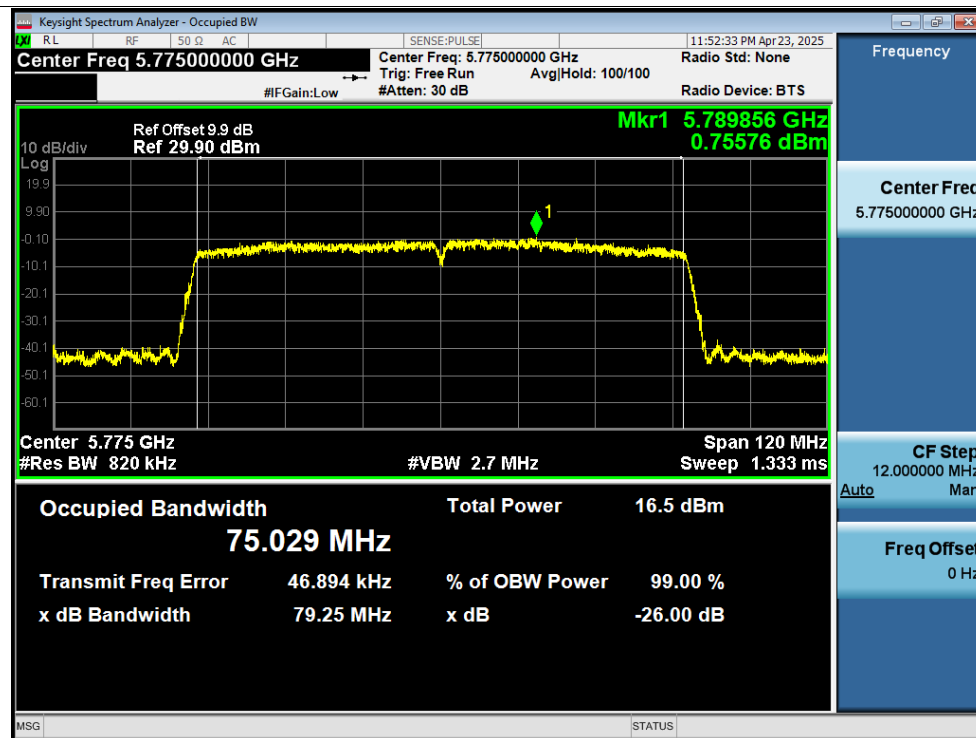 

## OBW NVNT ac80 5775MHz Ant2

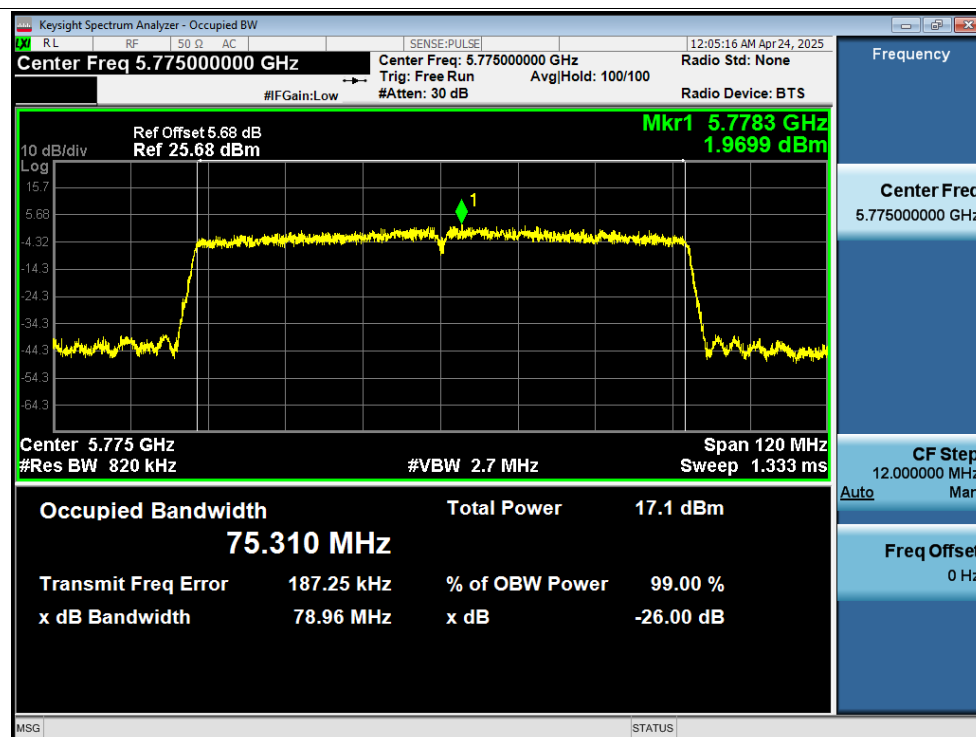 

## OBW NVNT ac80 5775MHz Ant3

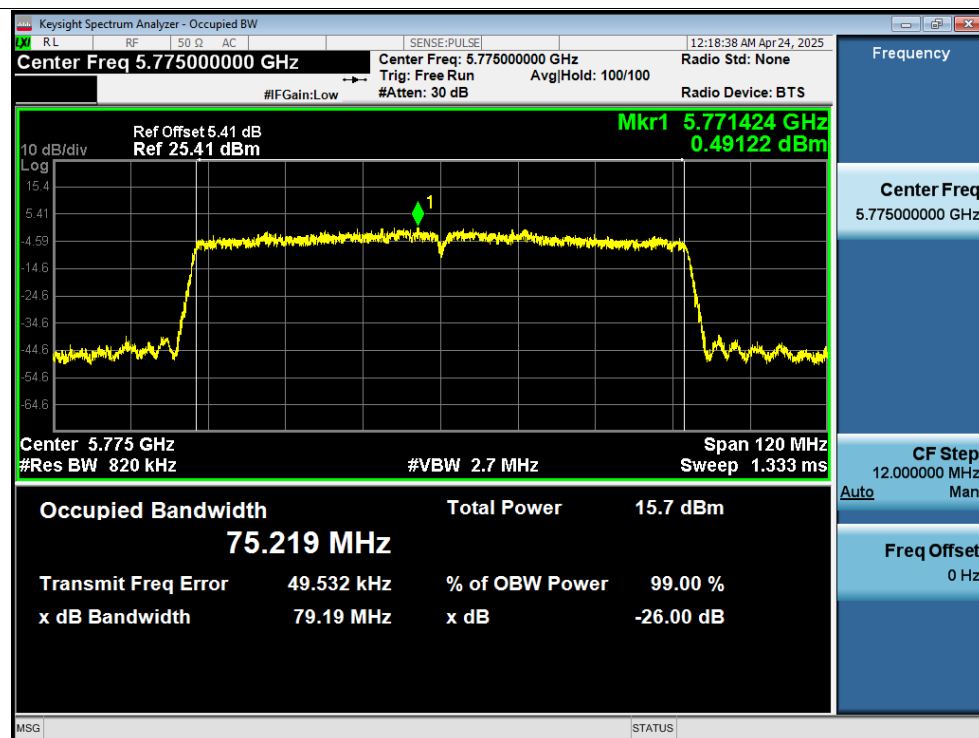 


## OBW NVNT ac160 5250MHz Ant1



## OBW NVNT ac160 5250MHz Ant2



 
## OBW NVNT ac160 5250MHz Ant3

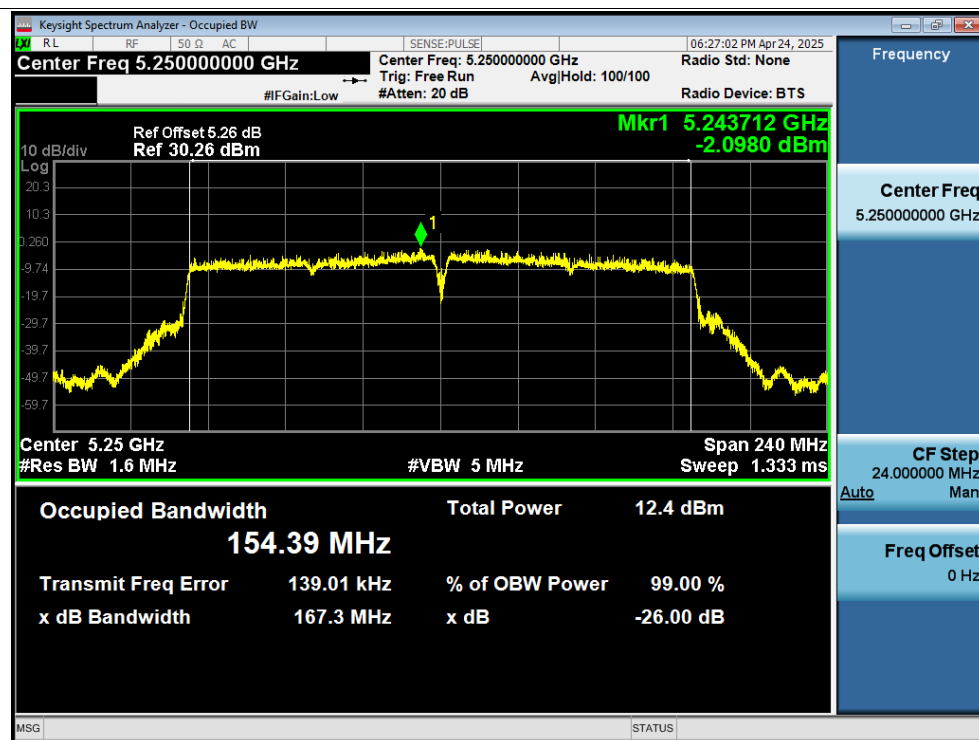


## OBW NVNT ac160 5570MHz Ant1


 
## OBW NVNT ac160 5570MHz Ant2

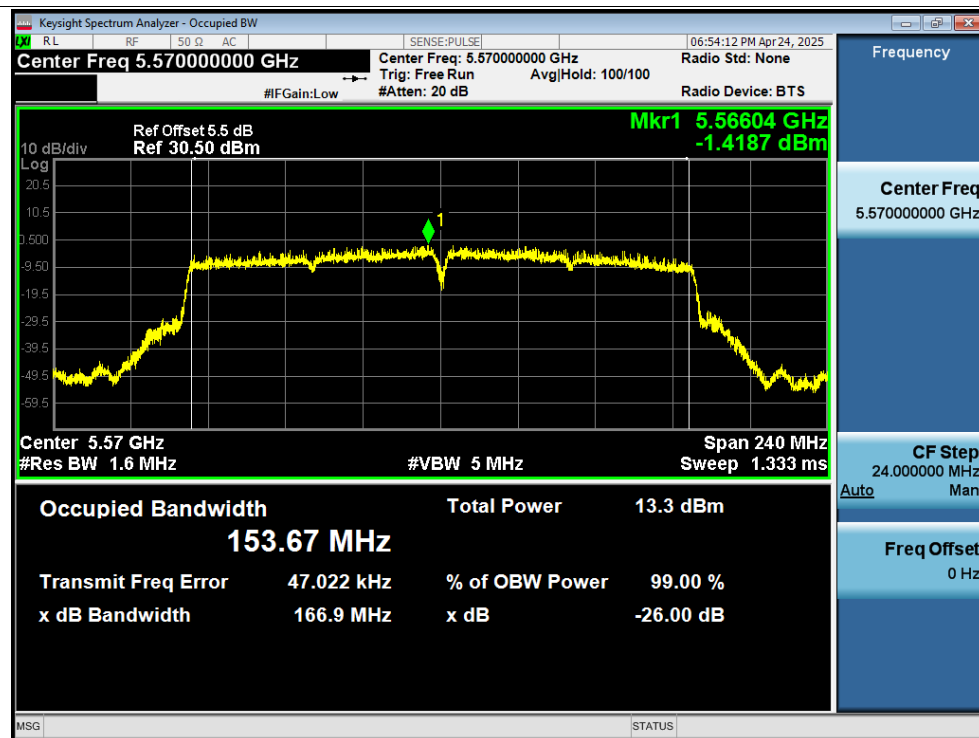

## OBW NVNT ac160 5570MHz Ant3

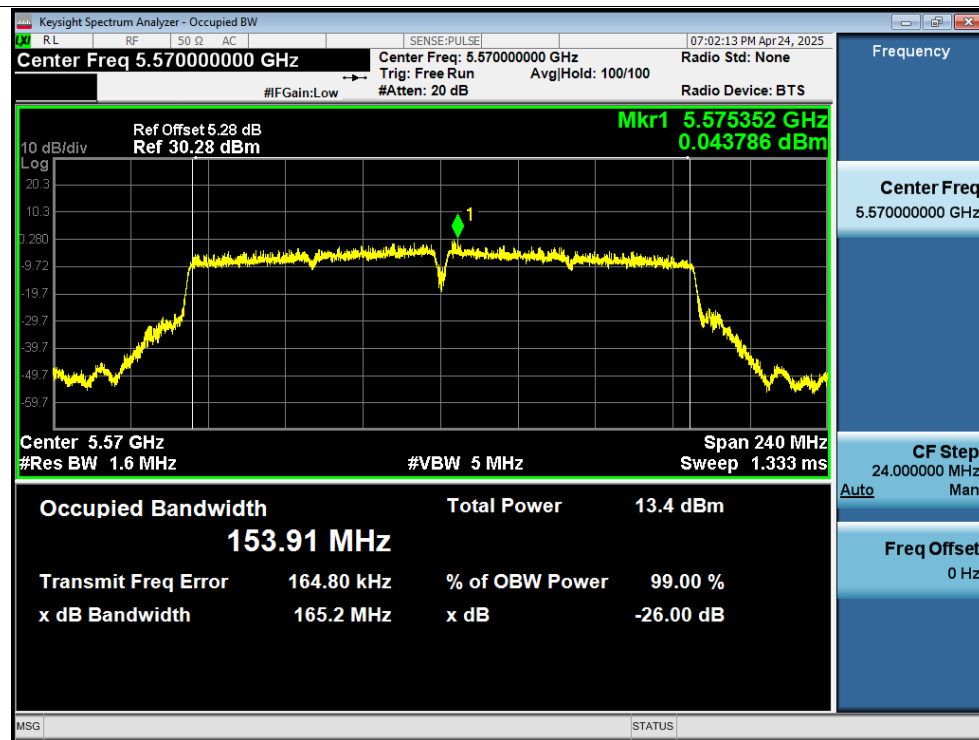 

## OBW NVNT ax160 5250MHz Ant1

 




## OBW NVNT ax160 5250MHz Ant2




## OBW NVNT ax160 5250MHz Ant3

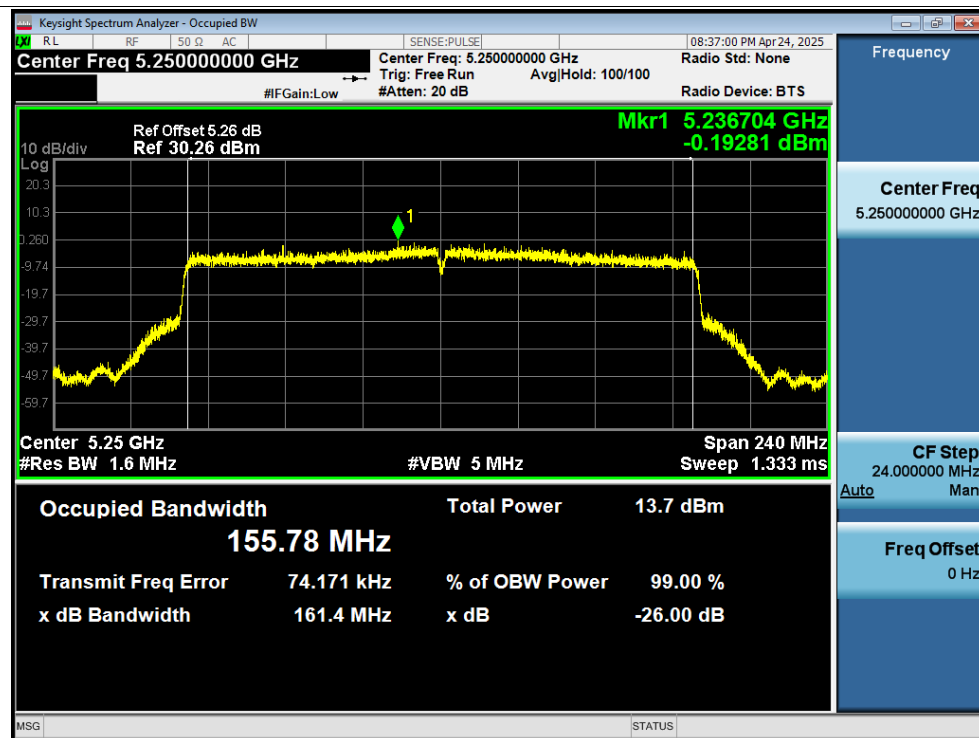

## OBW NVNT ax160 5570MHz Ant1



 
## OBW NVNT ax160 5570MHz Ant2

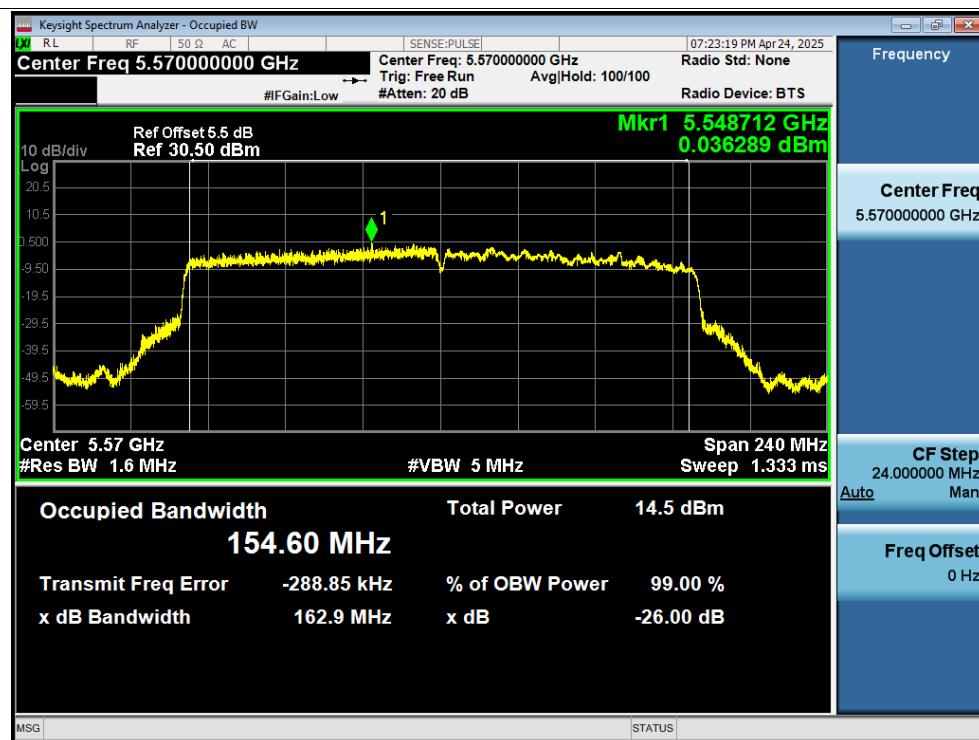


## OBW NVNT ax160 5570MHz Ant3



 
## OBW NVNT ax20 5180MHz Ant1

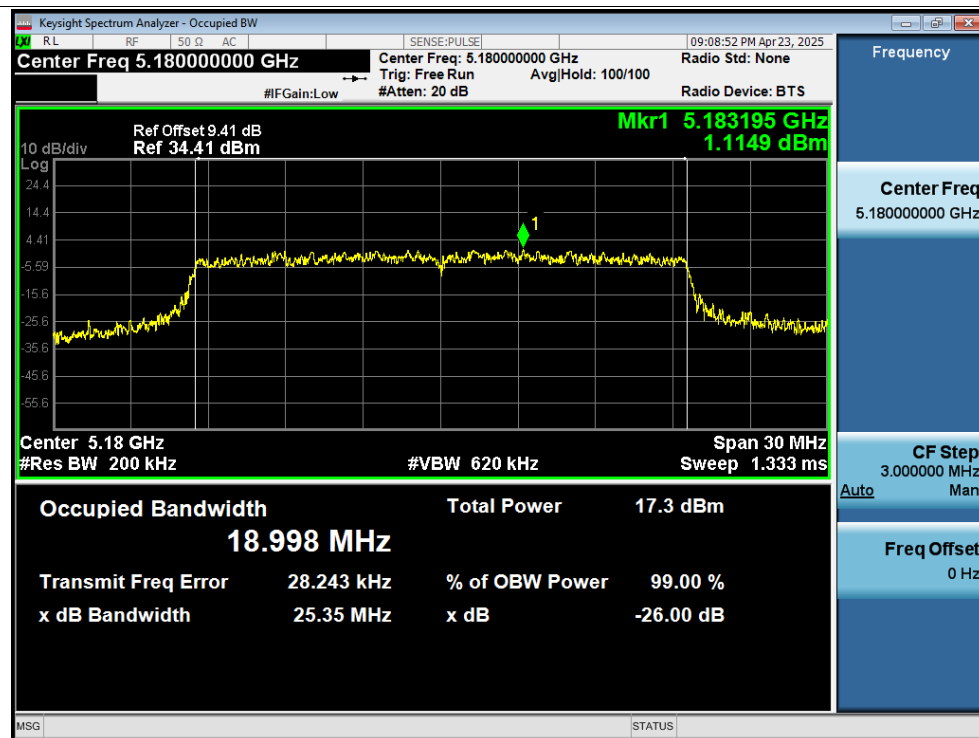


## OBW NVNT ax20 5180MHz Ant2

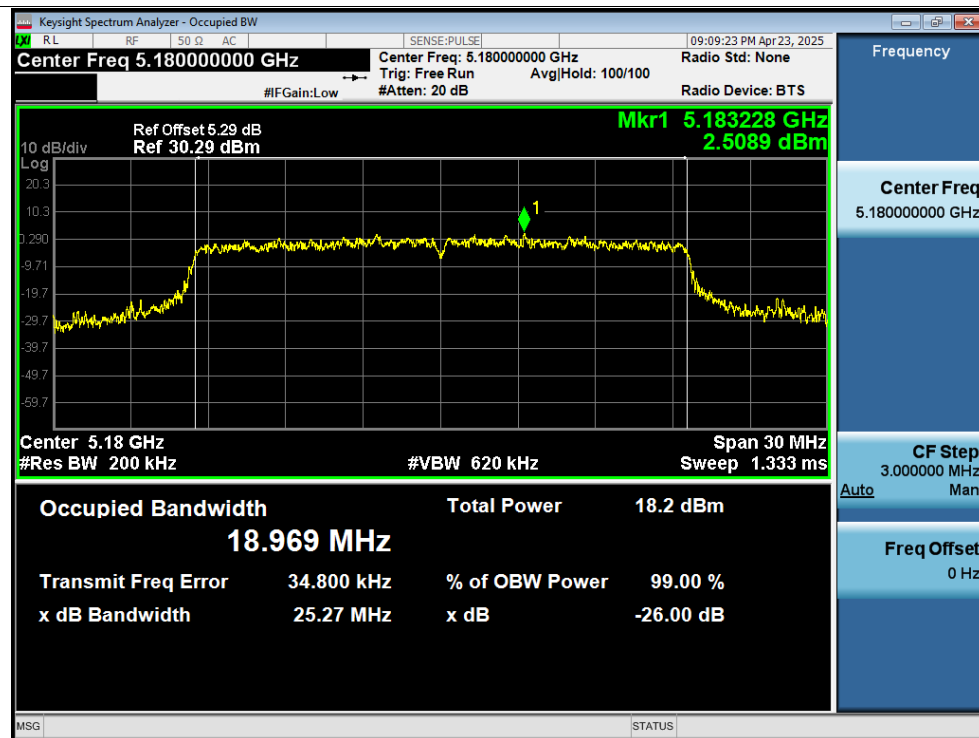 

## OBW NVNT ax20 5180MHz Ant3

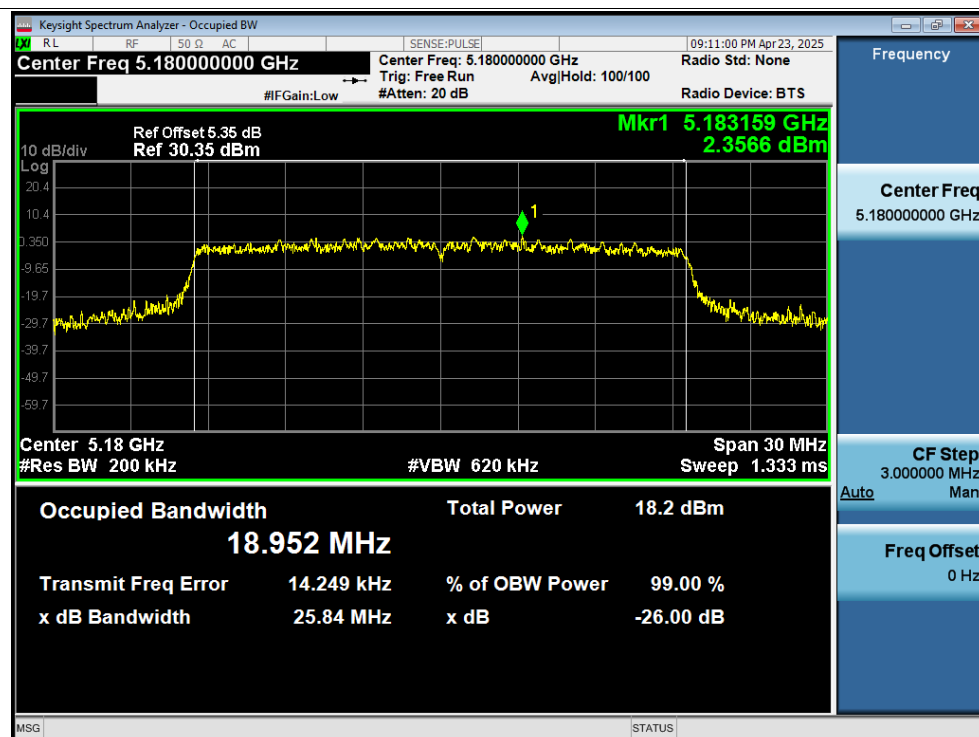 

## OBW NVNT ax20 5200MHz Ant1

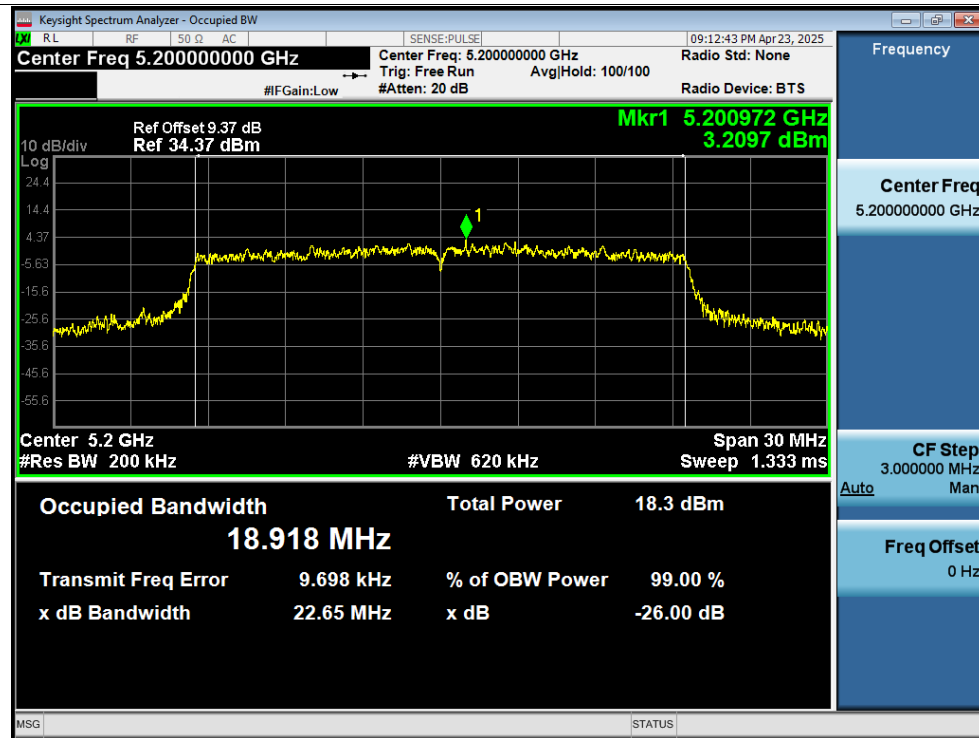 


## OBW NVNT ax20 5200MHz Ant2




## OBW NVNT ax20 5200MHz Ant3



 
## OBW NVNT ax20 5240MHz Ant1

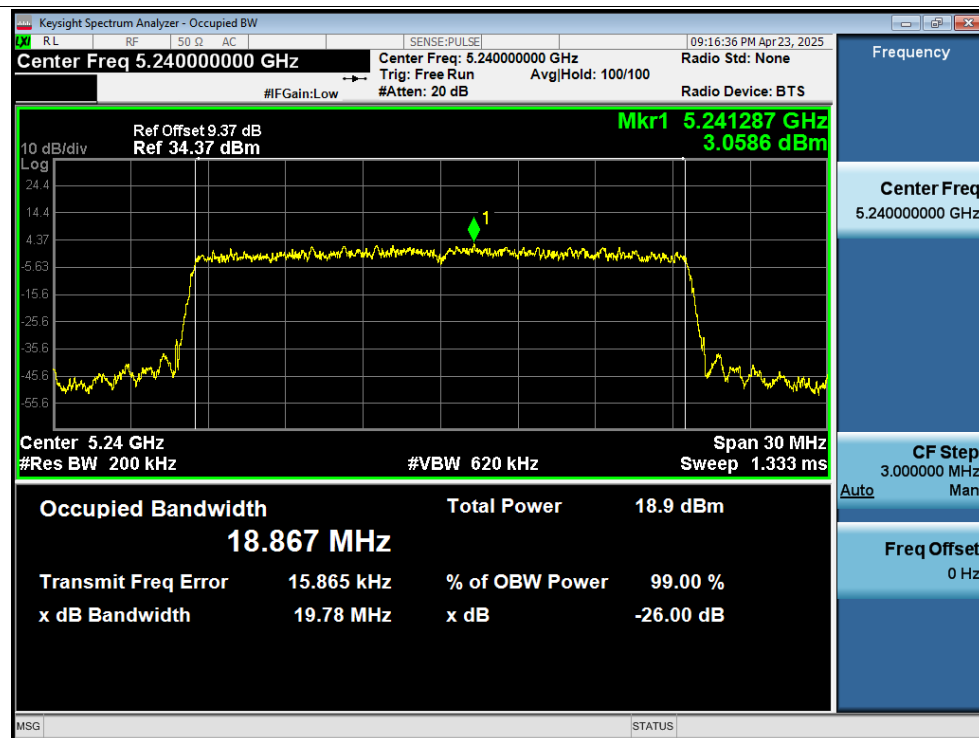


## OBW NVNT ax20 5240MHz Ant2

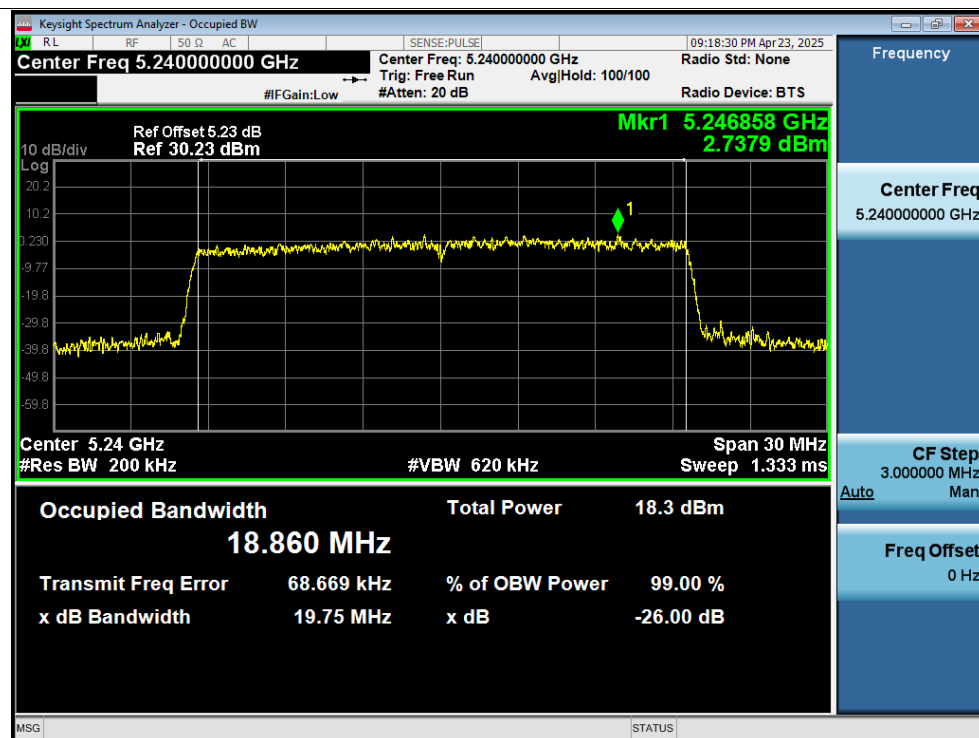 


## OBW NVNT ax20 5240MHz Ant3

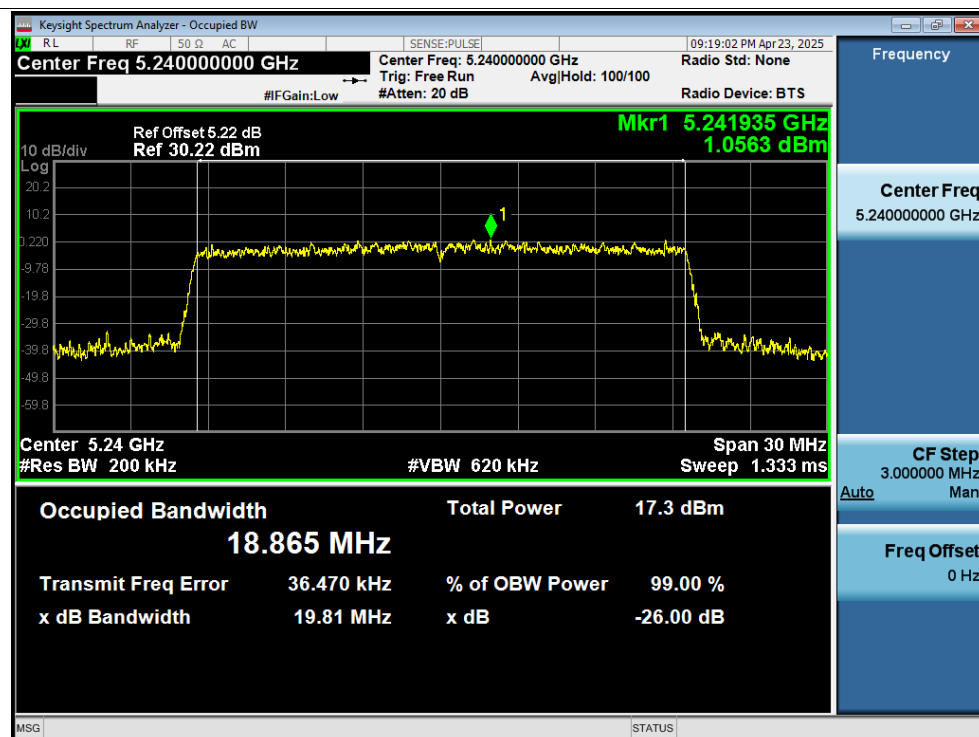 

## OBW NVNT ax20 5260MHz Ant1

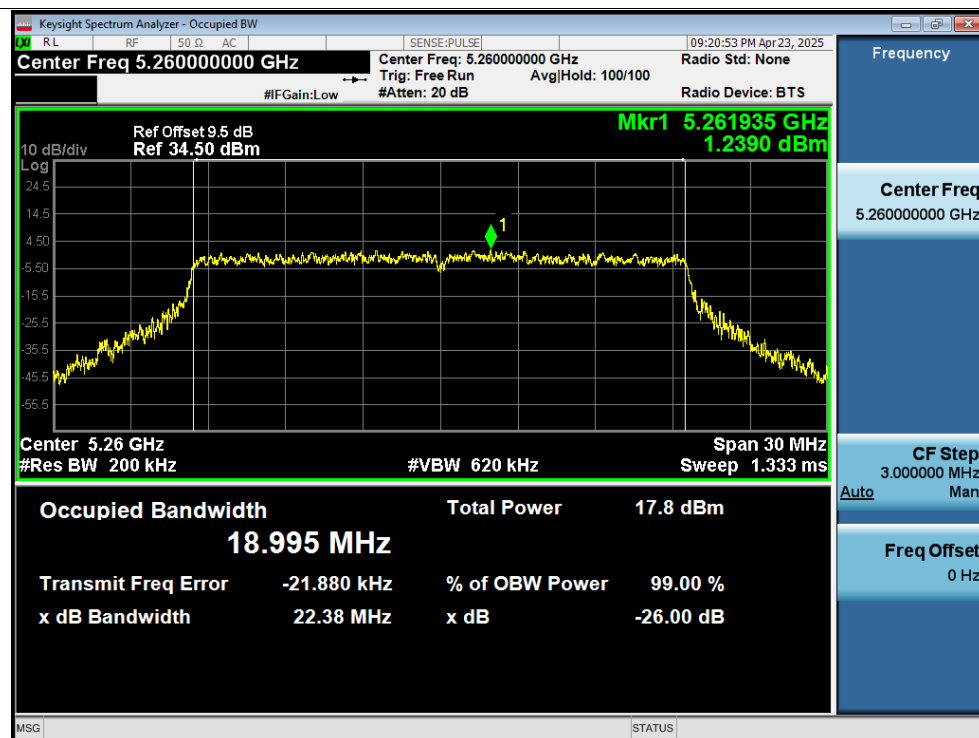 


## OBW NVNT ax20 5260MHz Ant2

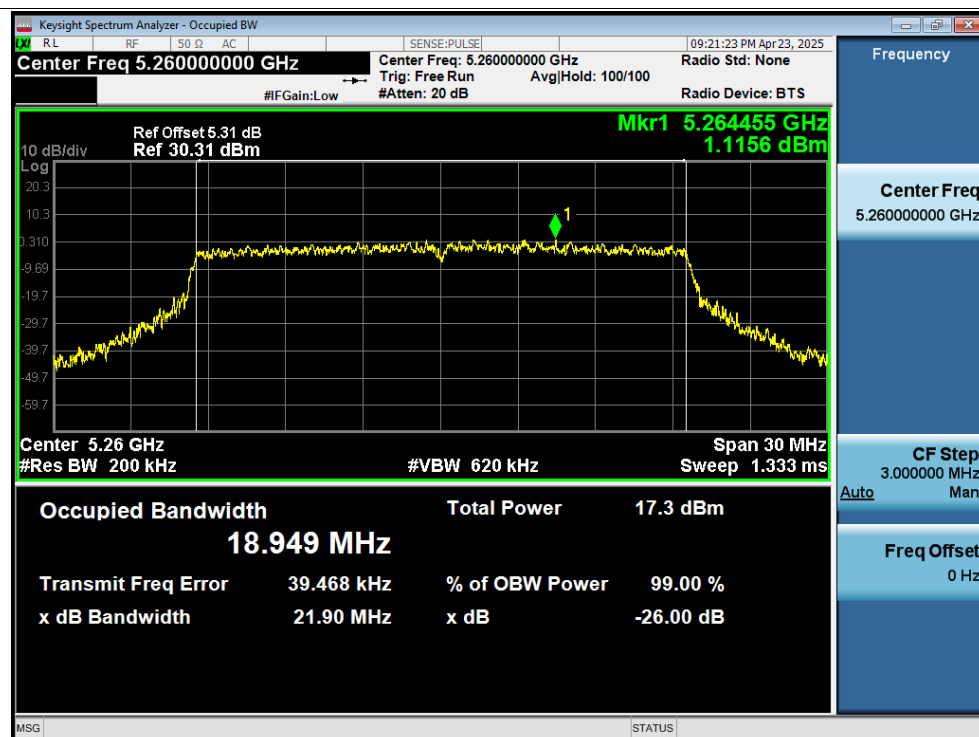 





## OBW NVNT ax20 5260MHz Ant3

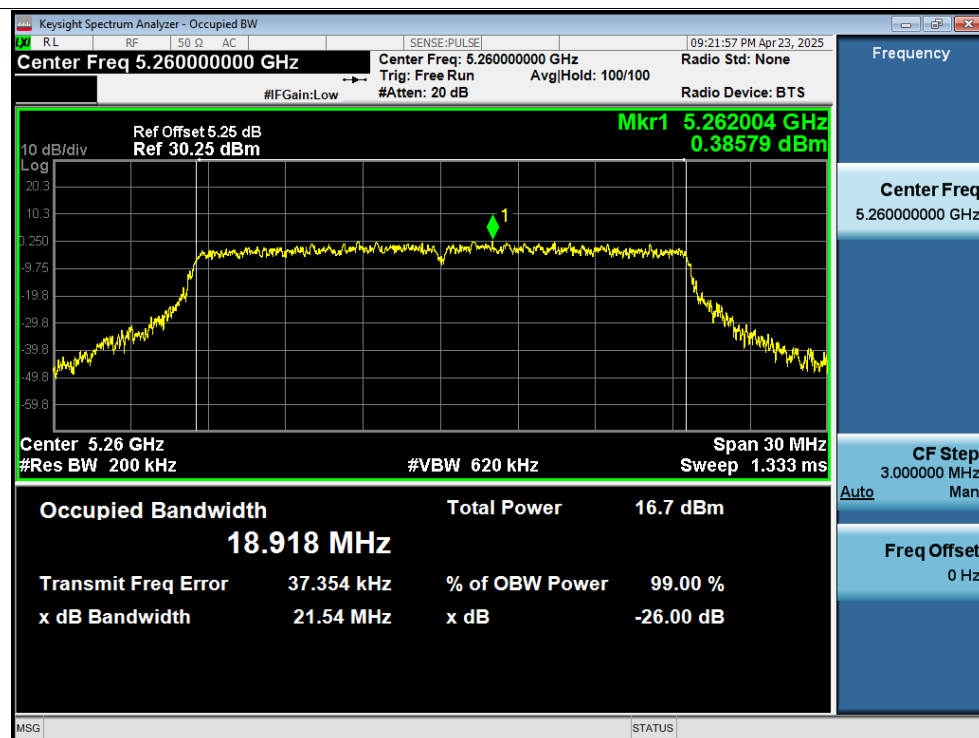 

## OBW NVNT ax20 5280MHz Ant1

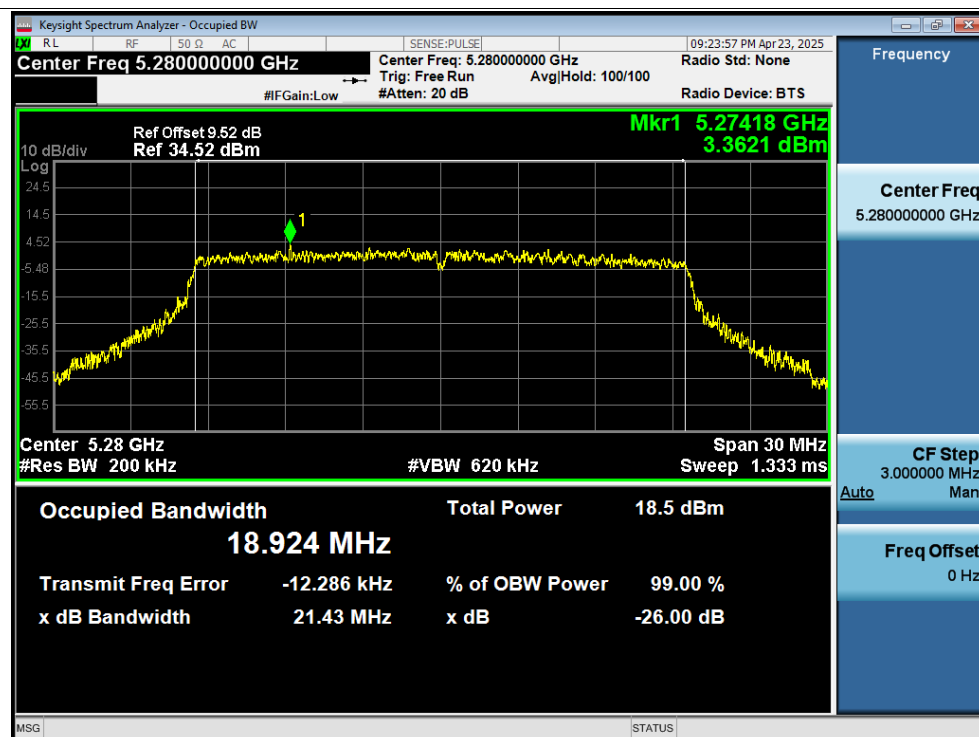 


## OBW NVNT ax20 5280MHz Ant2

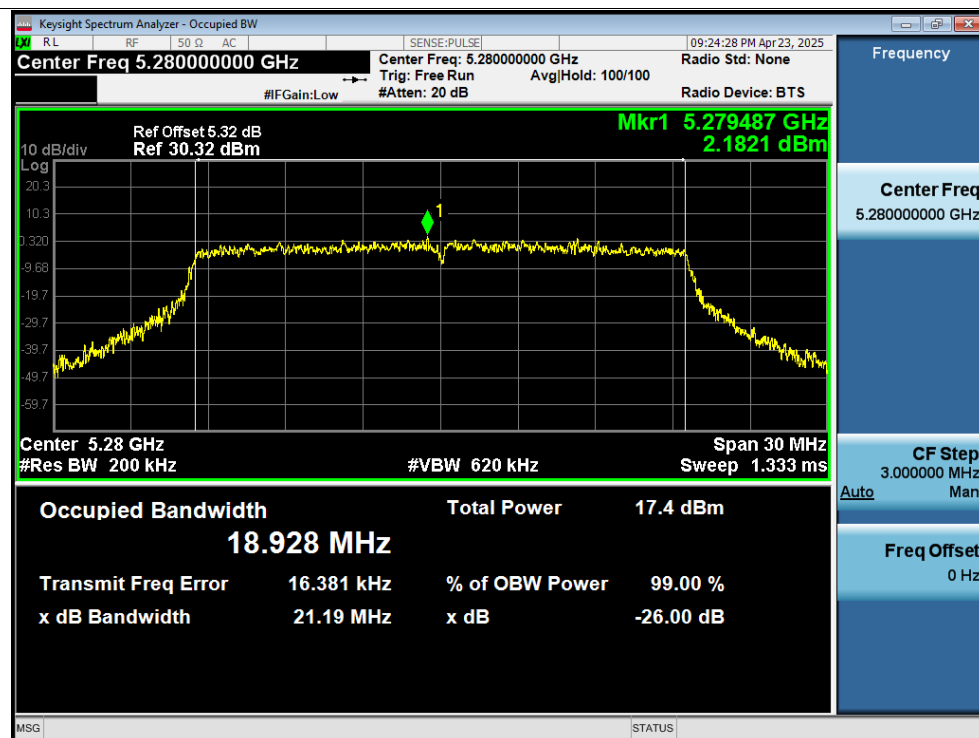 

## OBW NVNT ax20 5280MHz Ant3


 
## OBW NVNT ax20 5320MHz Ant1

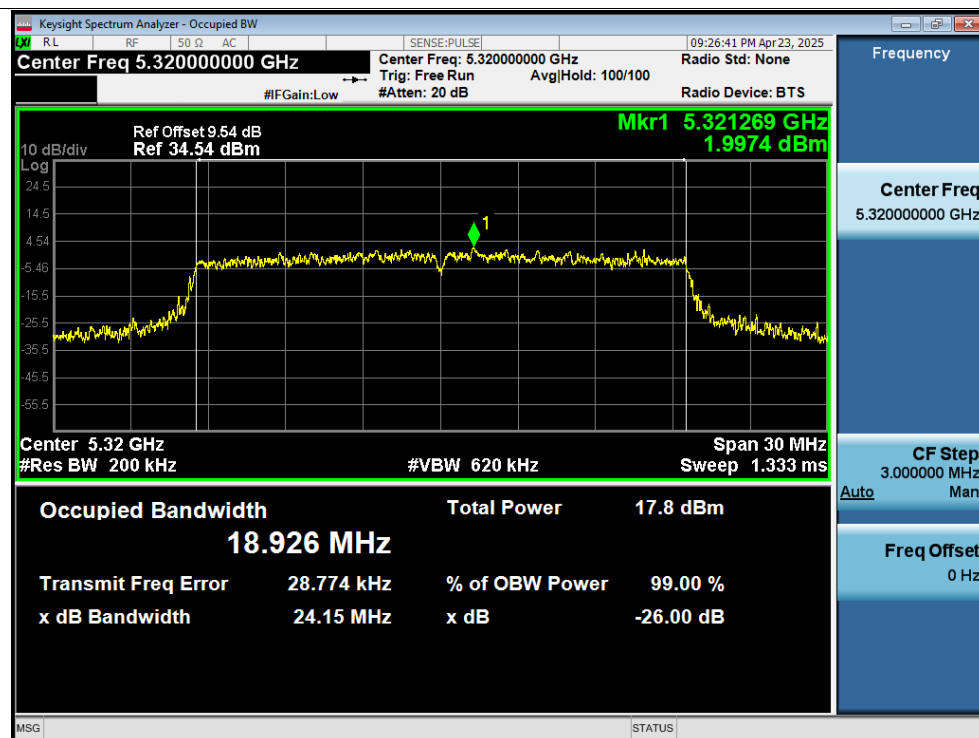


## OBW NVNT ax20 5320MHz Ant2



## OBW NVNT ax20 5320MHz Ant3



 
## OBW NVNT ax20 5500MHz Ant1

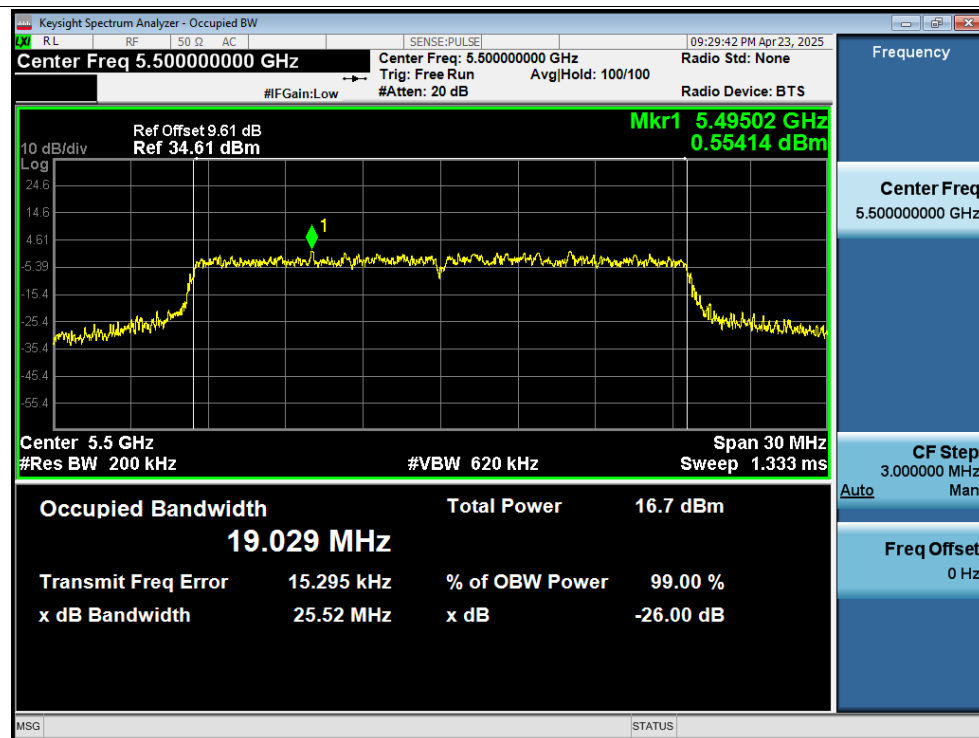


## OBW NVNT ax20 5500MHz Ant2



 
## OBW NVNT ax20 5500MHz Ant3

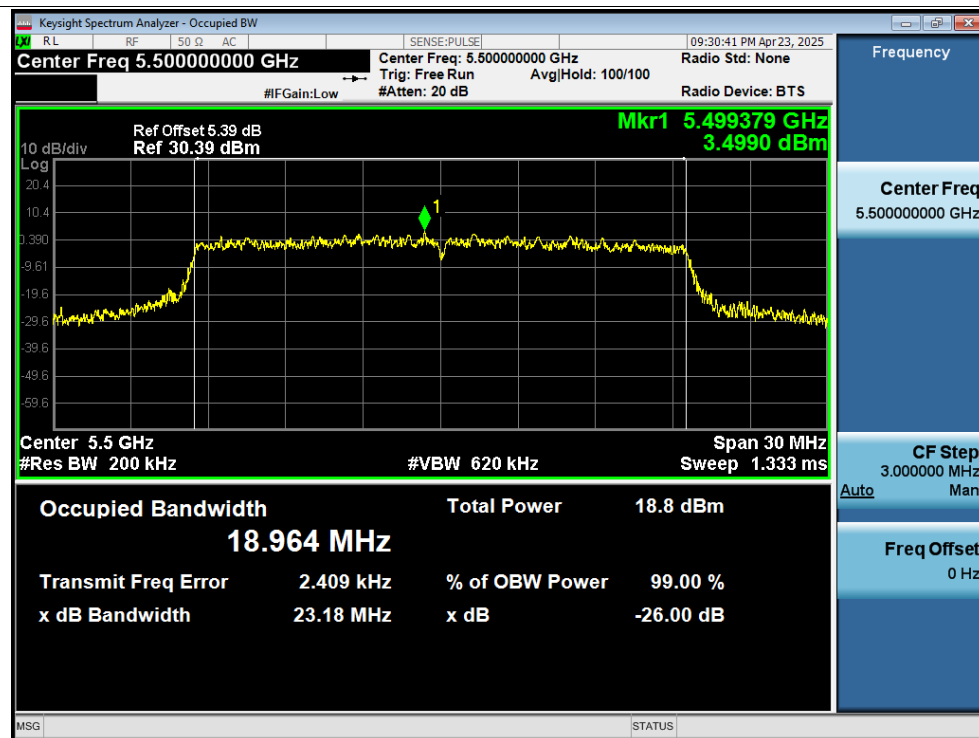

## OBW NVNT ax20 5600MHz Ant1

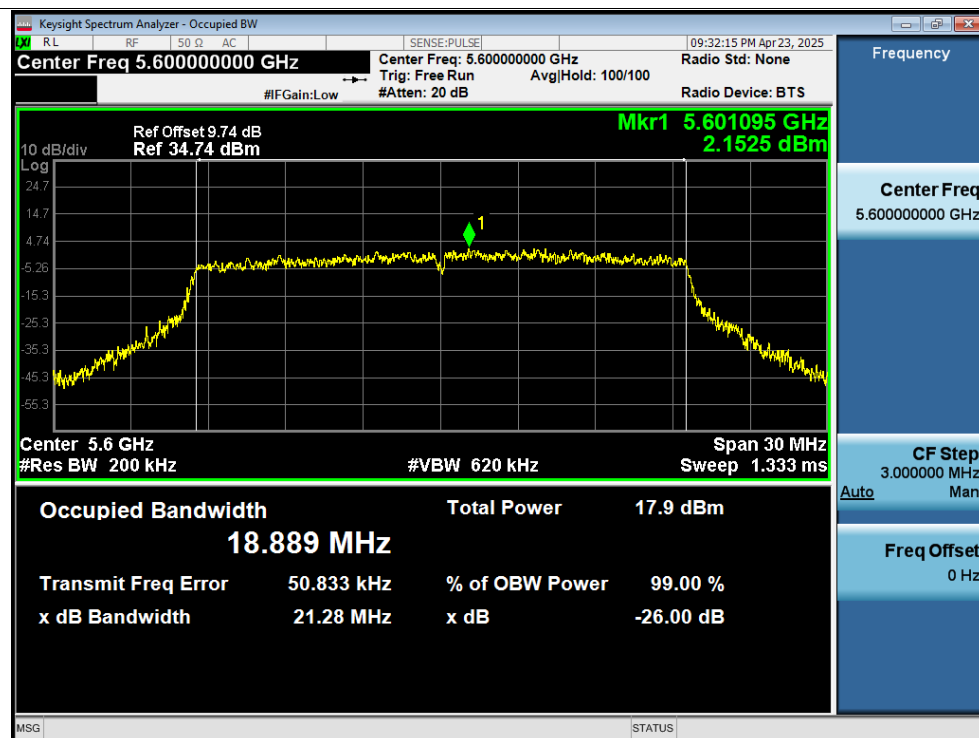 


## OBW NVNT ax20 5600MHz Ant2

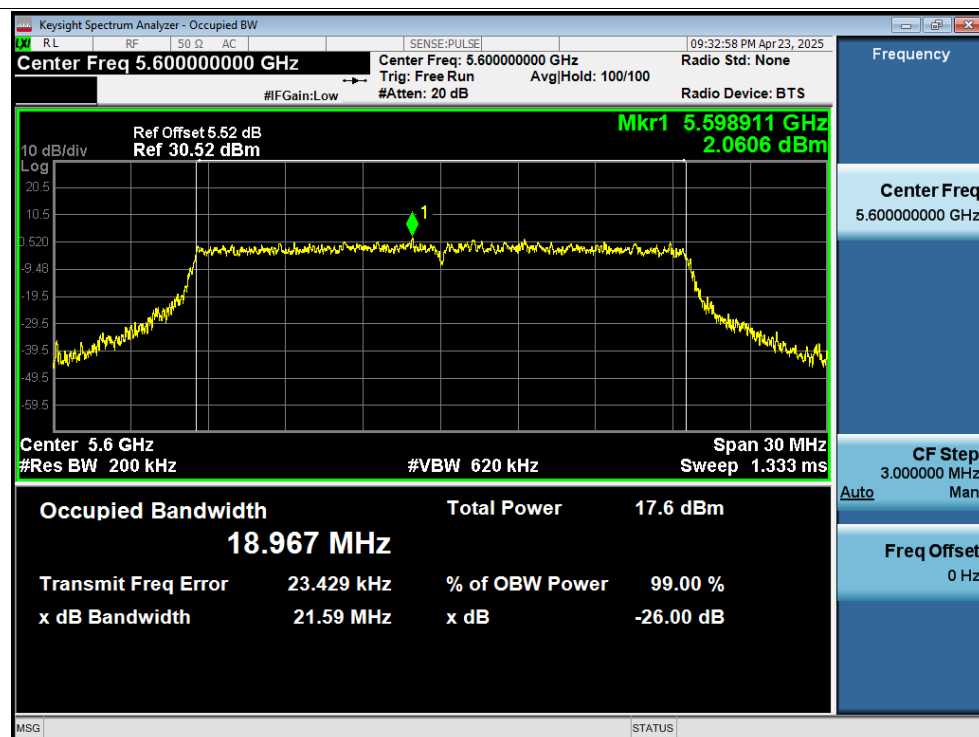 


## OBW NVNT ax20 5600MHz Ant3



 
## OBW NVNT ax20 5700MHz Ant1

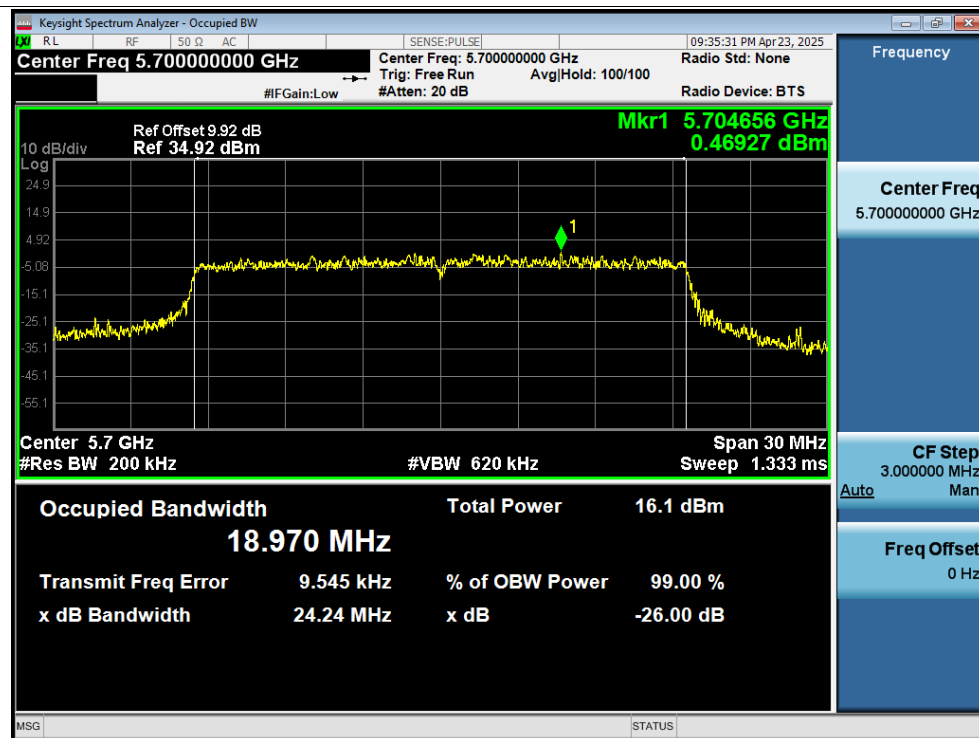

## OBW NVNT ax20 5700MHz Ant2

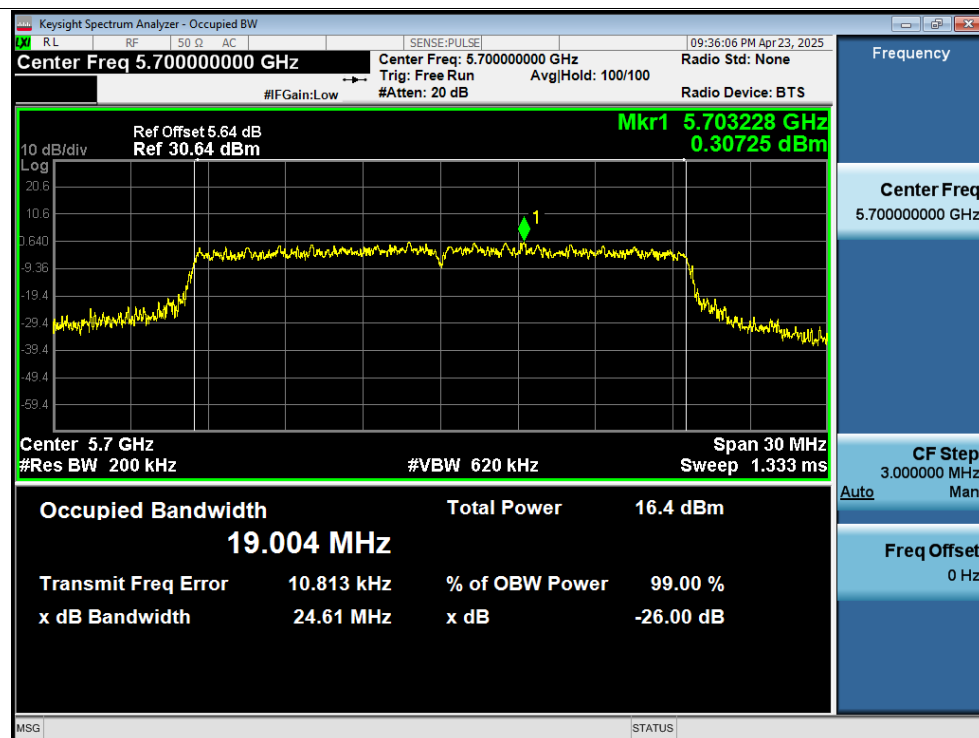 


## OBW NVNT ax20 5700MHz Ant3

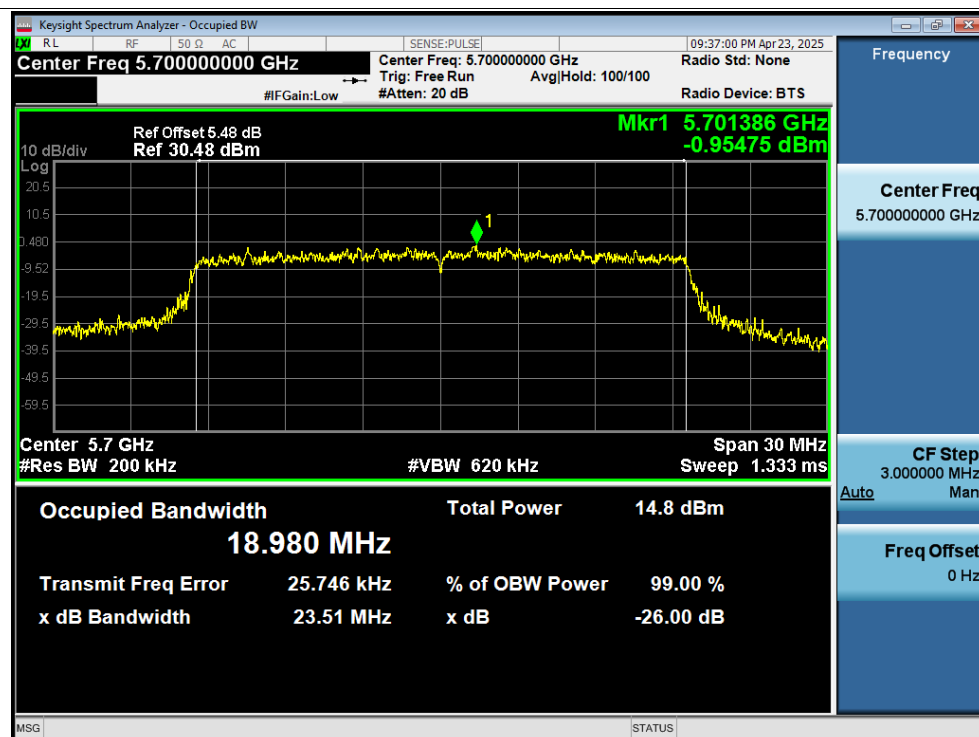 





## OBW NVNT ax20 5745MHz Ant1

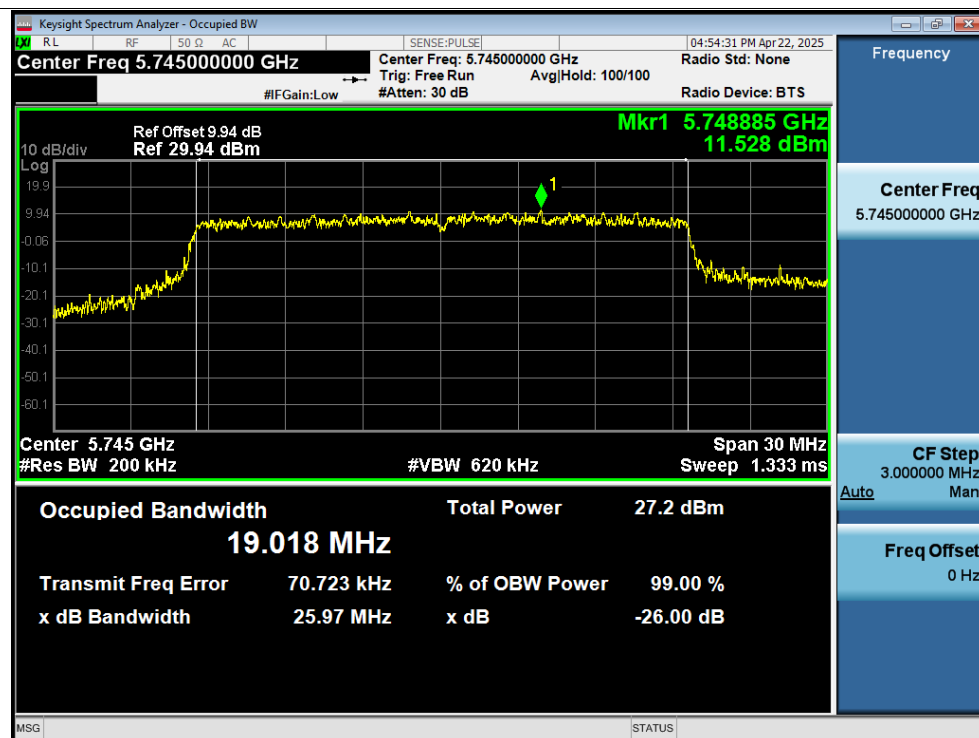 


## OBW NVNT ax20 5745MHz Ant2

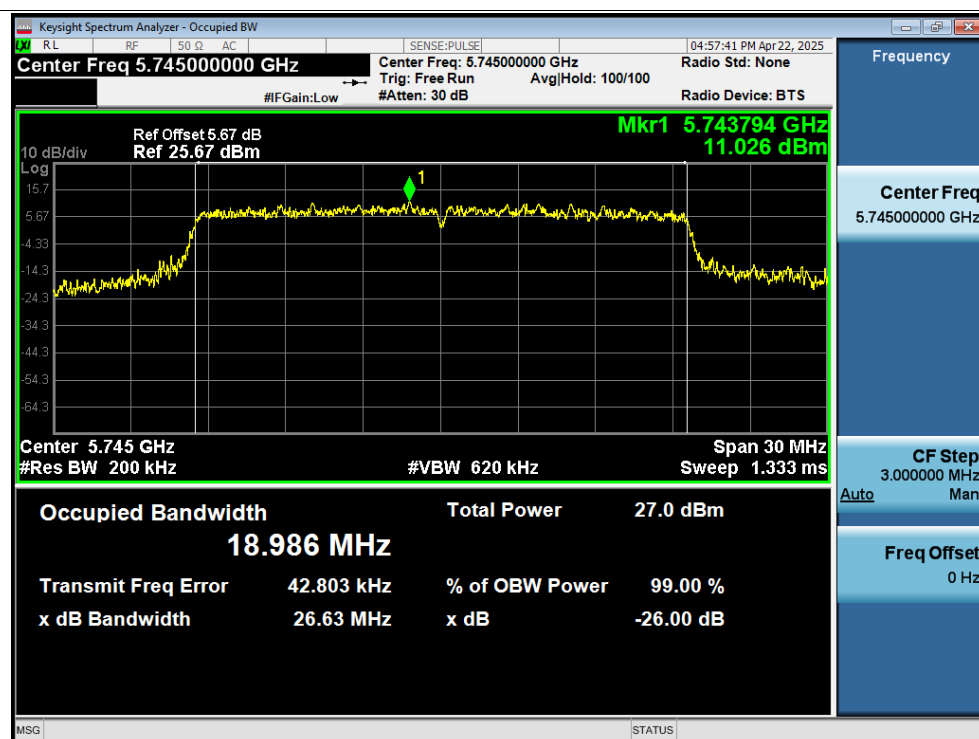 


## OBW NVNT ax20 5745MHz Ant3

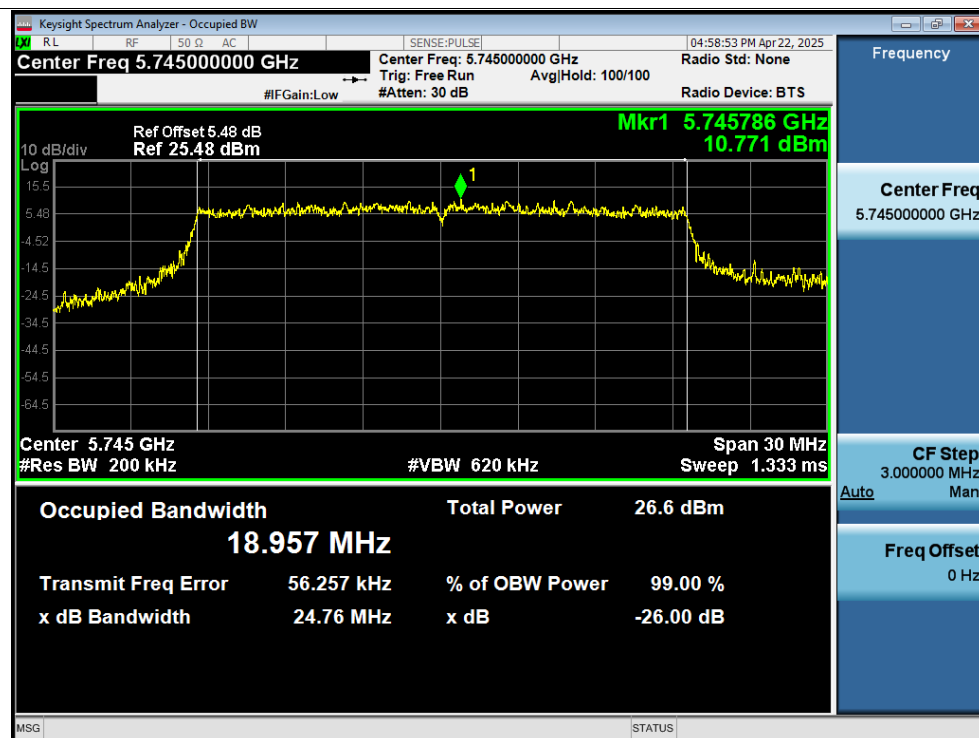 


## OBW NVNT ax20 5785MHz Ant1

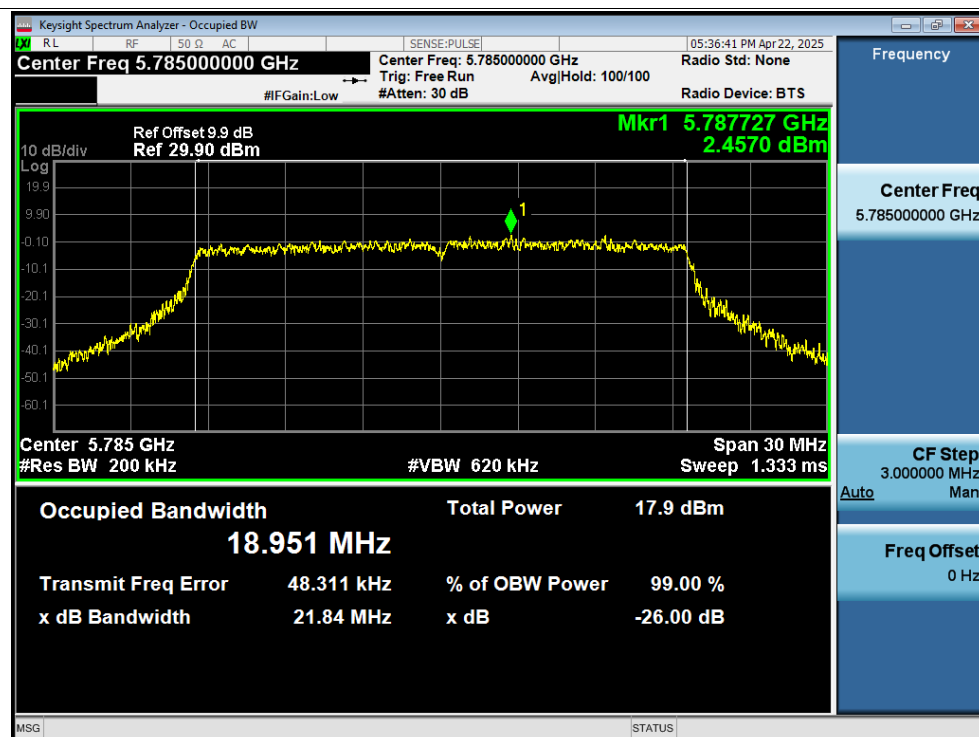 


## OBW NVNT ax20 5785MHz Ant2

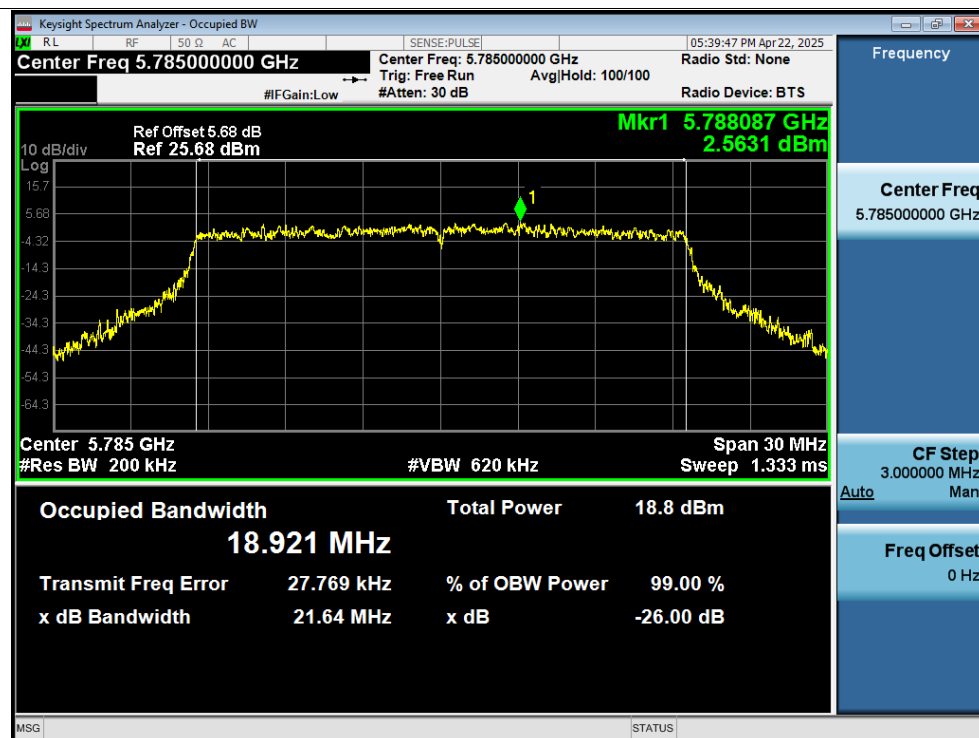 


## OBW NVNT ax20 5785MHz Ant3

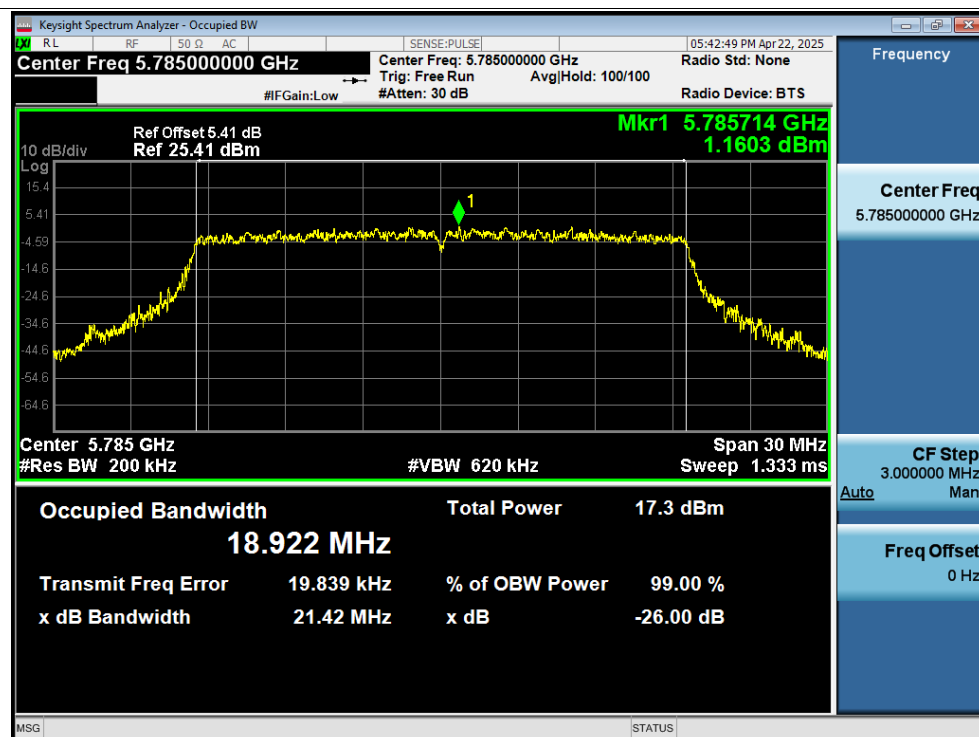 


## OBW NVNT ax20 5825MHz Ant1

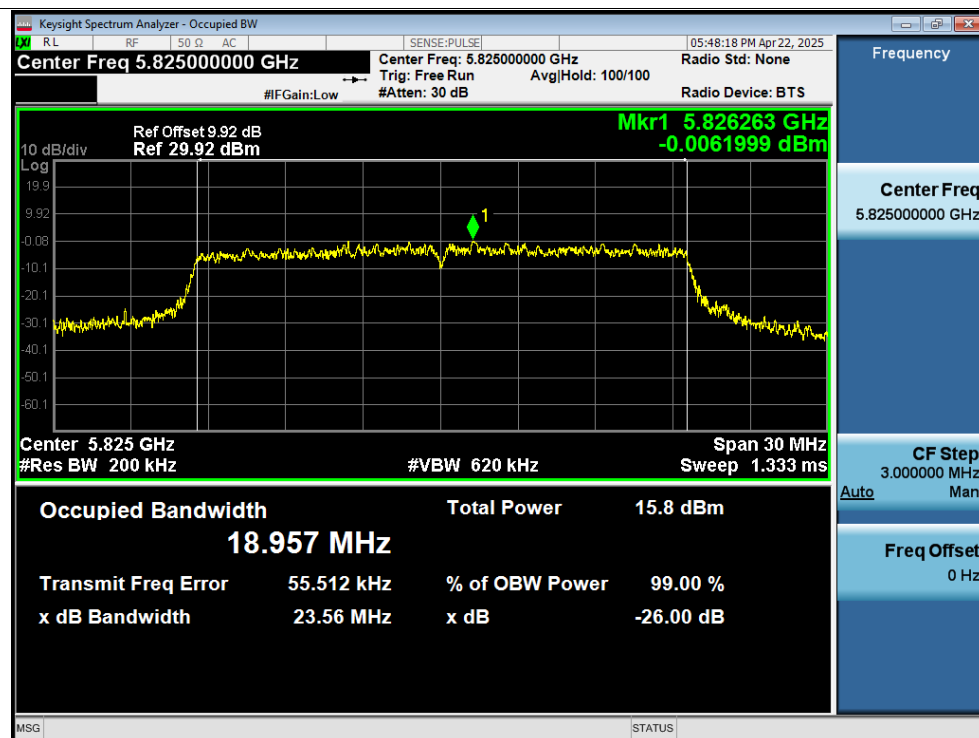 


## OBW NVNT ax20 5825MHz Ant2

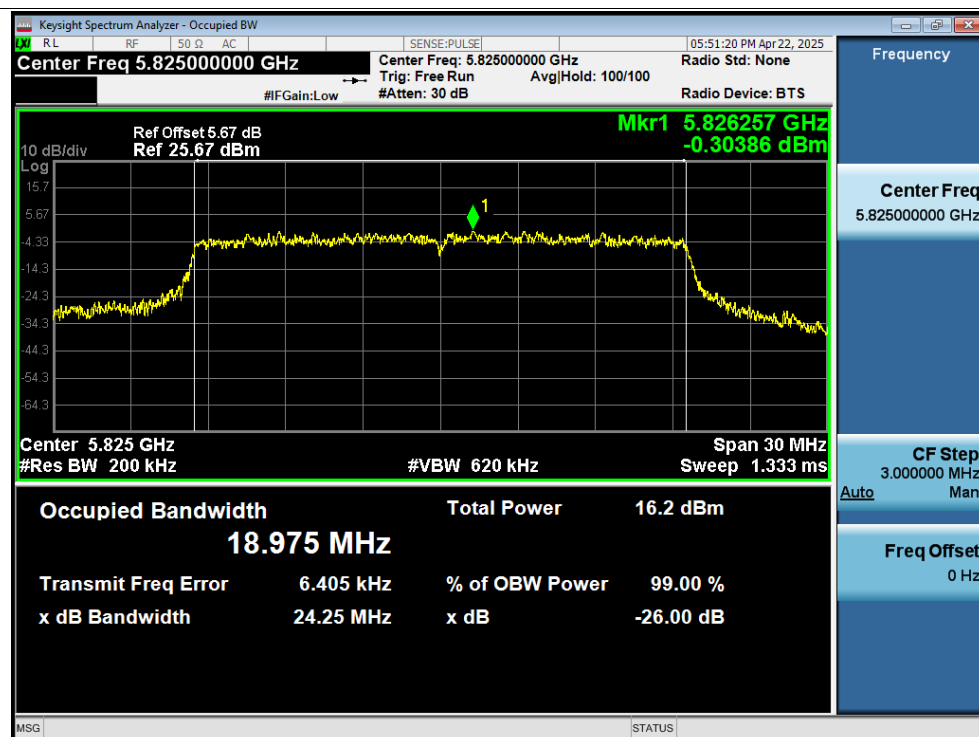 

## OBW NVNT ax20 5825MHz Ant3

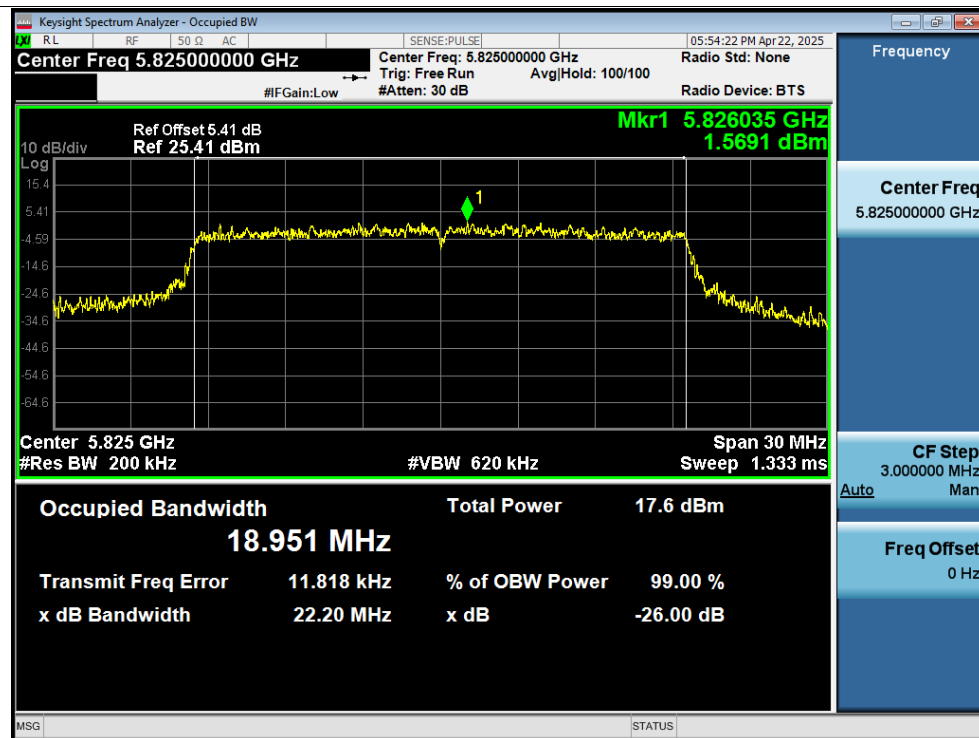 

## OBW NVNT ax40 5190MHz Ant1

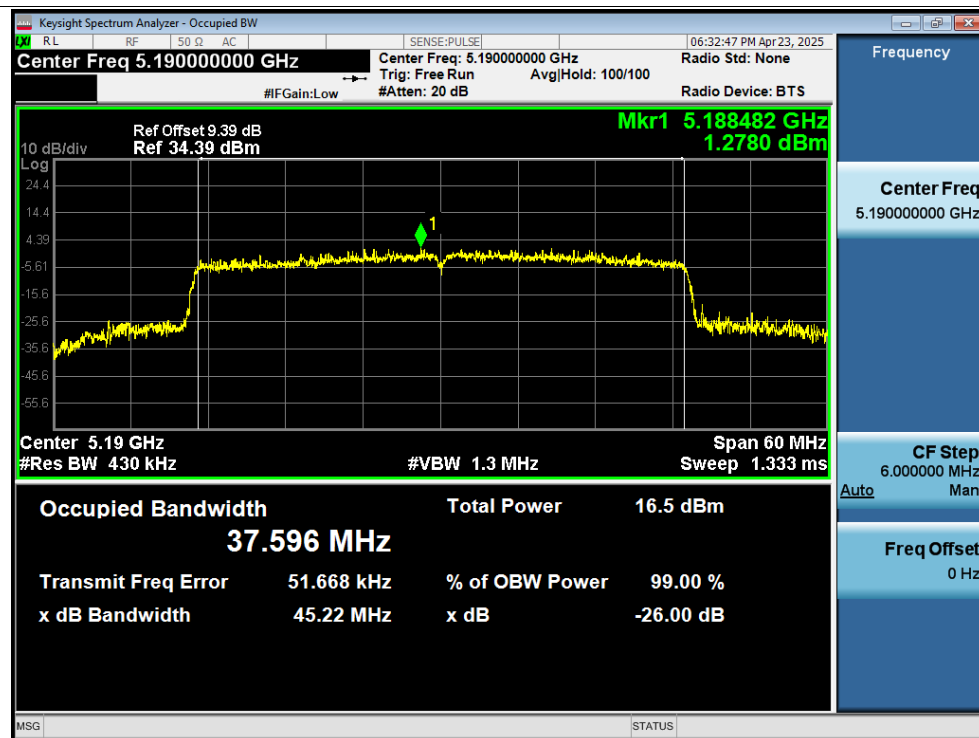 


## OBW NVNT ax40 5190MHz Ant2




## OBW NVNT ax40 5190MHz Ant3



 
## OBW NVNT ax40 5230MHz Ant1

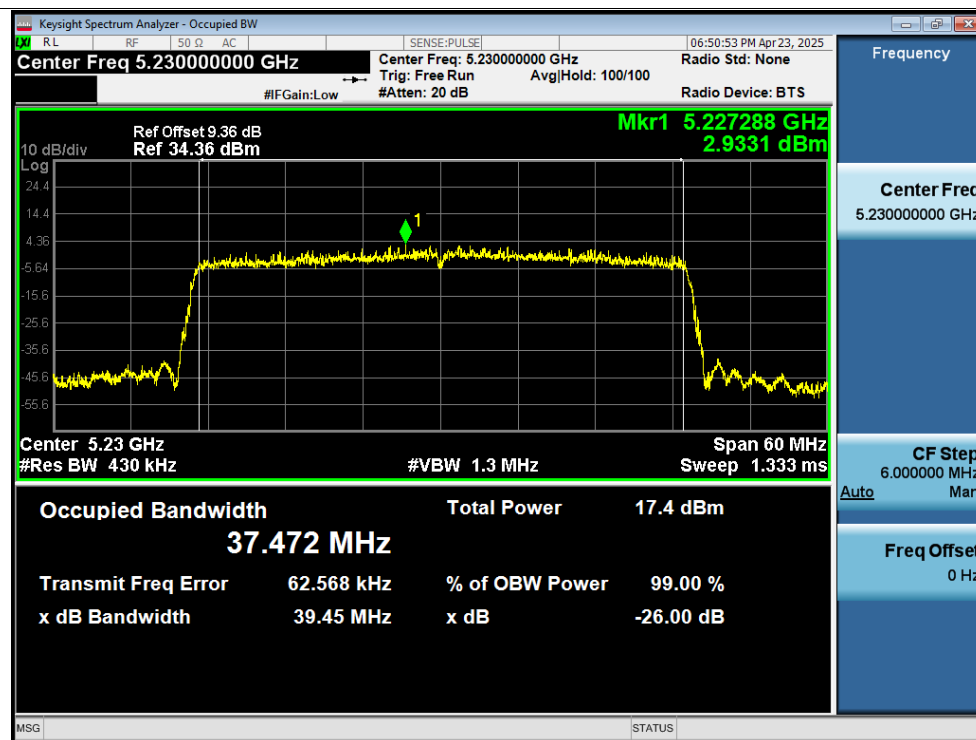


## OBW NVNT ax40 5230MHz Ant2

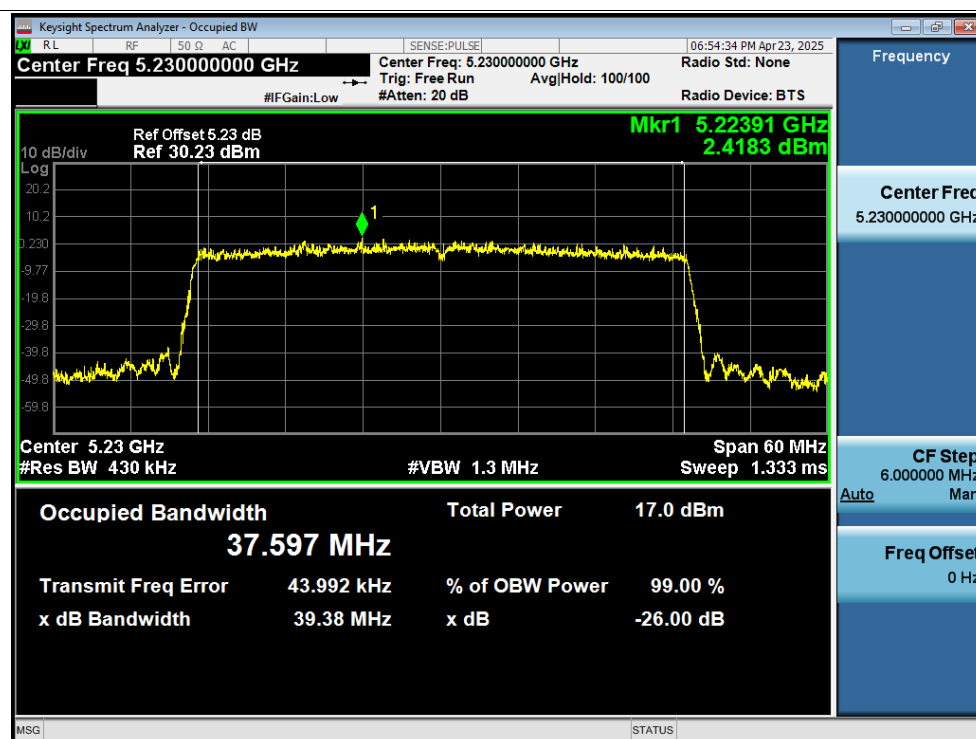 

## OBW NVNT ax40 5230MHz Ant3

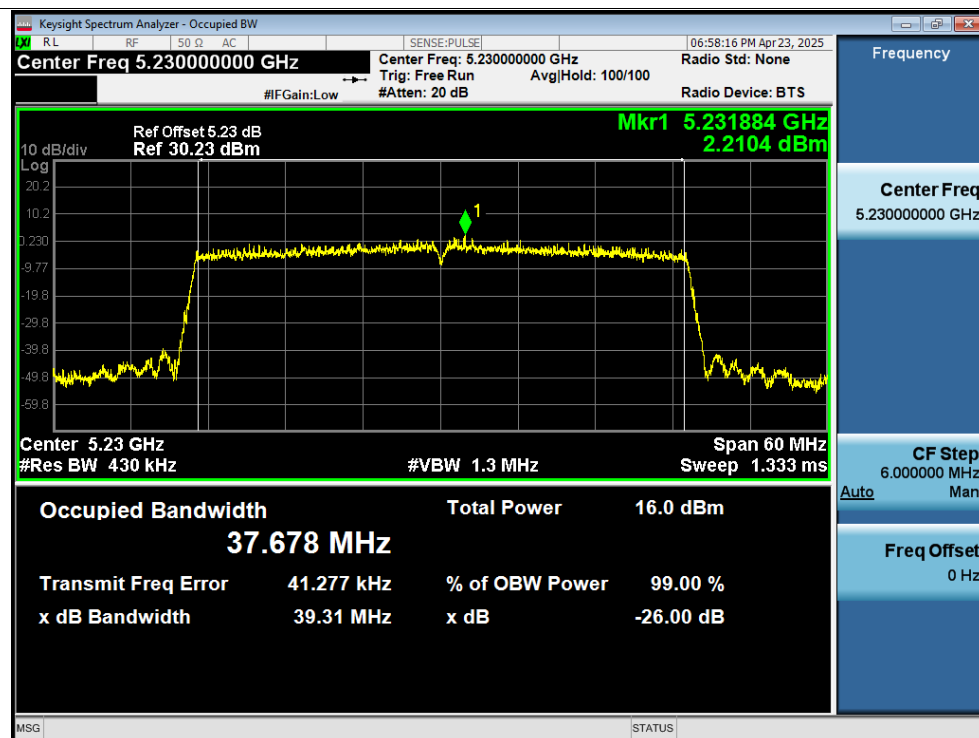 


## OBW NVNT ax40 5270MHz Ant1

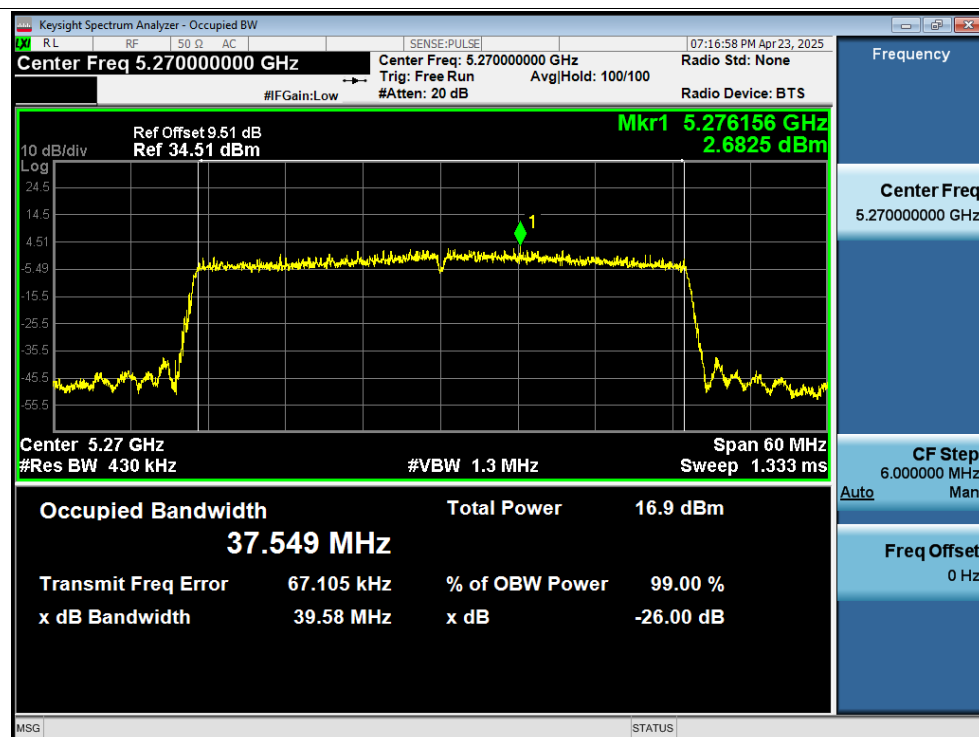 





## OBW NVNT ax40 5270MHz Ant2

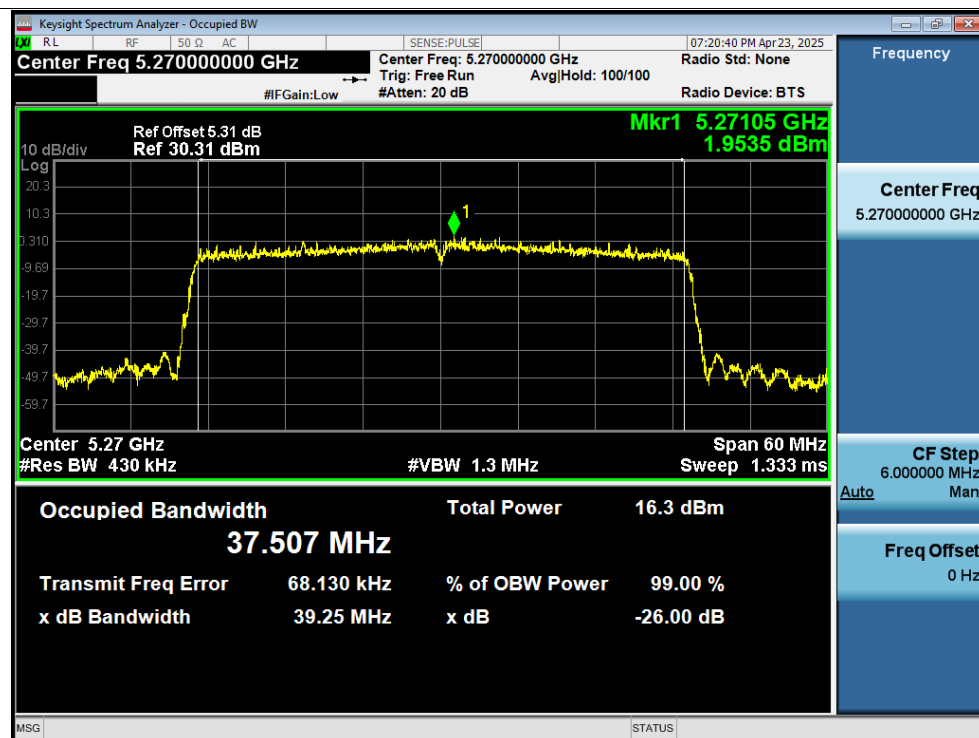 


## OBW NVNT ax40 5270MHz Ant3

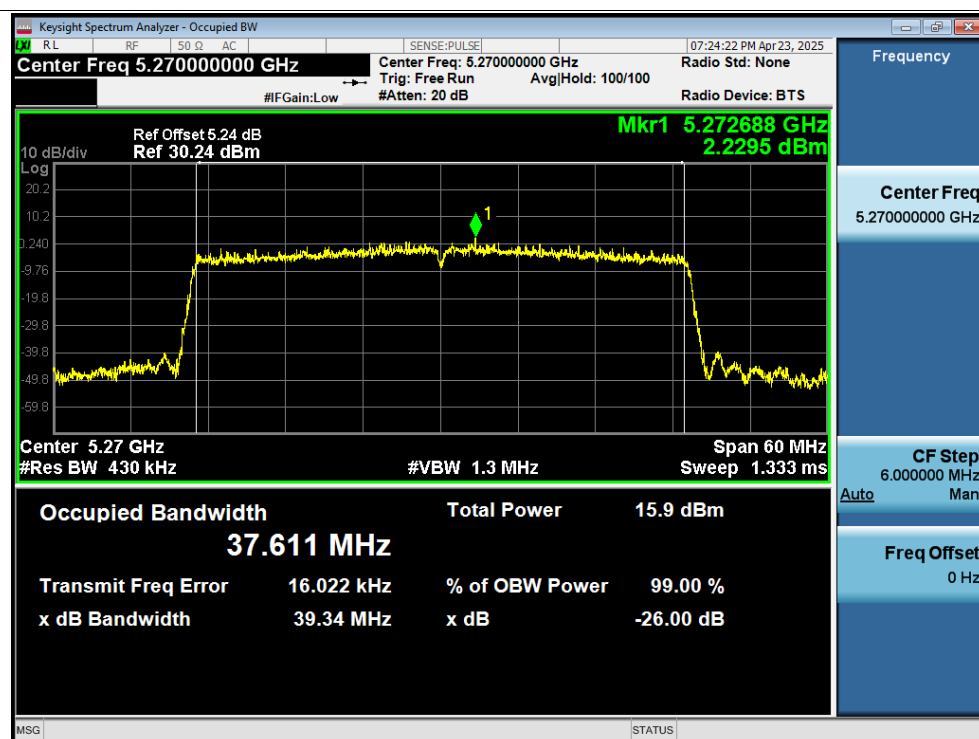 

## OBW NVNT ax40 5310MHz Ant1

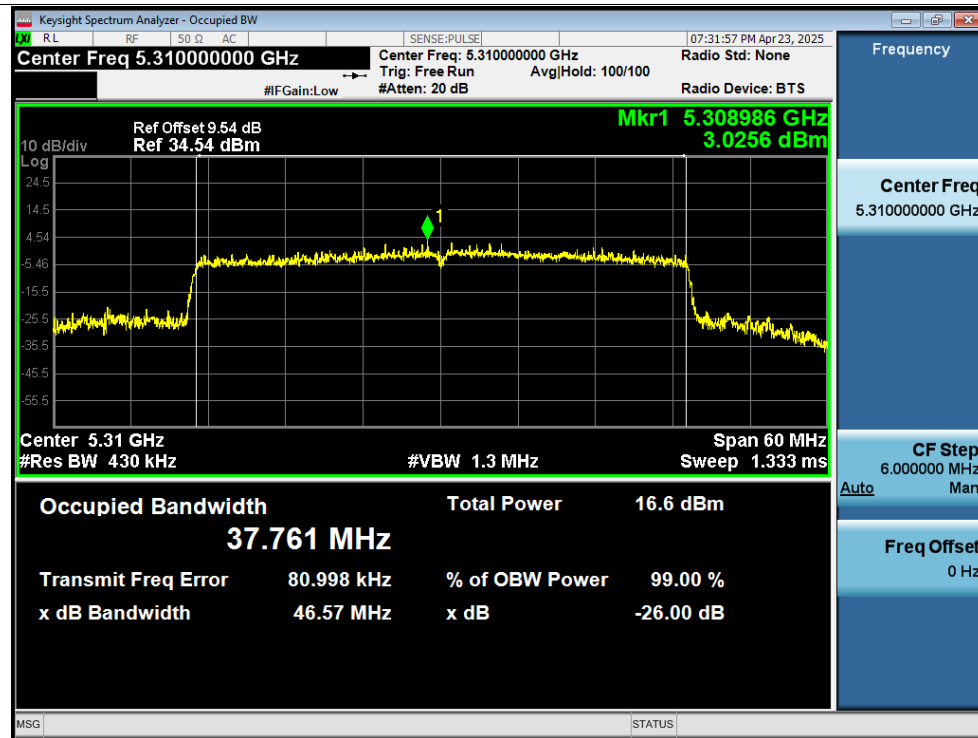 


## OBW NVNT ax40 5310MHz Ant2

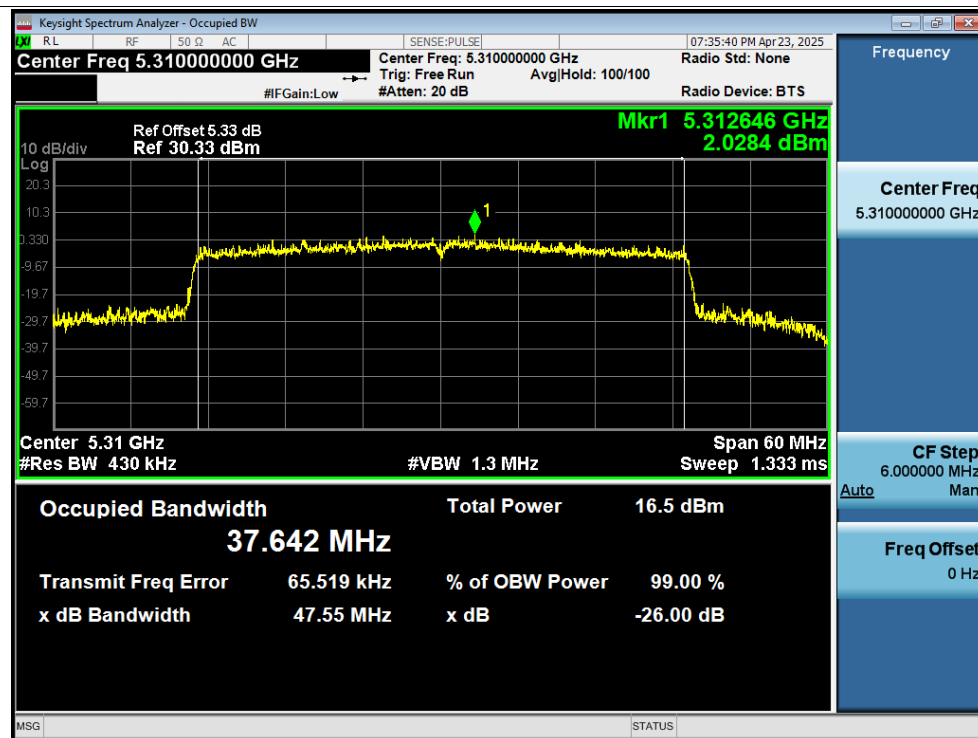 

## OBW NVNT ax40 5310MHz Ant3



 
## OBW NVNT ax40 5510MHz Ant1

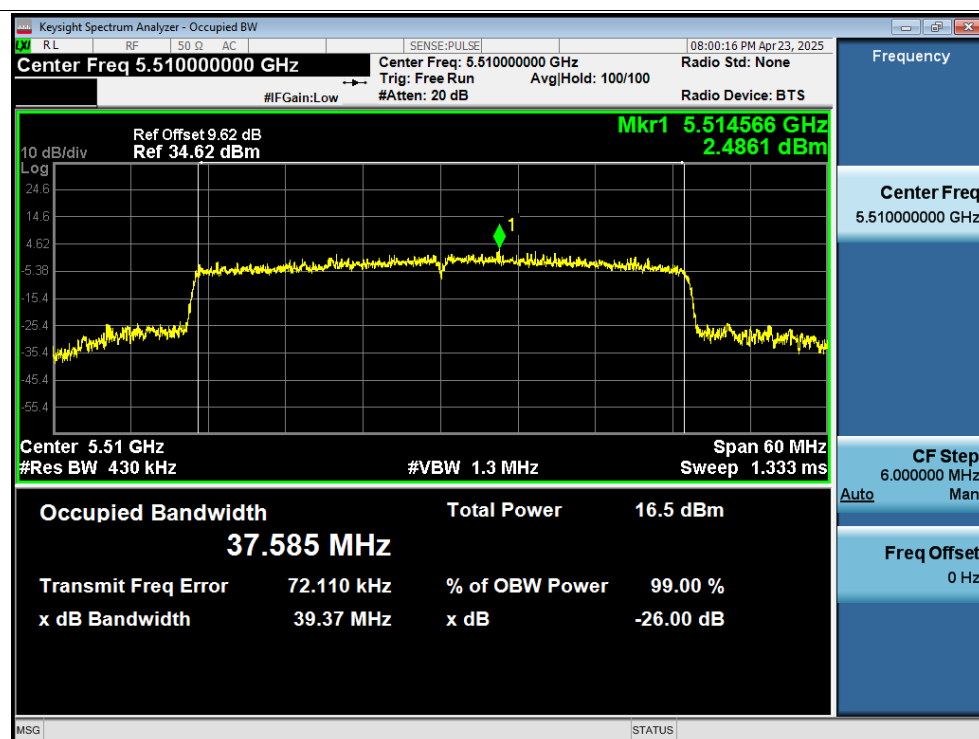


## OBW NVNT ax40 5510MHz Ant2



 
## OBW NVNT ax40 5510MHz Ant3

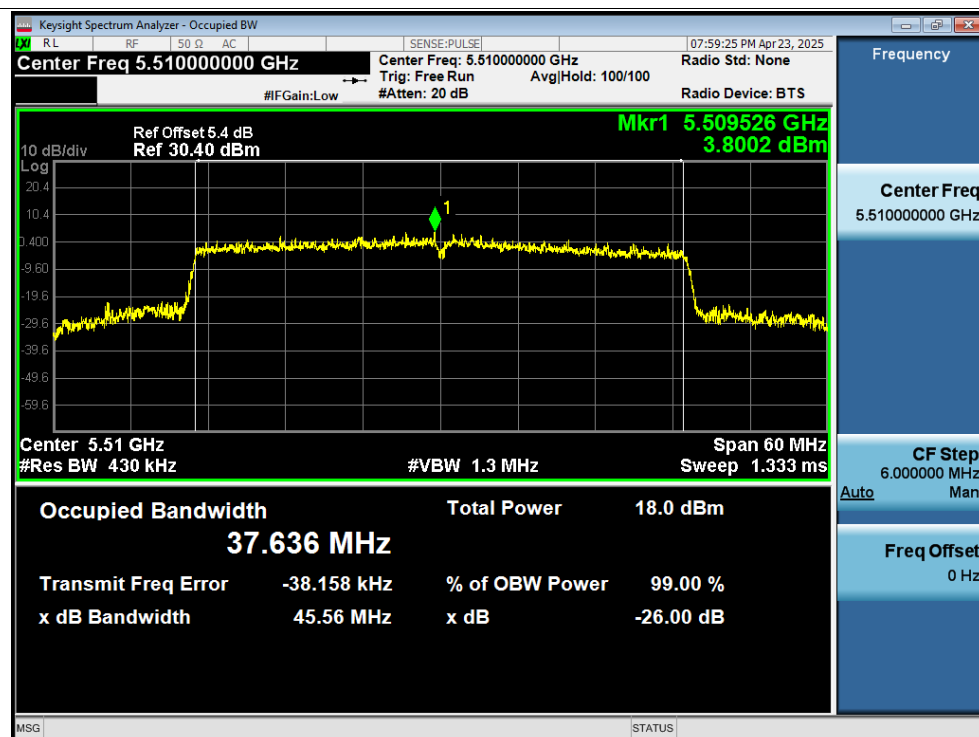

## OBW NVNT ax40 5590MHz Ant1

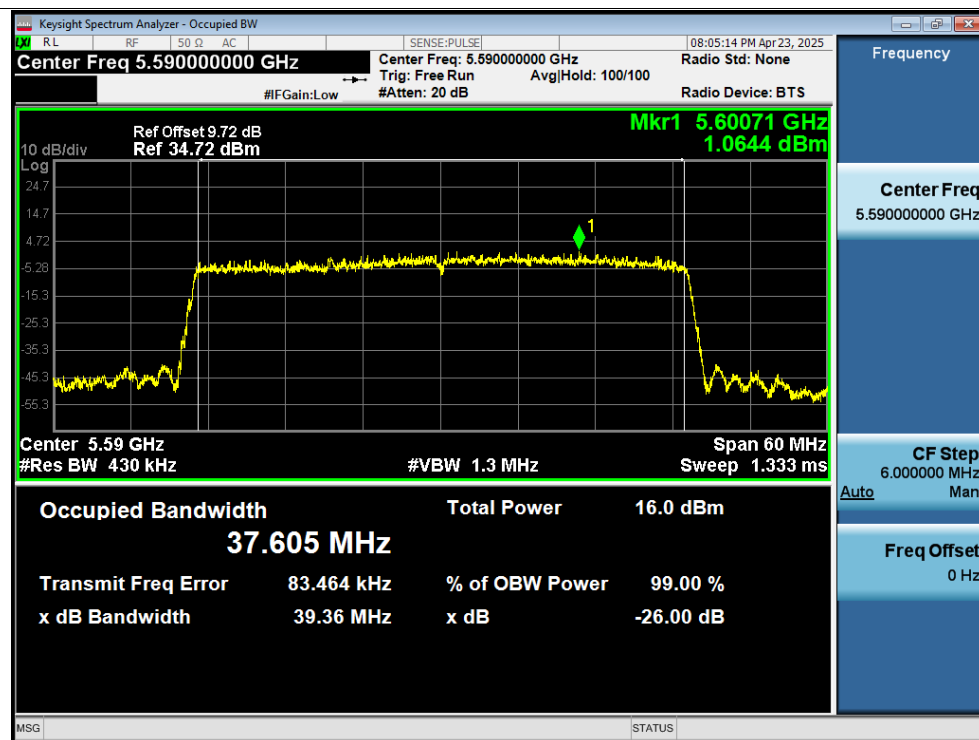 


## OBW NVNT ax40 5590MHz Ant2

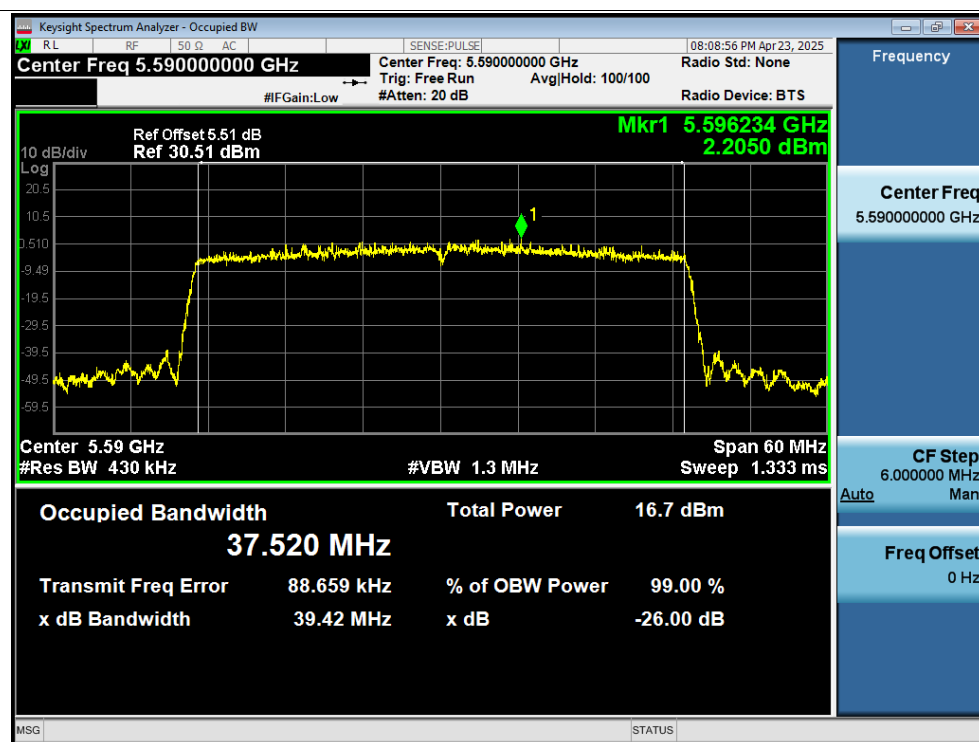 


## OBW NVNT ax40 5590MHz Ant3


 
## OBW NVNT ax40 5670MHz Ant1

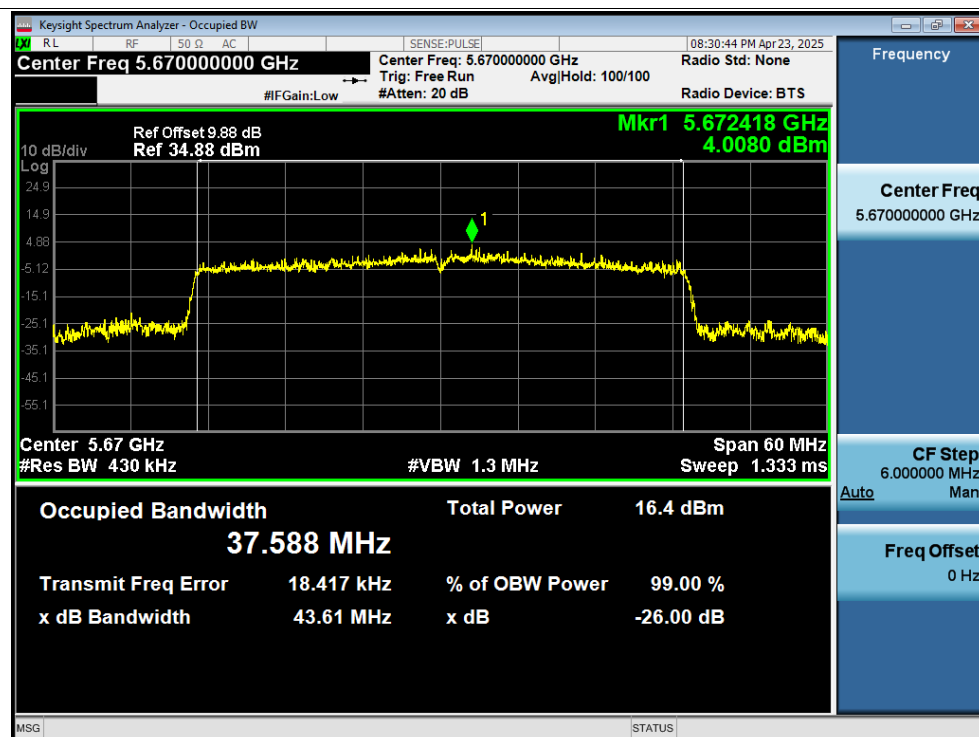


## OBW NVNT ax40 5670MHz Ant2

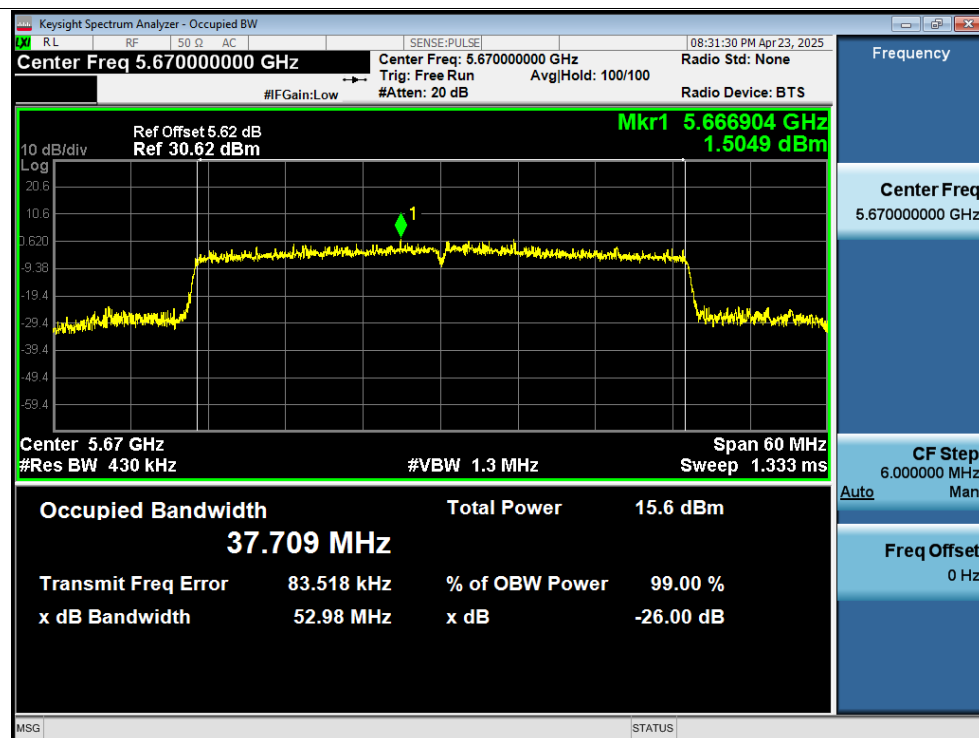 


## OBW NVNT ax40 5670MHz Ant3


 
## OBW NVNT ax40 5755MHz Ant1

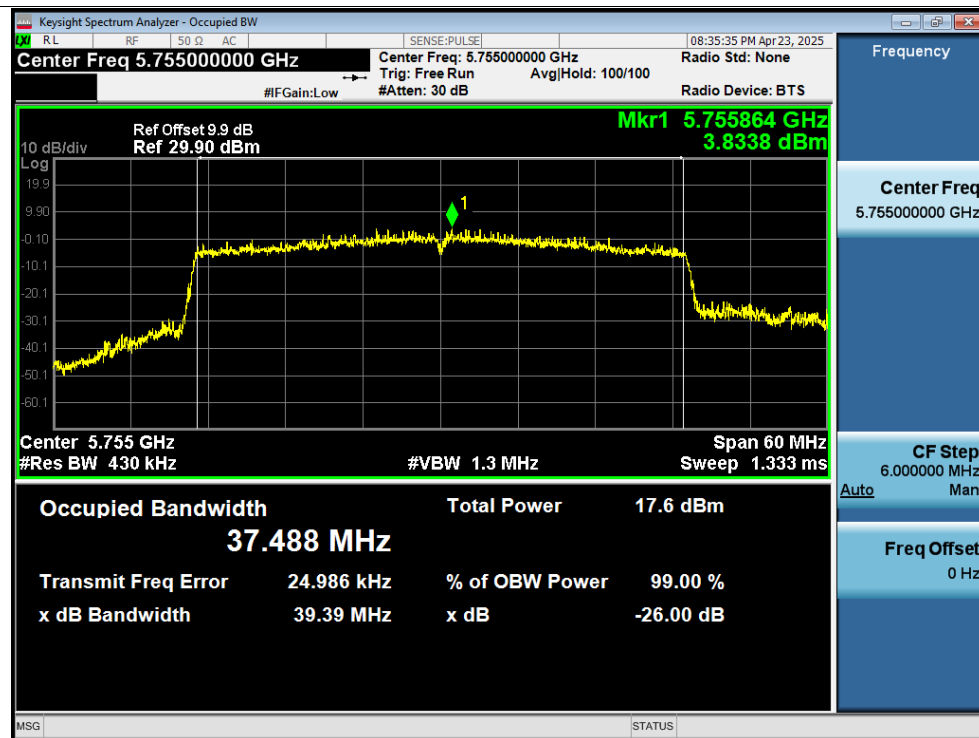


## OBW NVNT ax40 5755MHz Ant2

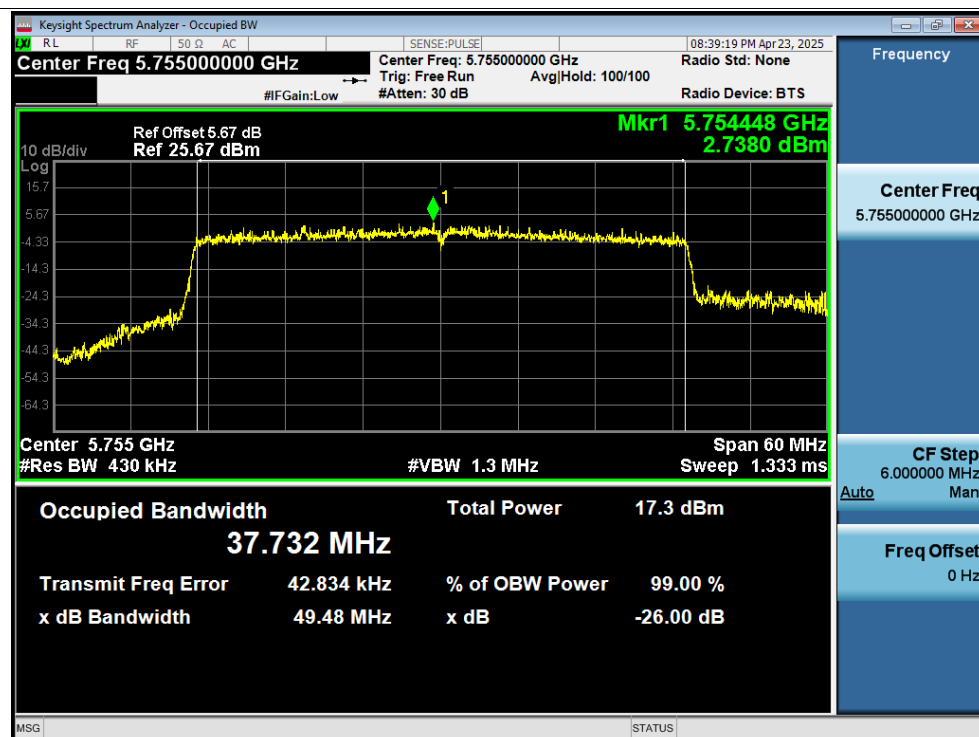 





## OBW NVNT ax40 5755MHz Ant3

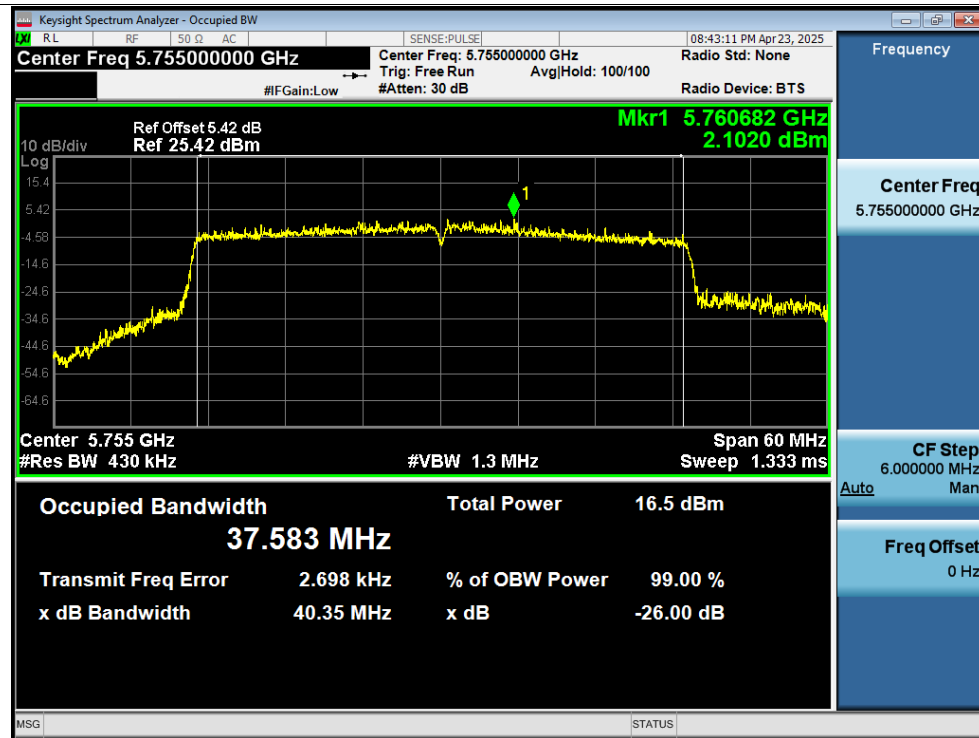 


## OBW NVNT ax40 5795MHz Ant1

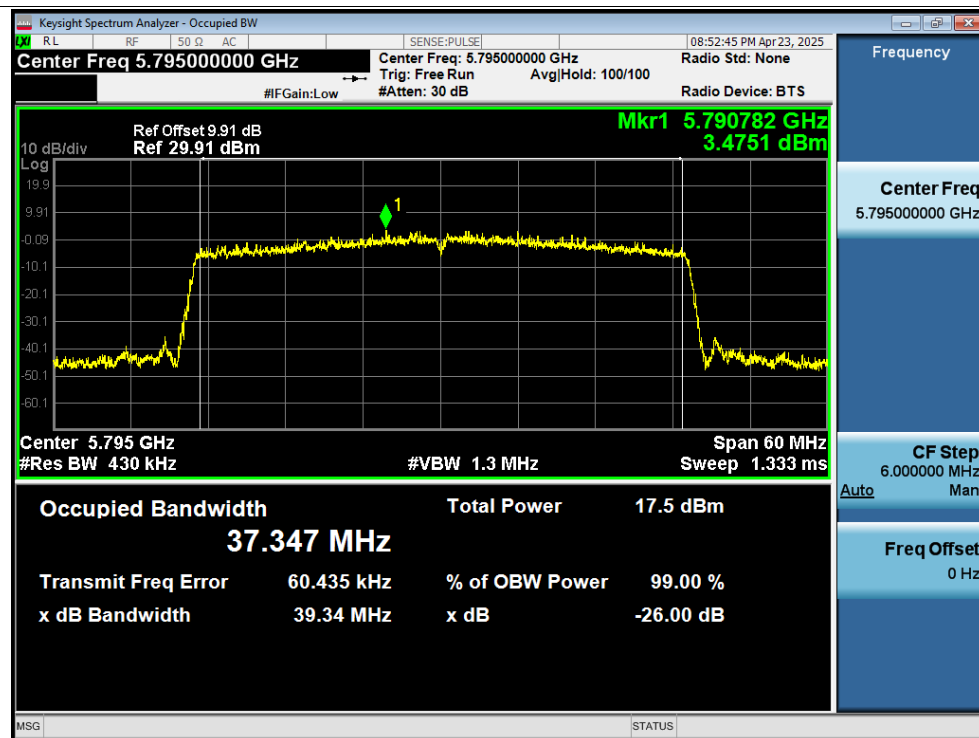 


## OBW NVNT ax40 5795MHz Ant2

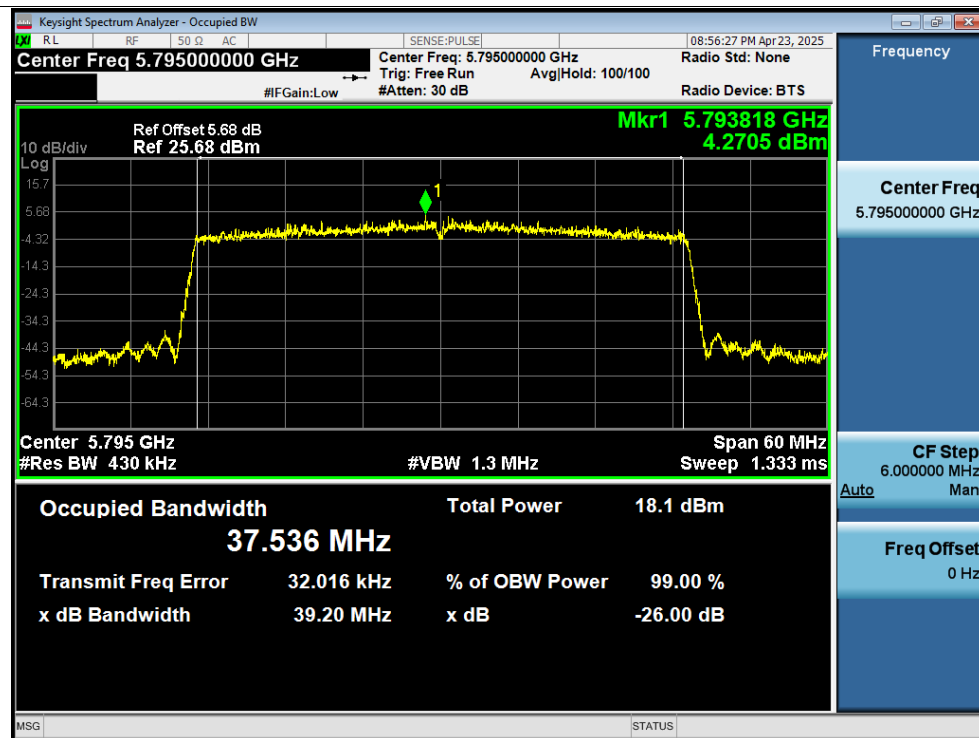 

## OBW NVNT ax40 5795MHz Ant3

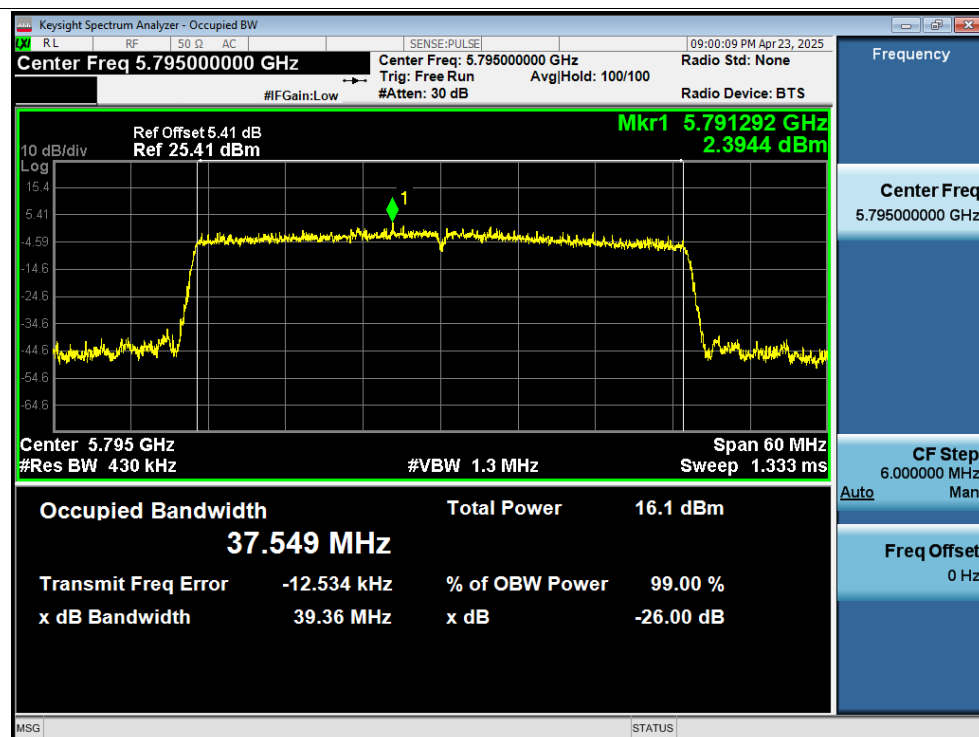 

## OBW NVNT ax80 5210MHz Ant1

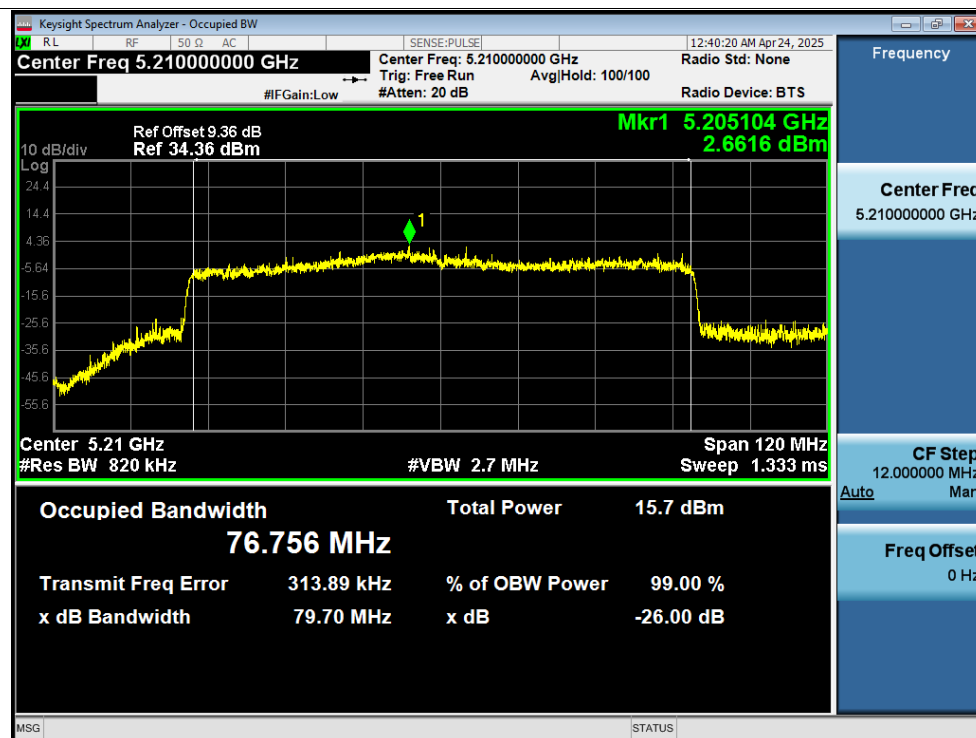 

## OBW NVNT ax80 5210MHz Ant2



## OBW NVNT ax80 5210MHz Ant3



## OBW NVNT ax80 5290MHz Ant1



 
## OBW NVNT ax80 5290MHz Ant2



## OBW NVNT ax80 5290MHz Ant3




## OBW NVNT ax80 5530MHz Ant1

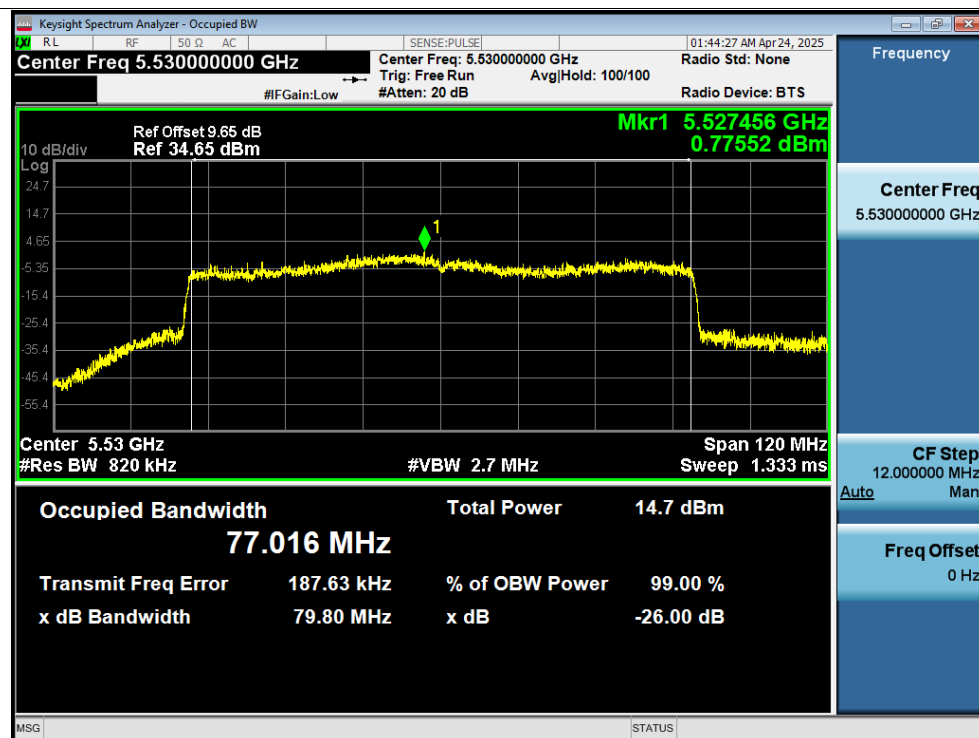

## OBW NVNT ax80 5530MHz Ant2


 
## OBW NVNT ax80 5530MHz Ant3

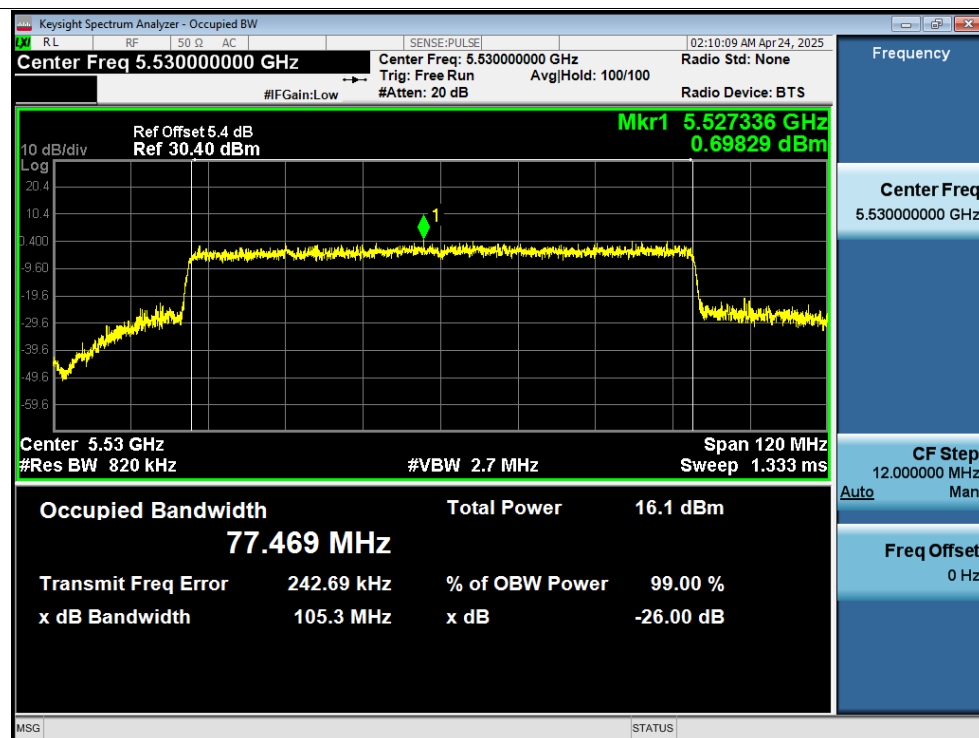

## OBW NVNT ax80 5610MHz Ant1

