




USE AND CARE GUIDE

USA Item 1010749793
Canada Item 1001852747
Model 24SV24171

7 FT SKELLY'S DOG WITH LIFEYEYES LCD EYES

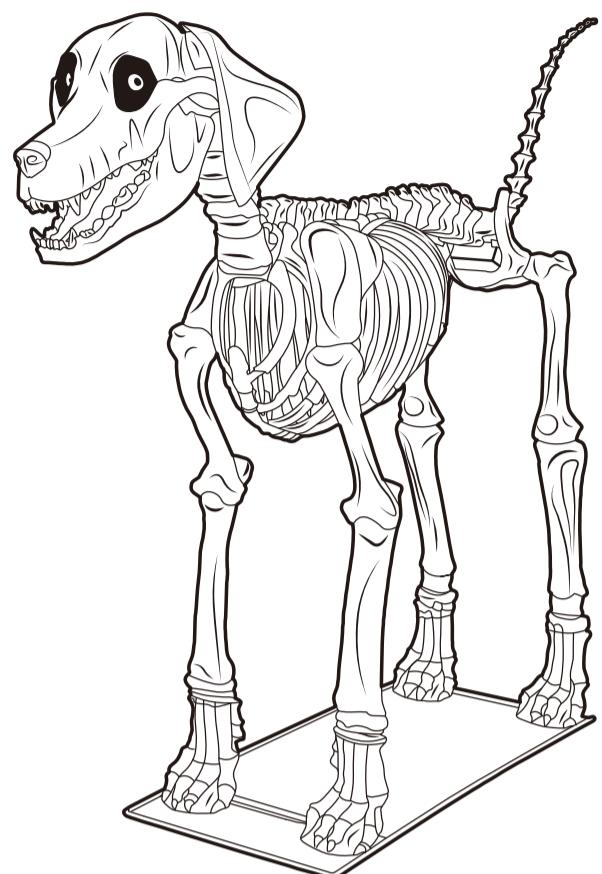


Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM

PARTS LIST

- A. Base x 1
- B. Back Right Paw x 1
- C. Back Left Paw x 1
- D. Front Right Paw x 1
- E. Front Left Paw x 1
- F. Front Right Leg x 1
- G. Front Left Leg x 1
- H. Back Right Leg x 1
- I. Back Left Leg x 1
- J. Chest x 1
- K. Lower Body x 1
- L. Upper Right Leg x 1
- M. Upper Left Leg x 1
- N. Neck x 1
- O. Head x 1
- P. Tail x 1
- Q. Polybag with Small Parts x 1
- R. Stakes x 4
- S. Adapter * x 1
- T. Remote Control x 1

Power Adapter * Spec
Input: 120V~50/60Hz
Output: 5.9V === 1.5A
Wattage: 8.85W




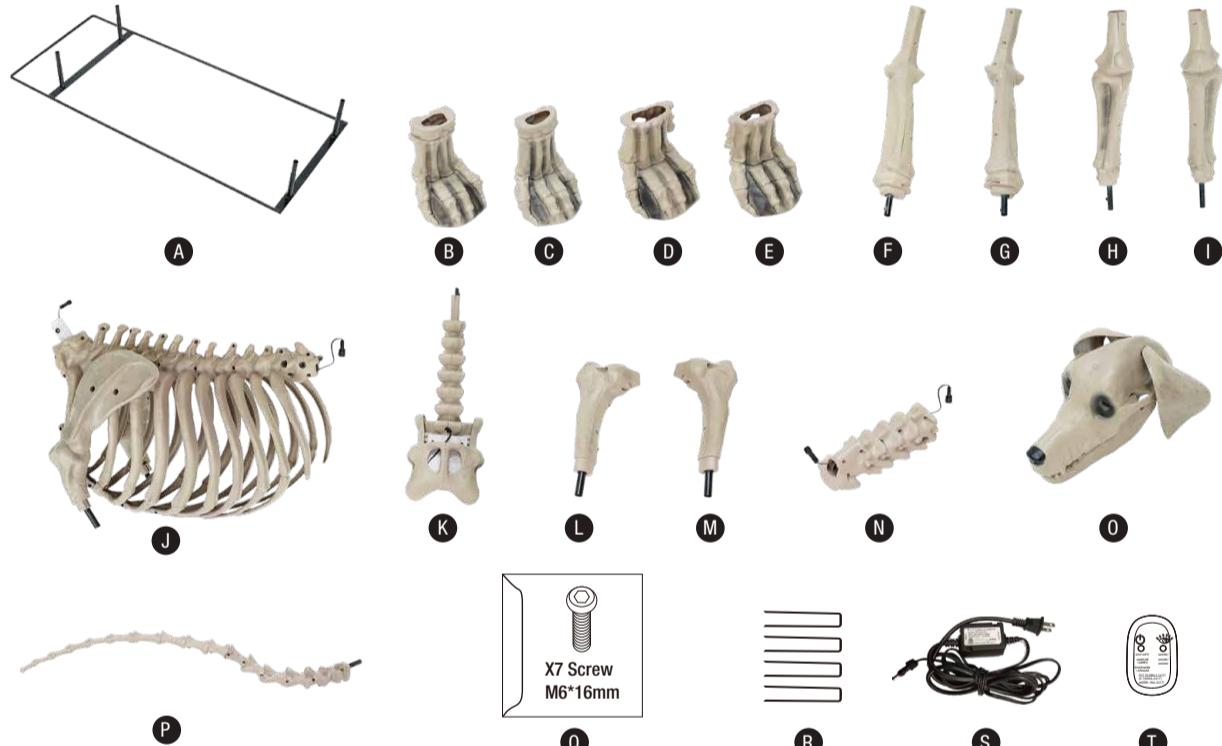


TOOLS REQUIRED



M5 hex wrench (included)

NOTE: Throughout the instructions, Right and Left are from the character's point of view.

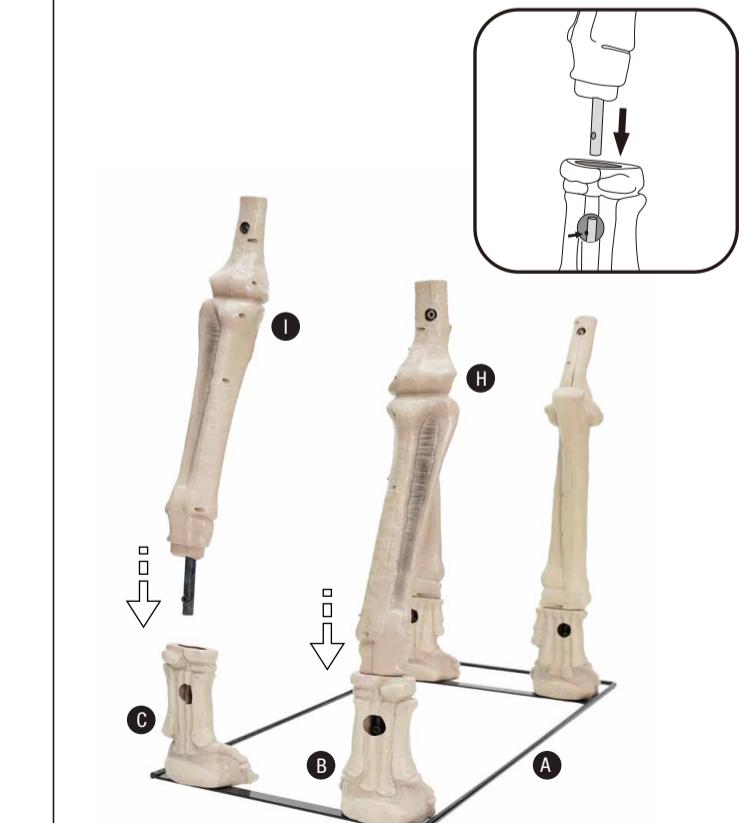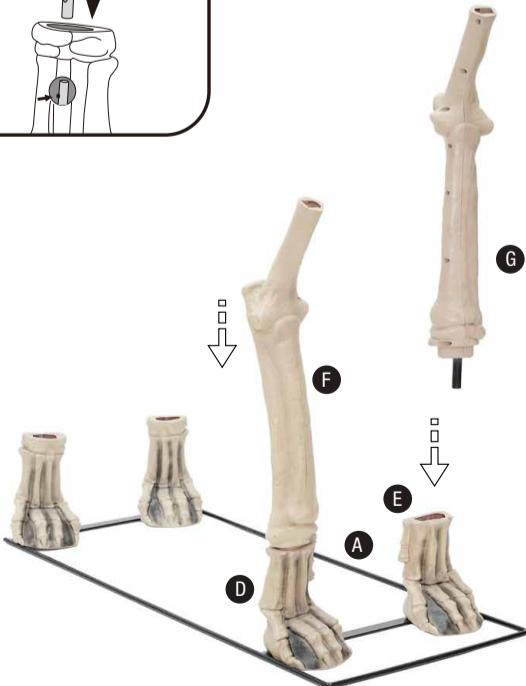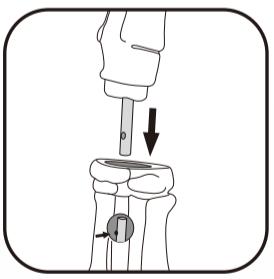
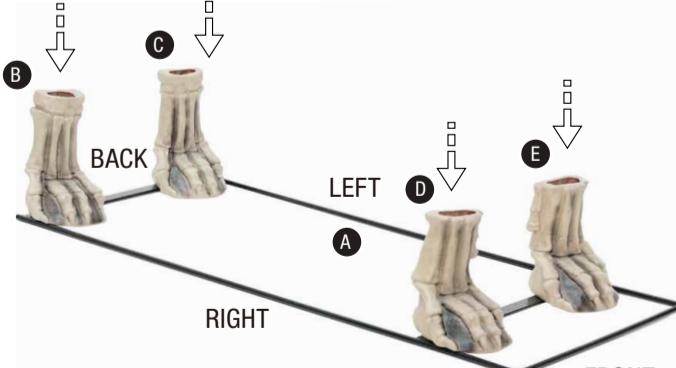


1.1

1.2


1.3

NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a tab by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.

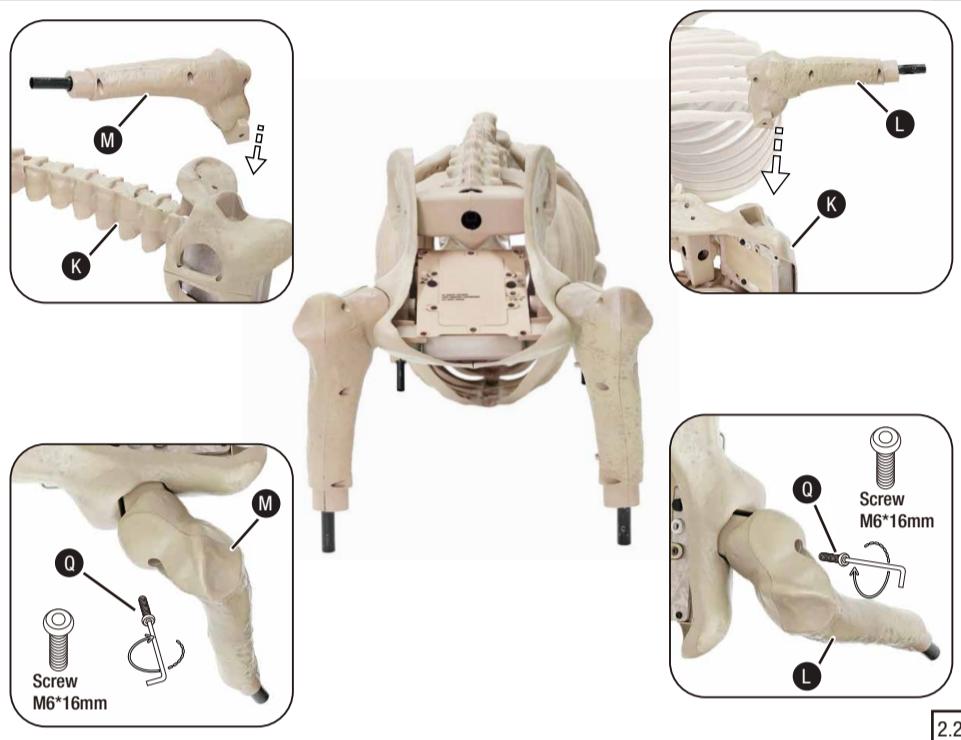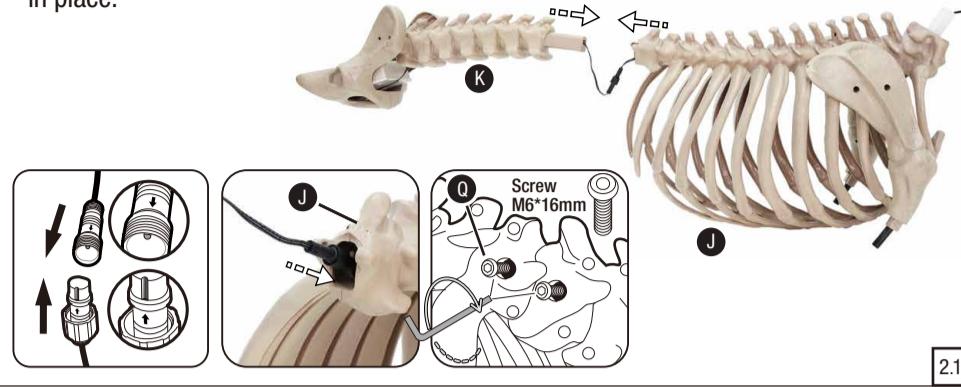


2.1


2.2

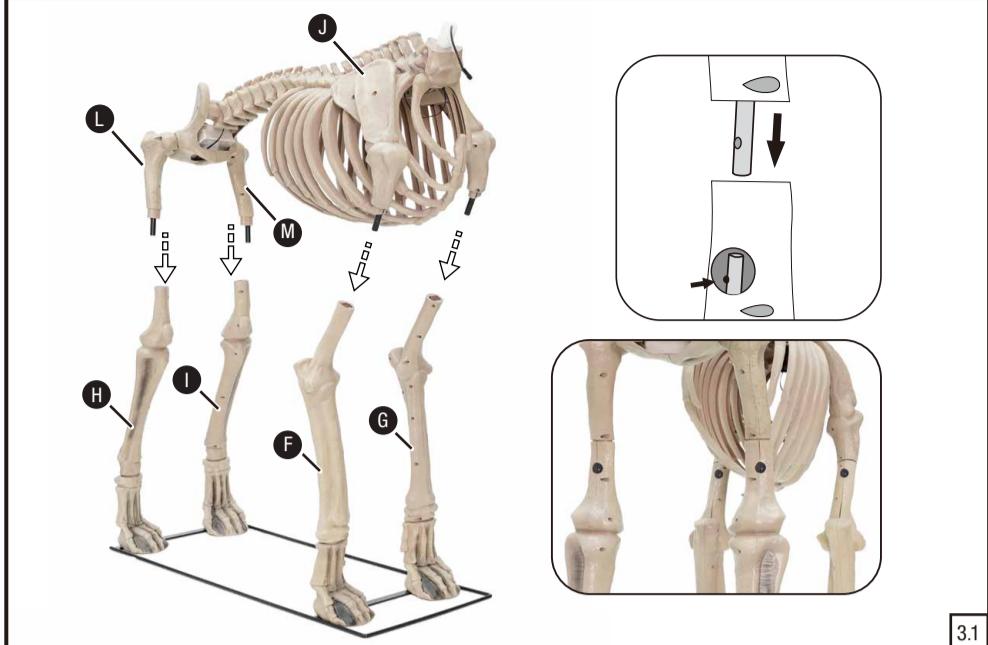


3.1

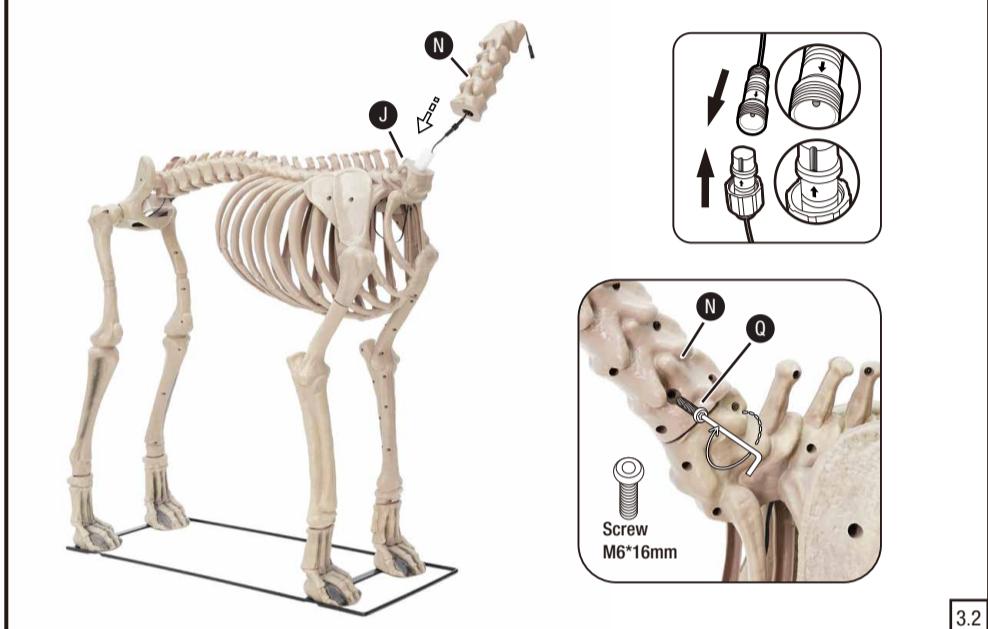

3.2

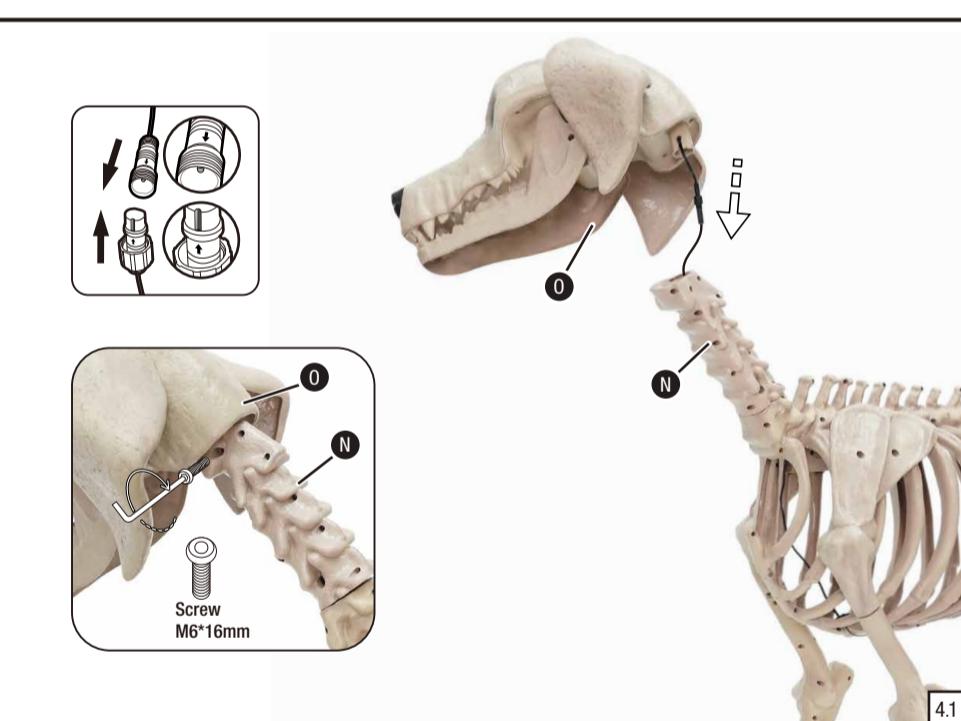


4.1

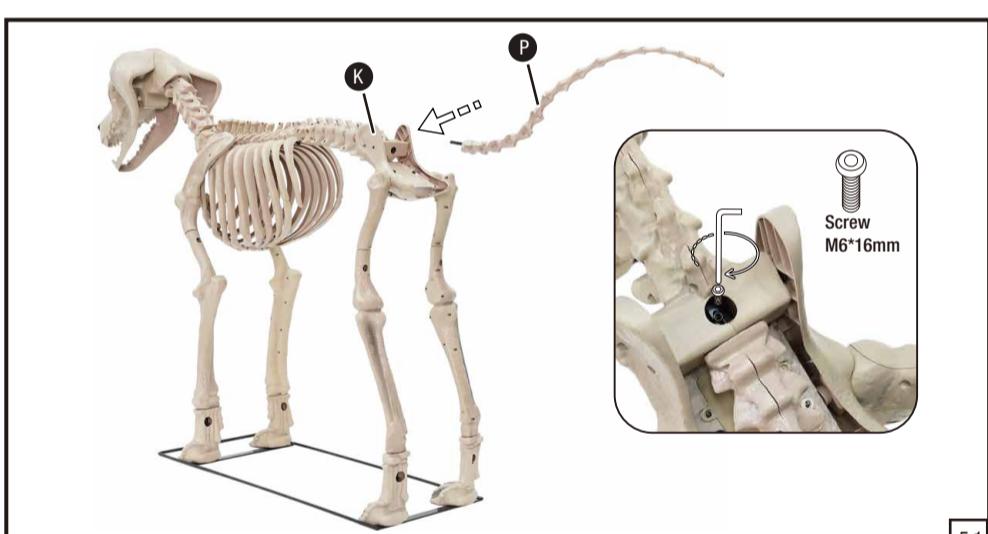


5.1

NOTE: When using the adapter while batteries are in the product, the power will be sourced from the adapter only. However, it is advised to remove the batteries from the product when using the adapter.

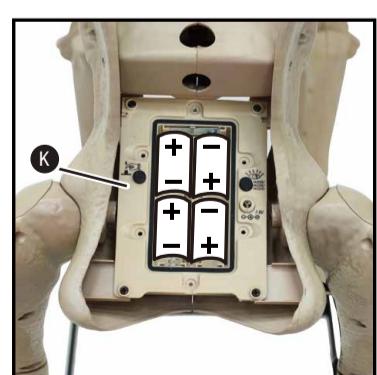


OR

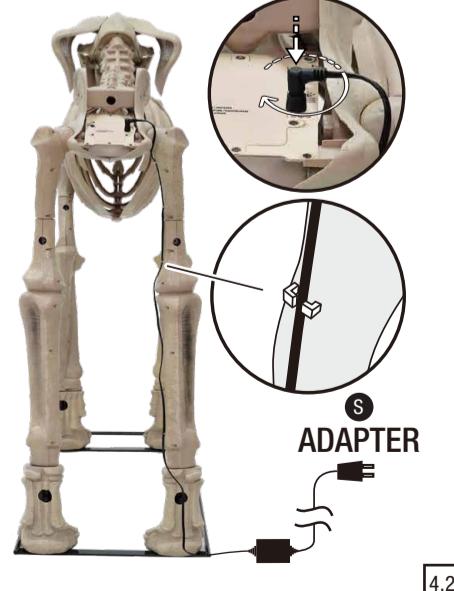


4.2

NOTE: Item can be operated with 4 x 1.5V C batteries or adapter.

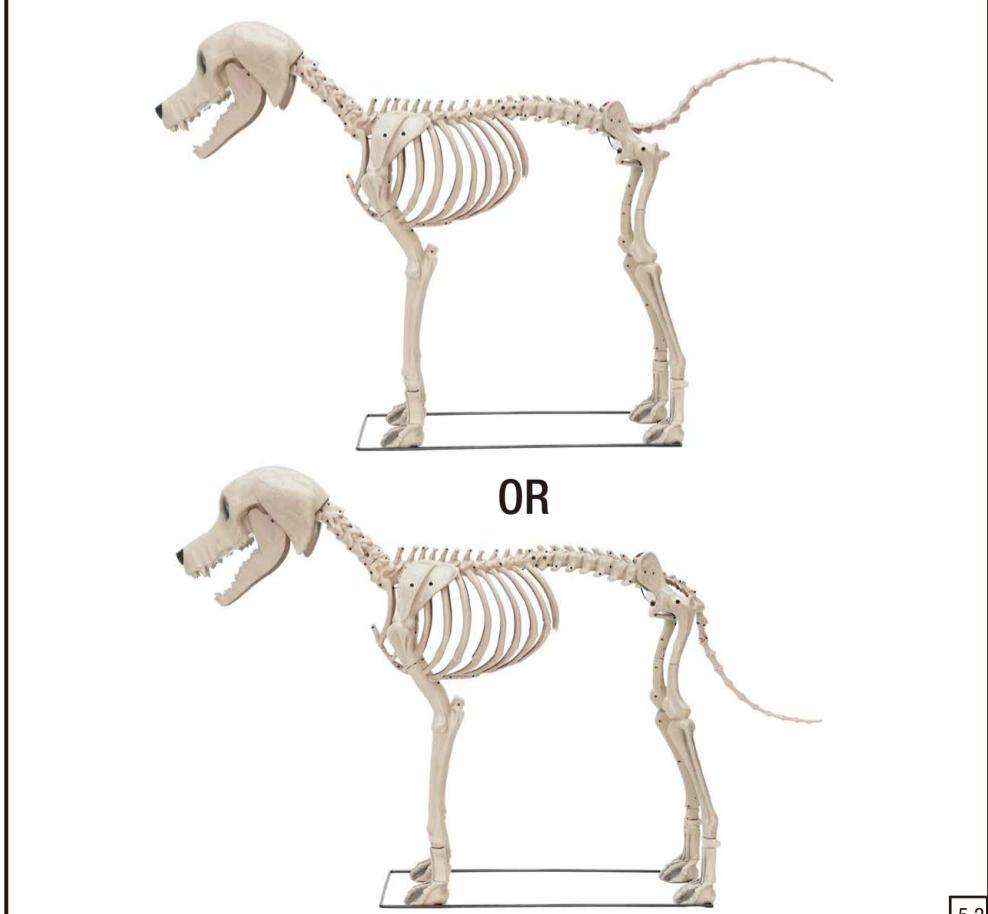

5.2

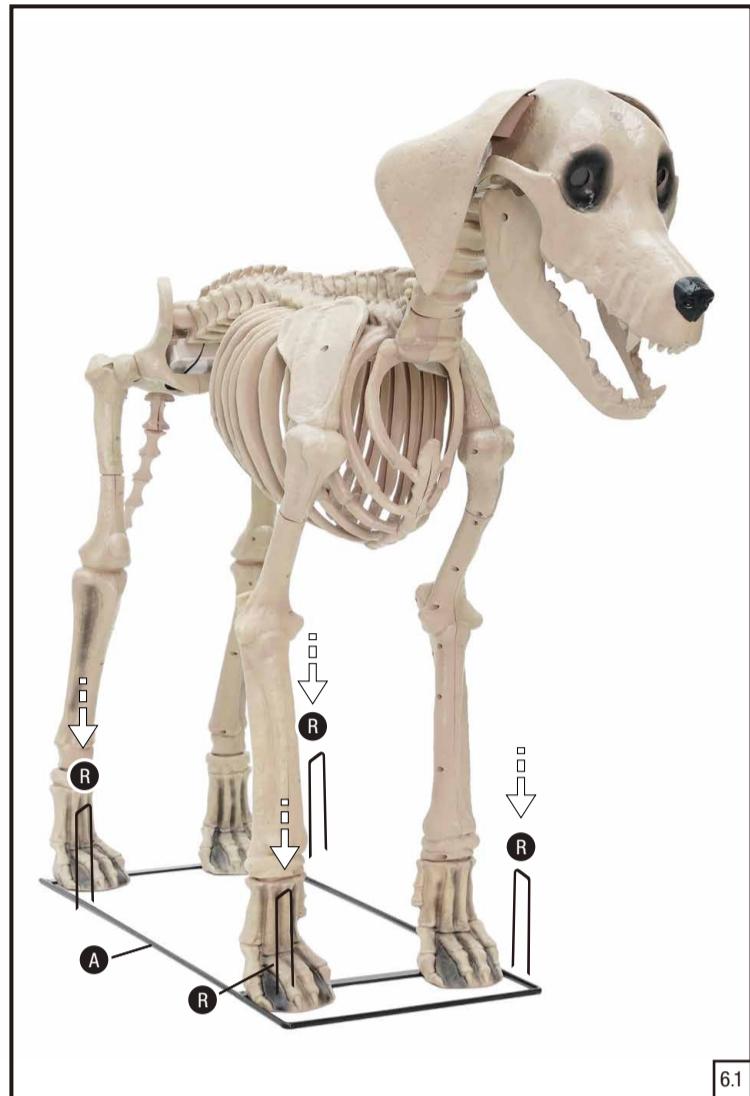

NOTE: The 7 ft Skelly's Dog with LifeEyes LCD Eyes has 3 different function settings (ON, TIMER and OFF) and 8 different Eye Options (MODES) to choose from - see images on box.


Settings and Eye options can be controlled at the Control Panel or by using the Remote Control.

Timer setting is only available on the control panel on the Lower Body (K).

OPERATION INSTRUCTIONS - CONTROL BOX:


The 7 ft Skelly's Dog with LifeEyes LCD Eyes can either be powered by an adapter or batteries. Plug the power adapter into a standard power outlet or insert 4 x 1.5V C batteries into the battery box. To turn on the 7 ft Skelly's Dog with LifeEyes LCD Eyes, press the button on the Lower Body (K) once. Press the button again to switch to the Timer setting. Press the same button a third time to turn the item Off.

Button	Function Description
1 ON / MARCHE / ENCENDER	Press power button once to activate the LCD eyes indefinitely until the settings are changed.
2 TIMER / MINUTEUR / TEMPORIZADOR	Press the power button a second time to activate Timer Mode. In this mode, the LCD eyes and LEDs will stay on for 6 hours and then turn off for 18 hours. This cycle will repeat indefinitely until the settings are changed.
3 OFF / ARRÊT / APAGAR	Press power button a third time to turn LCD eyes OFF.
4 MODE/ MODE/ MODO	Mode button toggles through 8 LCD eye options.

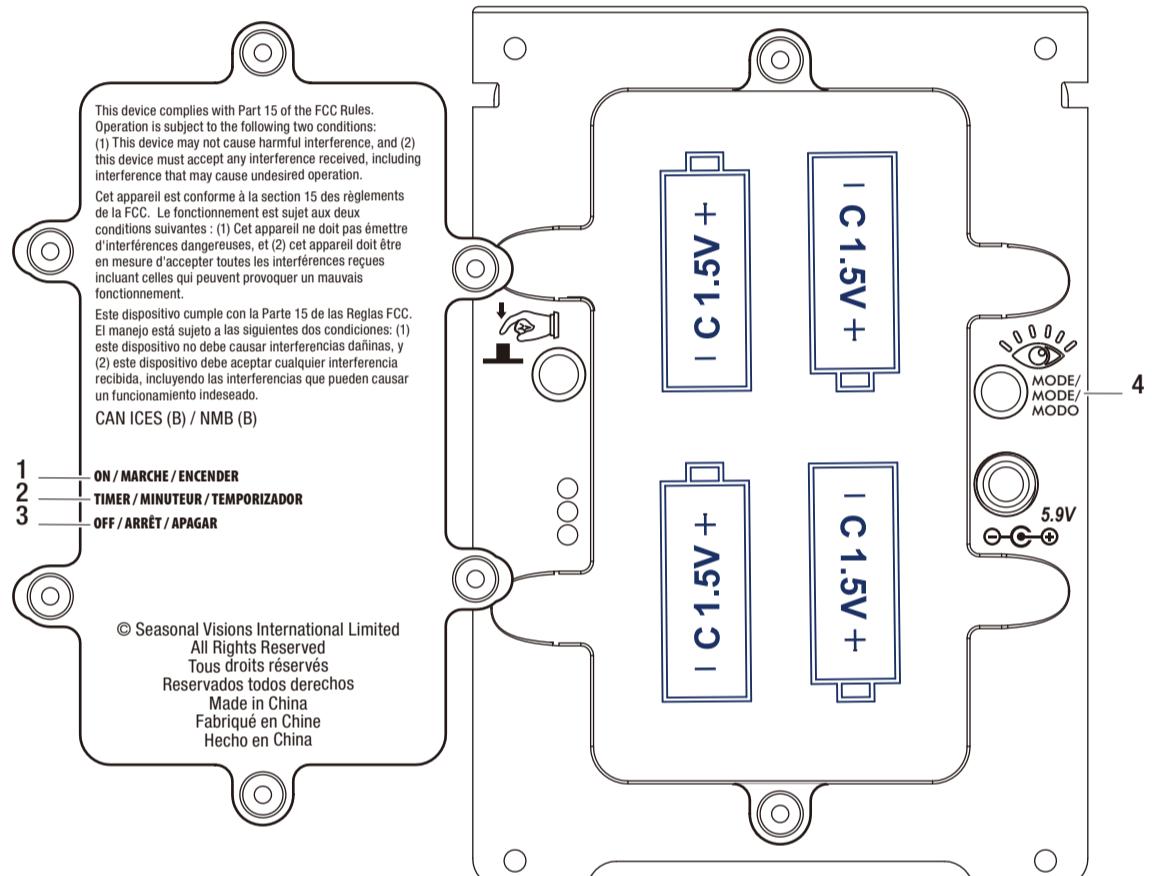

This Remote Control allows one to change the settings of the 7 ft Skelly's Dog with LifeEyes LCD Eyes from up to 20 ft away. The Remote Control has an indicator light that lets you know if it's working.

Button	Function Description
1 ON • OFF / MARCHE • ARRÊT / ENCENDER • APAGAR	This button turns the 7 ft Skelly's Dog with LifeEyes LCD Eyes on and off.
2 MODE/ MODE/ MODO	This button toggles through the 8 different LCD eye displays for the 7 ft Skelly's Dog with LifeEyes LCD Eyes.

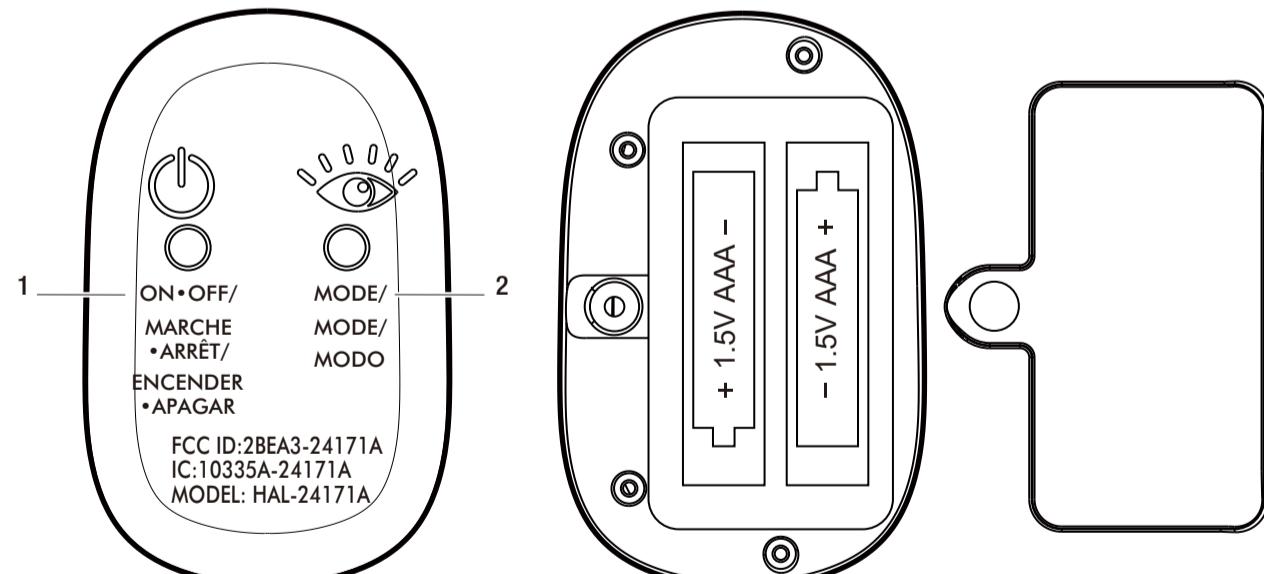

NOTE: Timer setting can only be chosen from the 7 ft Skelly's Dog with LifeEyes LCD Eyes Control Panel, not with Remote Control.

NOTE: Requires 2 x 1.5V AAA batteries (Included).

* You will need a small Phillips head screwdriver (Not included).

Locate the battery compartment on the product. Remove the battery compartment cover by using a small Phillips head screwdriver to unscrew the screw. After removing or installing the batteries, place the battery compartment cover into position, and secure the battery cover. If Skelly Dog is being stored while not in use, please remove battery in Remote Control.

CARE AND STORAGE INSTRUCTIONS

When not in use, store this product in its original packing. Keep away from heat and moisture.

NOTE: When not in use, store this product in its original packing. Keep away from heat and moisture. Remove batteries from Remote Control.

BATTERY WARNING:

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation. Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

Don't climb or pull on product.
 Do not add to or modify unless accessory is designed for product
 Assemble and place the product on level surfaces only.
 Don't push or tilt product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage.
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES (B) / NMB (B)

IMPORTANT TIPS:

- Ensure that the item's adapter is plugged in at the Function Control Box and in the wall.
- Ensure that the prop is on the desired setting.
- If not functioning properly (ex: LCD eyes don't light up), ensure that cables are connected to their corresponding cable as shown in the instruction sheet. Be sure nothing is blocking movement or caught in moving parts.
- If the LCD eyes are not responding to the remote, ensure that you are within a 20 ft range of the Skelly Dog and that the remote has fresh batteries (2 x 1.5 AAA).
- Ensure that the floor or surface that the item sits on is flat and level. IF ANY PART IS MISSING OR BROKEN, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CALL HOME ACCENTS HOLIDAY CUSTOMER SERVICE FROM MON-FRI 8:00AM TO 7:00PM AND SAT 9:00 AM TO 6:00 PM EST AT 1-855-HDHOLIDAY (1-855-434-6543).
- If the item still does not work, contact SVI Customer Service from 8:30am to 5:30pm PST at 1-855-428-3921, email customerservice@svius.com, or call Home Accents Holiday Customer Service from Mon-Fri 8:00am to 7:00pm and Sat 9:00 am To 6:00 pm EST at 1-855-HDHOLIDAY (1-855-434-6543).

Questions, problems, missing parts? Before returning to the store, Please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)

HOMEDEPOT.COM