
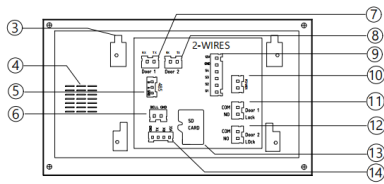


IP Video Intercom System - Villa Kit

SKY-IP-M75T-TUYA-2W/SKY-IP-P4-2W

Indoor Monitor



Indoor Monitor

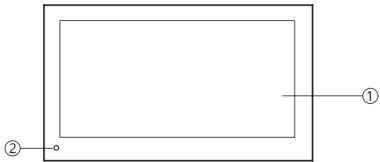

- ① Screen
- ② Microphone
- ③ Bracket Slot
- ④ Speaker
- ⑤ 485/B A GND
- ⑥ BELL GND
- ⑦ DOOR 1 / RX TX
- ⑧ DOOR 2 / RX TX
- ⑨ 12V GND S4 S3 S2 S1
- ⑩ Unpolar Input
- ⑪ DOOR 1 LOCK / COM NO
- ⑫ DOOR 2 LOCK / COM NO
- ⑬ SD CARD
- ⑭ GND TX RX VCC

Call Panel


Outdoor Station

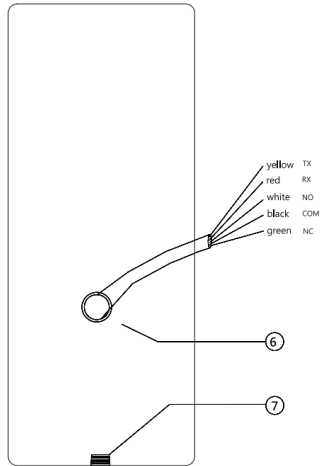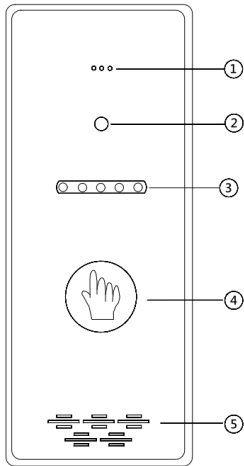

- ① Microphone
- ② Camera
- ③ Supplement Lamp
- ④ Call
- ⑤ Speaker
- ⑥ TX RX NO COM NC
- ⑦ Lower Screw Hole

Installation


Monitor

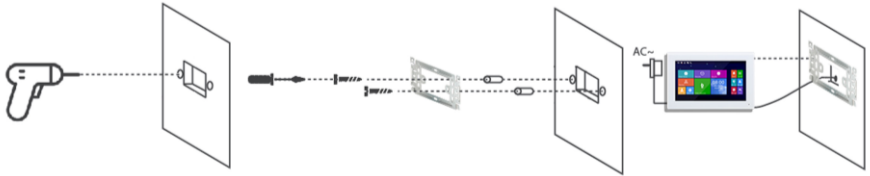


Call panel



Wiring Diagram(1 to 2)

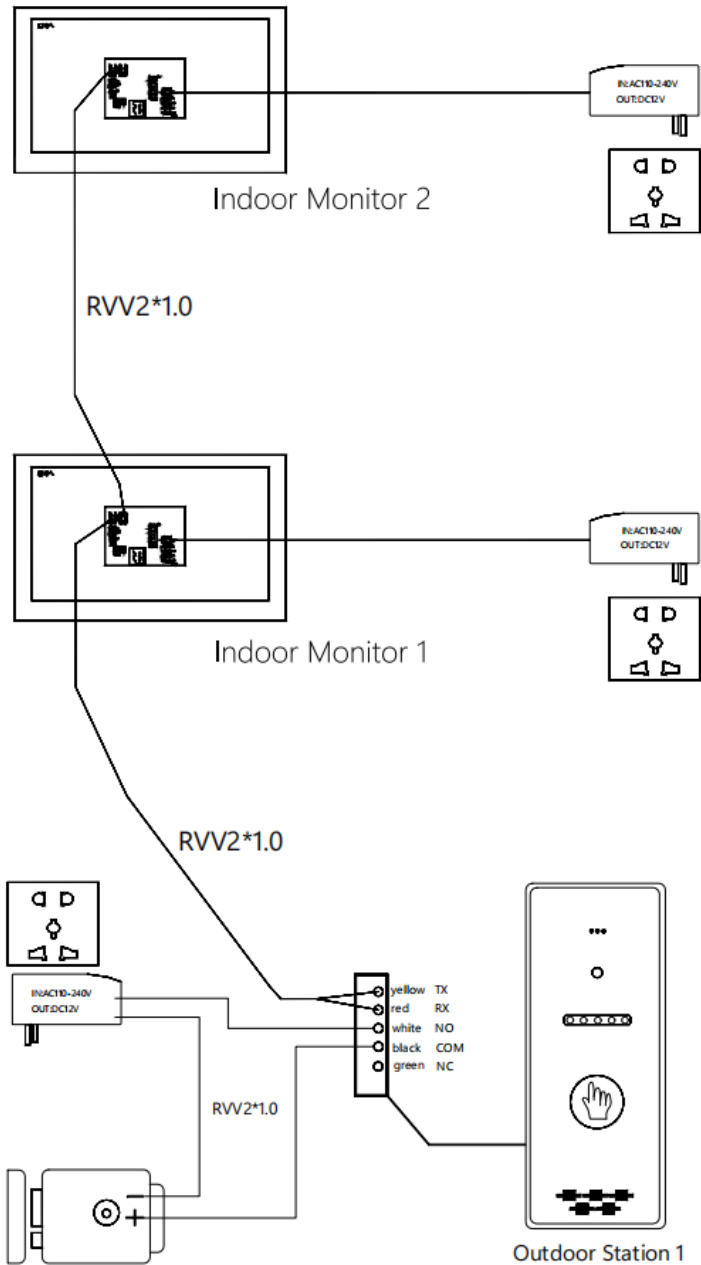

Wiring Diagram(2 to 1)

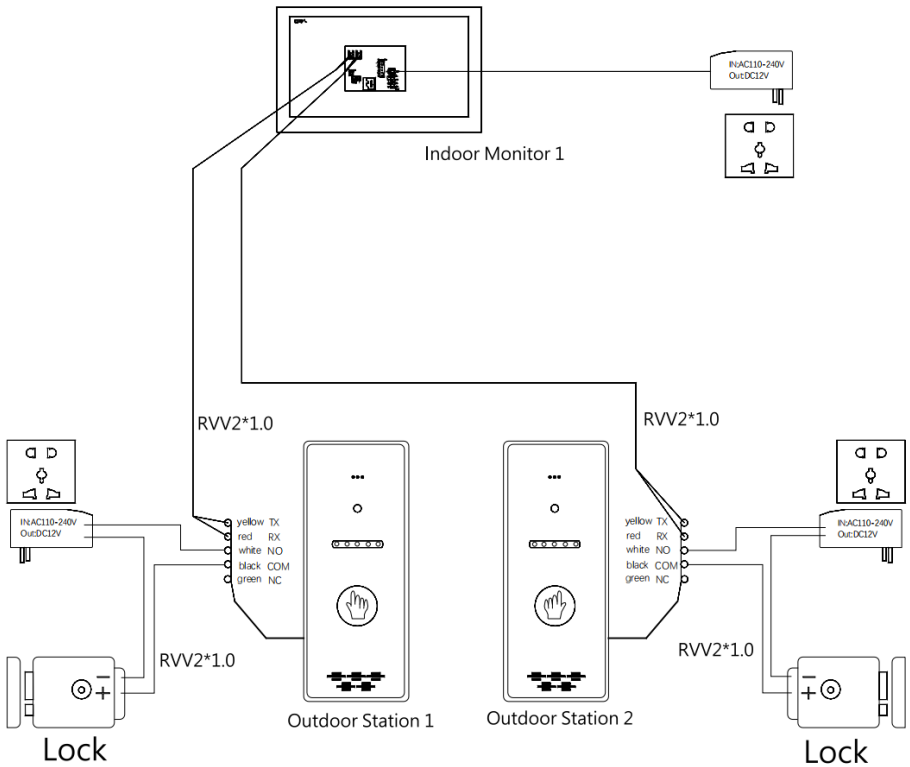

Features

Touch Screen

Video conference call

Wi-Fi Connection

Support Tuya APP

Remote unlocking

User friendly GUI

Wide angle HD camera

White light LED for night vision

Support photos and videos

Support multiple call panels

Support multiple monitors

16 ringtones



TuyaAPP Adding and Connect

Mobile phone TuyaAPP Settings:



1. the mobile phone should connect to the same WiFi as the monitor.

Then download “Tuya Smart” or “Smart Life-Smart Living” from Google Play or APP Store.

2.open the software and click “Add Device”, and the app will search and pare device.

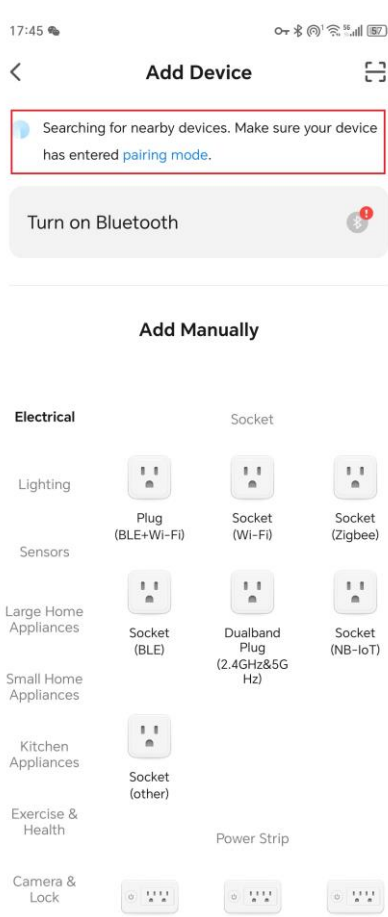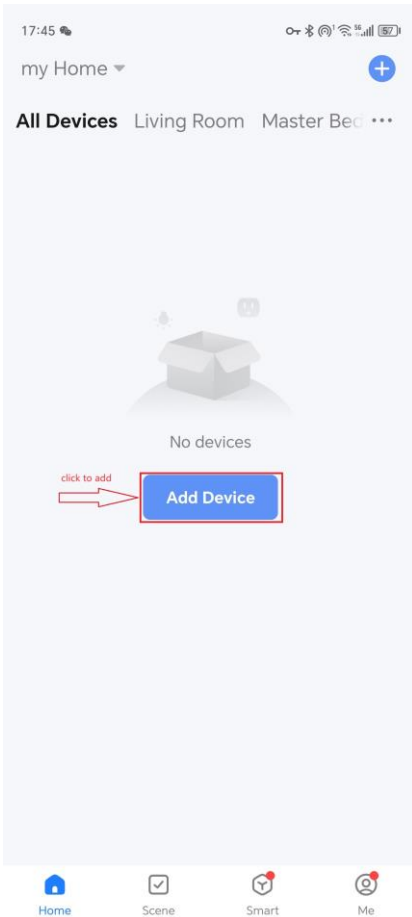



3. When the WiFi monitor device is found, press “Add”. And the device is adding.

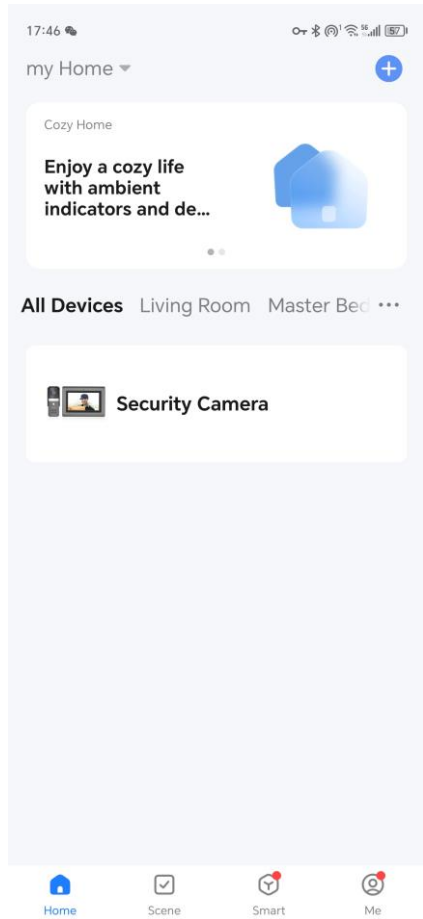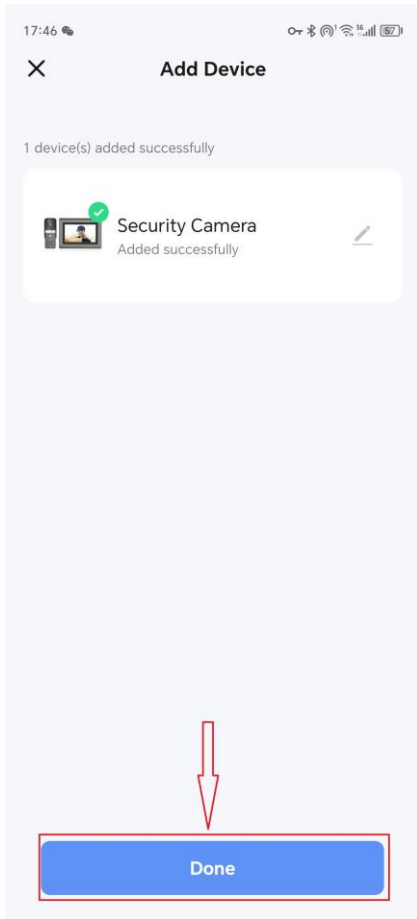



How to Share to Other Users

An easy way is to log in to your account on the app on other family members' phones. Another option is to add their account on your APP.

1. Found "Me" ----enter the "Home Management".

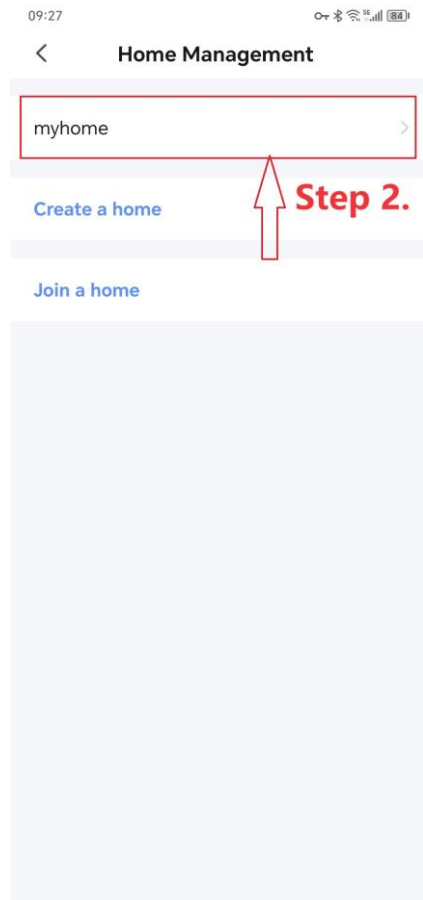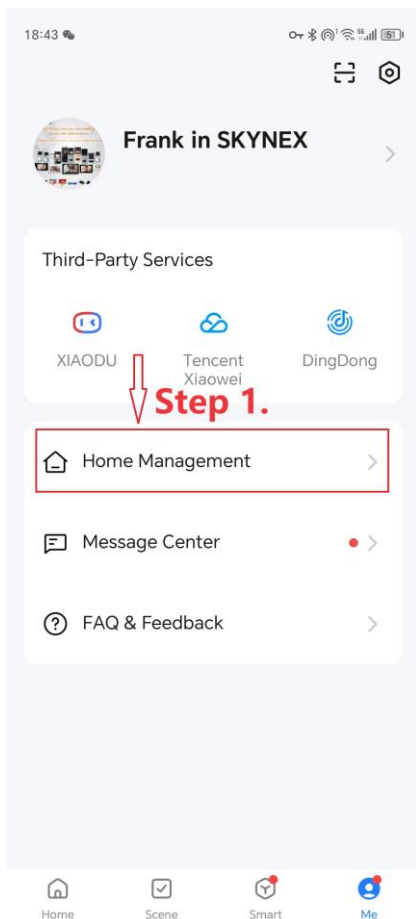

2. Then it might want you to "Complete Home Information", if you don't use Tuya or Smart Life before. Just name this family group like "myhome". And in "Home Settings", add family members.

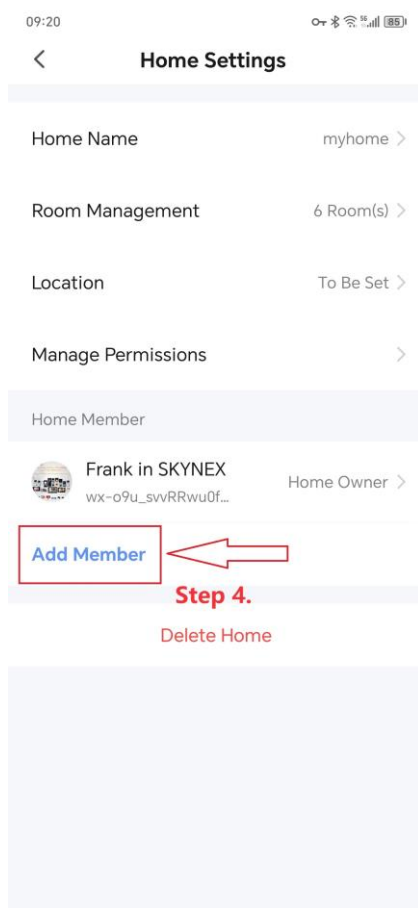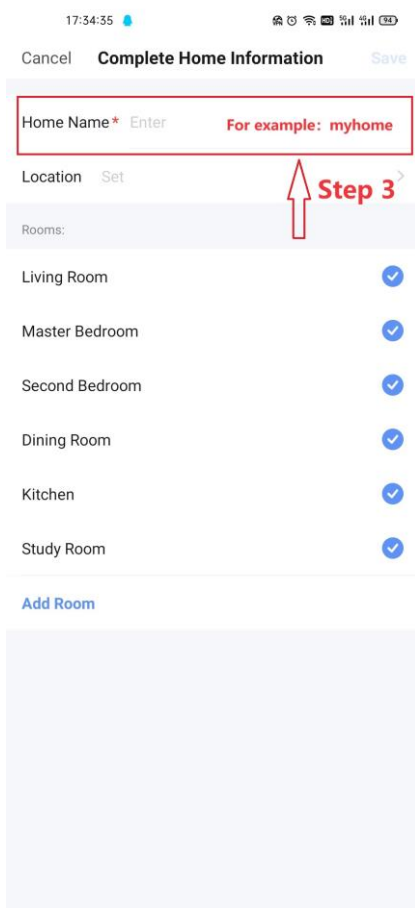

3. Enter the name of the member to be added and his registered account (telephone or email). Remember to save, and this member is added successfully.

09:25 Remember to Save

Cancel **Add Member** **Save**

Name of member to be added

Name Juan

Region China >

Account 18450050175
Member registration
account(telephone or email)
Only after accepting the invitation will the account owner become a family member and be able to use relevant functions.

Family Role Common Member >

09:24

< **Home Settings**


Home Name myhome >


Room Management 6 Room(s) >

Location To Be Set >

Manage Permissions >

Home Member

 Frank in SKYNEX Home Owner >
wx-o9u_svvRRwu0f...

 Juan Common Member >
Waiting to join...

Add Member

Delete Home

Specification

Monitor

Display: 7 inch LCD 1024*600

Power: DC 12-24V

Storage Temperature: -40°C~70°C

Operating Temperature:-20°C~55°C

Outline Dimensions: 230*145*26mm

Call Panel

Camera: 1080P

Viewing Angle: 100°

Power: DC 12-24V from monitor

Storage Temperature: -40°C~70°C

Operating Temperature:-20°C~60°C

Outline Dimensions: 128*54*40mm

Operations

Video Conference Call

To call the monitor, press the button on call panel. Then, the monitor shows image of the call panel. Touch the buttons shown on the screen to answer or hung up or unlock the door.

Monitor

- To monitor call panel, touch the monitor button on the screen.
- Touch call panel name to switch between call panels.
- Touch photo or video button to record manually.
- Touch sound button to adjust volume.
- Touch unlock button to unlock the door.
- Touch MIC button to mute.
- Touch hang up button to finish monitoring.

Photo and Video

- When call panel calls the monitor, monitor will take a photo or a video automatically according to record settings.
- While monitoring, touch the snapshot button to take a picture.
- To check records, touch the photo or video on the screen.

Setting

Ringtone	Set ringtones for each call panel.
Record	Set auto record type, photo or video.
Date&Time	Set date and time.
Turn Off Screen	Set screen off time.
Delete	Delete all photo or video.
Language	Set language.
Format TF Card	Format storage card.
Information	Check monitor information. Scan the QR code to bind Tuya Cellphone APP
WLAN	Connect Wi-Fi
Reset	Restore factory settings.

Bind with Tuya App

- Connect** the monitor to your Wi-Fi. Be sure that your cell phone is connected to the same Wi-Fi.
- Download Tuya APP and run it.
- Follow the Tuya Instructions to turn on your cell phone **Bluetooth** and bind with the monitor.
- Wait till connection established **successfully**.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.