 


70*90mm
正反面、对折页

正面

Portable pedestal fan
User's Manual

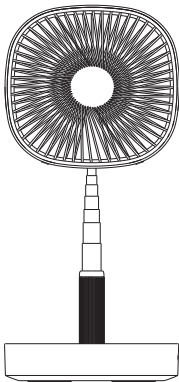


Please keep the instruction manual and its product accessories in order to enjoy better service

Respected user:
Thank you very much for using this retractable remote control fan. Please read this manual carefully before use, and use it properly to use the superior performance of the product. The appearance of this fan is stylish and gorgeous. The folded storage can save space, so you can use it at home, outdoor travel and business work to enjoy cool anytime, anywhere!

Product Parameters:	
Name:	Portable pedestal fan
Model:	Portable pedestal fan pink
Material:	Aluminum alloy & ABS plastic
Cell model:	3.7V 7200mAh
Product size:	205 * 205 * 1020mm (folded)
	205 * 205 * 1020mm (stretched)
Working time:	About 5 ~ 24 hours
Charging time:	About 5 hours
Noise decibel:	About 30 ~ 40db
Discharge power:	1.3 ~ 4.8W
Charging current:	2A
Charging voltage:	DC5V
Working wind speed:	2.3 ~ 4.0m / s

 
Accessories:
The fan contains the following accessories:



- Function keys and description
- Gear indicator: There are 4 gears for the fan, 1 for gentle wind, 2 for medium wind, 3 for strong wind, 4 for natural wind, and 4 indicators for 4 gears
 - Battery indicator: When the fan is used and turned off, the battery indicator will light up. The four lamps (color is white) correspond to about 25% / 50% / 75% / 100% of the power in sequence. Approximately fully charged. When the fan is charging, the power indicator lights will turn on one by one, and depending on the battery's current power situation, all four lights will light up to indicate that the battery is fully charged. Short press the power button of the remote control to check the power, long press the power button of the host for 2 seconds to check the power.
 - Fan switch: When the fan is off, turn on the fan switch in order of 1,2,3,4, 1st for gentle wind, 2nd for medium wind, 3rd for strong wind, 4th for natural wind, press the switch again in 4th state The fan is turned off and cycled in turn. In any gear, press and hold the fan switch for two seconds to turn it off
 - Timing switch and indicator: When the fan is on, turn on the timing switch, and you can set the corresponding time according to your needs. The corresponding timing indicator will light up (such as timing for 4 hours, the timing indicators will all light up), and cycle. When the timer function is on, the timer indicator lights up to indicate the remaining time of the timer (if two timer lamps are on, it means that the fan will turn off after about 1 to 2 hours).
 - Type-c charging port: This charging port is an international universal type-c interface with a standard input voltage of 5v. Do not use other types of charging cables to charge the fan.
 - Mobile power function: This fan has a mobile power function, which can be used for emergency charging of mobile phones and other electronic equipment. The discharge current is about 2A.

反面

 Product icon:

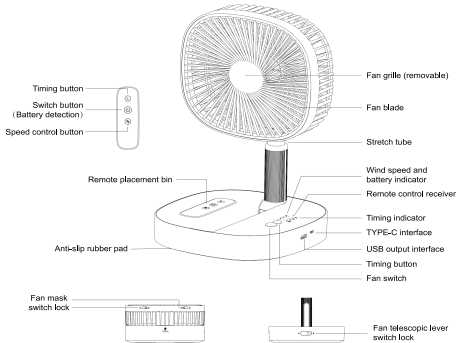

Precautions:

- Please use the machine as instructed in the manual, otherwise accidents such as fire or electric shock may occur;
- Do not place the product on a high place and on an uneven table or floor to prevent the product from falling and being damaged;
- When using the remote control function, the distance from the host is about 2.5 meters, and point at the receiving head of the host;
- Do not use a power supply that exceeds the load of the product, which will cause the product to heat up and damage the circuit board;
- This fan battery is built-in and cannot be removed. Do not disassemble the battery at will to avoid danger;
- When the fan is running, do not insert fingers, pencils, hard objects, or any other slender objects into the machine through the net cover;
- Do not bury or throw this product, so as not to cause internal failure of the product;
- Do not expose this product to rain or humid environment;
- Do not disassemble, repair and modify this product by yourself;
- Unauthorized disassembly will invalidate the warranty.

Warning: This product is not suitable for children 6 years of age and younger to operate alone.
The explanation right of this manual belongs to our company

After-sales service description:

Warranty period
The warranty period of this product is valid for 12 months from the date of purchase.

Free service
During the product warranty period, for any failure caused by the quality of the product, please contact the manufacturer or dealer customer service with this voucher. To enjoy free warranty service.

- The following conditions are not free of charge
- The product has more than three guarantees;
 - No Three Guarantees certificate or damaged product label;
 - Failure to use according to the instructions or damage caused by using non-original accessories
 - Disassembly, repair and damage caused by yourself;
 - Malfunction caused by water ingress or fall, and man-made mechanical damage;
 - Malfunction or damage caused by force majeure;
 - Counterfeit and shoddy products purchased through informal channels.

Warranty Card

Product number:
Date of purchase:
Invoice date:
Telephone:
Customer name:
Postal code:

- FCC Requirement :
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.